


Service Manual

LCD Projector

PT-AE2000U
PT-AE2000E

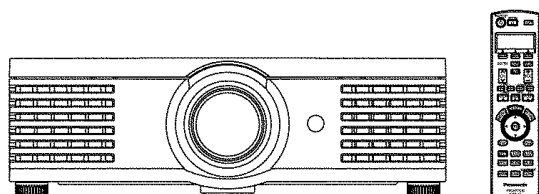

The service technician is required to read and follow the "Safety Precautions" and "Important Safety Notice" in this service manual.

Specifications

Power supply:

100 V - 240 V AC, 50 Hz / 60 Hz

Power consumption:

240W

[During standby (when fan is stopped): 0.08 W]

Amps:

2.8 A - 1.2 A

LCD panel:

Panel size (diagonal): 0.74 type (17.78 mm)

Aspect ratio: 16:9

Display method: 3 transparent LCD panels (RGB)

Drive method: Active matrix method

Pixels: 2 073 600 (1 980 × 1 080) × 3 panels

Lens:

Manual zoom (2x) / Manual focus

F 1.9 - 3.2, f 22.4 mm - 44.8 mm

Lamp:

UHM lamp (165 W)

Luminosity:

1 500 lm

Scanning frequency (for RGB signals):

Horizontal scanning frequency: 30 kHz - 70 kHz

Vertical scanning frequency: 50 Hz - 85 Hz

Dot clock frequency: 150 MHz or less

COMPONENT (YP_BPR) signals:

525i (480i), 525p (480p), 625i (576i), 625p (576p),

750 (720)/50p, 750 (720)/60p, 1 125 (1 080)/50i,

1 125 (1 080)/60i, 1 125 (1 080)/50p,

1 125 (1 080)/60p, 1 125 (1 080)/24p,

Color system:

7 (NTSC / NTSC 4.43 / PAL / PAL-M / PAL-N / PAL60/ SECAM)

Projection size:

1 016 mm - 5 080 mm

Throw distance:

1.2 m - 12 m

Screen aspect ratio:

16:9

Installation:

FRONT/DESK, FRONT/CEILING, REAR/DESK,
REAR/CEILING (Menu selection method)

Connectors:

S-VIDEO IN: Single-line, Mini DIN 4-pin
Y: 1.0 V [p-p], C: 0.286 V [p-p], 75 Ω,

VIDEO IN: Single-line, RCA pin jack
1.0 V [p-p], 75 Ω

COMPUTER IN:

RGB: Single-line, D-sub HD 15-pin (female)
Selectable for input and output by menu operation.

R.G.B: 0.7V [p-p], 75Ω

G.SYNC: 1.0 V [p-p], 75Ω

HD/SYNC: TTL high impedance, automatic positive/negative polarity compatible

VD: TTL high impedance, automatic positive/negative polarity compatible

COMPONENT IN :

Y, P_B/C_B, P_R/C_R : Signal-line, RCA pin jack × 3

Y: 1.0 V [p-p] (Including sync), 75Ω

P_B / C_B, (P_R / C_R): 0.7 V [p-p], 75Ω

HDMI IN :

Triple-line, 19-pin HDMI connector

SERIAL: D-sub 9-pin RS-232C compatible

Cabinet:

Molded plastic (PC+ABS)

Dimensions:

Width: 460 mm

Height: 130 mm

Length: 300 mm

Weight:

7.2 kg

Operating environment:

Temperature: 0° C - 40° C

(When "ALTITUDE" is set to "HIGH": 0° C - 35° C)

Humidity: 20 % - 80 % (no condensation)

Certifications:

PT-AE2000U: UL60950-1, C-UL, FCC Class B, ICES-003

PT-AE2000E: EN60950-1, EN55022, EN61000-3-2,
EN61000-3-3, EN55024

<Remote control unit>

Power supply:

3 V DC (AA battery × 2)

Operating range:

Approx. 7 m

(when operated directly in front of signal receptor)

Weight:

170 g (including batteries)

Dimensions:

Width: 52 mm

Height: 28.5 mm

(Not including surface projection parts)

Length: 200 mm

Accessories:

Remote control unit (EUR7914Z60): 1

AA batteries for remote control unit (× 2): 1

Power cord: **PT-AE2000U:** K2CG3FZ00008 1

(3 m) **PT-AE2000E:** K2CT3FZ00003 (U.K) 1

: K2CM3FZ00003 1

(continental)

Lens cover (TXFKK01VKF5): 1

Safety cable (TTRA0141): 1

Options:

Ceiling bracket: ET-PKE2000

Ceiling bracket: ET-PKE1000S

(for low ceilings)

Projection Screen: ET-SRW90CC

Cable cover: ET-PCE2000

Cables: ET-SC10CP (RCA pin jack x 3 - RCA pin jack x 3)

ET-SC10DT (RCA pin jack x 3 - D-Terminal)

• Specifications are subject to change without notice.

• Weight and dimensions shown are approximate.

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

Trademark Acknowledgements

- VGA and XGA are trademarks of International Business Machines Corporation.
 - S-VGA is a registered trademark of the Video Electronics Standards Association.
 - HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.
 - The font used in the on-screen displays is a Ricoh bitmap font, which is manufactured and sold by Ricoh Company, Ltd.
- All other trademarks are the property of the various trademark owners.

Precaution

If using this projector at high elevations (above 1 400 m), set the ALTITUDE to HIGH. (Refer to "Option settings" in Operating Instructions.)

Failure to observe this may cause malfunctions.

Never use this projector at an elevation of 2 700 m or higher.

Using this projector at high elevations, consult your dealer or Authorized Service Center about preparations.

Note

This projector has the demonstration mode that aims at the effect of the display in the shop. When Panasonic logo and the model name (PT-AE2000*) are displayed, and they go round the four corners of the screen while slowly blinking, the projector is in the demonstration mode. If it is in the demonstration mode, cancel it before returning the customer the projector by the following methods.

Press "RETURN" button on the main unit or remote control unit 3 seconds or longer.

About lead free solder (PbF)


This projector is using the P.C.Board which applies lead free solder. The use of lead free solder is recommended from the standpoint of antipollution for the global environment in service.

Notes:

- Lead free solder: Sn-Ag-Cu (tin, silver and copper) has a higher melting point (approx. 217°C) than standard solder. Typically, the melting point is 30°C to 40°C higher. When servicing, use a high temperature soldering iron with temperature limitation function and set it to 370±10°C.
- Be precautions about lead free solder: Sn-Ag-Cu (tin, silver and copper) will tend to splash when heated too high (approx. 600°C or higher).
- Use lead free solder for the P.C.Board (specified on it as "PbF") which uses lead free solder. (When you unavoidably use lead solder, use lead solder after removing lead free solder. Or be sure to heat the lead free solder until it melts completely, before applying lead solder.)
- After soldering to double layered P.C.Boards, check the component side for excess solder which may flow onto the opposite side.

About the identification of the lead free solder P.C.Board

For the P.C.Board which applies lead free solder, the symbol as shown in the figure below is printed or stamped on the surface or the back of P.C.Board.



For US

IMPORTANT SAFETY NOTICE

There are special parts used in Panasonic LCD Projectors which are important for safety. These parts are shaded on the schematic diagram. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire, or other hazards. Do not modify the original design without permission of PANASONIC BROADCAST & TELEVISION SYSTEMS COMPANY.

WARNING:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Any unauthorized changes or modifications to this equipment will void the users authority to operate.

CONTENTS

	Page		Page
1 Safety Precautions	5	6.16. Removal of Iris Unit	23
1.1. General Guidelines	5	7 Measurement and Adjustments	24
1.2. Leakage Current Check	5	7.1. Adjustment Procedure Flowchart	24
1.3. UV Precaution and UHM Lamp Precautions	5	7.2. Cautions for Adjustment	24
2 Ext Option	6	7.3. Setting Before Adjustment	24
2.1. Procedure to enter EXT OPTION	6	7.4. Lighting Area Adjustment	24
2.2. EXT OPTION Menu and Functions	6	7.5. Software for Adjustment	26
2.3. Canceling EXT OPTION	6	7.6. Flicker Adjustment	29
3 Self-Check Mode	7	7.7. Input Level Adjustment (RGB)	30
3.1. Procedure to enter the self-check mode	7	8 Troubleshooting	31
3.2. Self Check Display and Contents	8	9 Interconnection Block Diagram	41
3.3. Canceling the self-check mode	9	9.1. Interconnection Block Diagram (1/2)	41
4 Flicker Adjustment Mode	9	9.2. Interconnection Block Diagram (2/2)	42
4.1. Procedure to enter the adjustment mode	9	10 Block Diagram	43
4.2. Adjustment Display and Contents	9	10.1. Power Supply	43
4.3. Canceling the flicker adjustment mode	9	10.2. Signal Processing (1/3)	44
5 Using the SERIAL Connector	10	10.3. Signal Processing (2/3)	45
5.1. Connection	10	10.4. Signal Processing (3/3)	46
5.2. Pin Layout and Signal Names for SERIAL Connector	10	11 Schematic Diagram	47
5.3. Communication Settings	10	11.1. A-P.C.Board (1/8)	48
5.4. Basic Format	11	11.2. A-P.C.Board (2/8)	49
5.5. Control / Query Commands	11	11.3. A-P.C.Board (3/8)	50
5.6. Communication Cable Specifications	13	11.4. A-P.C.Board (4/8)	51
5.7. Signal Selector Connecting Cable Specifications	13	11.5. A-P.C.Board (5/8)	52
6 Disassembly Instructions	14	11.6. A-P.C.Board (6/8)	53
6.1. Printed Circuit Board and Main Parts Location	15	11.7. A-P.C.Board (7/8)	54
6.2. Removal of Upper Case	16	11.8. A-P.C.Board (8/8)	55
6.3. Removal of A-P.C.Board	16	11.9. K1-P.C.Board, K2-P.C.Board	56
6.4. Removal of K1-P.C.Board	17	11.10. S-P.C.Board, R-P.C.Board	57
6.5. Removal of R-P.C.Board	17	11.11. V-P.C.Board, H-P.C.Board, M1-P.C.Board, M2-P.C.Board	58
6.6. Removal of S-P.C.Board	18	11.12. B-Module (1/2)	59
6.7. Removal of V-P.C.Board	18	11.13. B-Module (2/2)	60
6.8. Removal of B/Q-Module	18	12 Circuit Boards	61
6.9. Removal of P-Module	19	12.1. A-P.C.Board (Foil Side)	61
6.10. Removal of Lamp Unit	20	12.2. A-P.C.Board (Component Side)	62
6.11. Removal of Analysis Block	20	12.3. V-P.C.Board	63
6.12. Removal of LCD Block / Projection Lens	21	13 Terminal guide of ICs and transistors	65
6.13. Replacement of Phase Difference Board	21	14 Exploded Views	66
6.14. Replacement of Incidence Polarizer	22	15 Replacement Parts List	70
6.15. Replacement of PBS Array (Analysis Block)	22		

1 Safety Precautions

1.1. General Guidelines

- For continued safety, no modification of any circuit must be attempted.
- Unplug the power cord from the power outlet before disassembling this projector.
- Use correctly the supplied power cord and must ground it.
- It is advisable to use an isolation transformer in the AC power line before the service.
- Be careful not to touch the rotation part (cooling fan, etc.) of this projector when you service with the upper case removed and the power supply turned ON.
- Observe the original lead dress during the service. If a short circuit is found, replace all the parts overheated or damaged by the short circuit.
- After the service, all the protective devices such as insulation barriers, insulation papers, shields, and isolation R-C combinations must be properly installed.
- After the service, check the leakage current to prevent the customer from getting an electric shock.

1.2. Leakage Current Check

1. Prepare the measuring circuit as shown in Fig.1.

Be sure to use a voltmeter having the performance described in Table 1.

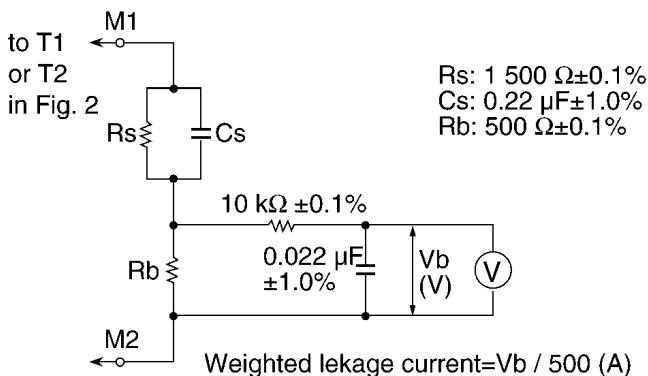


Fig. 1

	Performance
Voltmeter (rms reading)	Accuracy: $\leq 2\%$
	Input resistance: $\geq 1 \text{ M}\Omega$
	Input capacitance: $\leq 200 \text{ pF}$
	Frequency range: 15 Hz to 1 MHz

Table 1

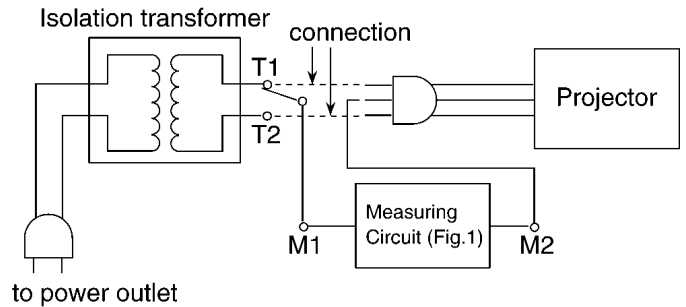


Fig. 2

2. Assemble the circuit as shown in Fig. 2. Plug the power cord in a power outlet.
3. Connect M1 to T1 according to Fig. 2 and measure the voltage.
4. Change the connection of M1 from T1 to T2 and measure the voltage again.
5. The voltmeter must read 0.375 V or lower in both of steps 3 and 4. This means that the current must be 0.75 mA or less.
6. If the reading is out of the above standard, the projector must be repaired and rechecked before returning to the customer because of a possibility of an electric shock.

1.3. UV Precaution and UHM Lamp Precautions

- Be sure to unplug the power cord from the power outlet when replacing the lamp.
- Because the lamp reaches a very high temperature during its operation, wait until it cools completely when replacing the Lamp Unit.
- The lamp emits small amounts of UV-radiation, avoid direct-eye contact with the light.
- The lamp unit has high internal pressure. If improperly handled, explosion might result.
- Because the high pressure lamp involves a risk of failure, never touch the lamp wire lead during the service. (See Fig. 3)

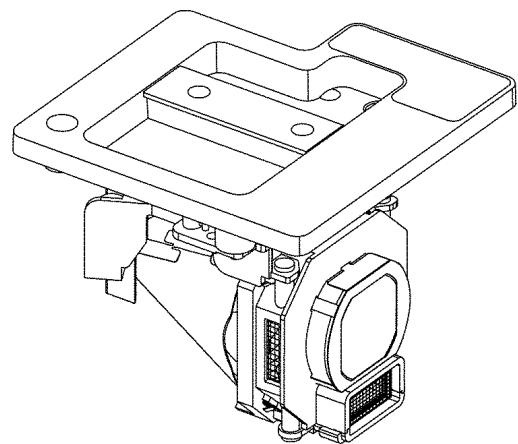


Fig.3

2 Ext Option

This projector has EXT OPTION in addition to standard on-screen menus.

- There are SELF CHECK and FLICKER ADJUST for service, etc.

2.1. Procedure to enter EXT OPTION

1. When the projector is power ON, press "POWER" button on the main unit or remote control unit to display "POWER OFF" confirmation screen.
2. Press the right-arrow " ► " button to select "CANCEL" in the "POWER OFF" confirmation screen.
3. On the main unit or remote control unit, press the buttons in order of up-arrow " ▲ ", down-arrow " ▼ ", up-arrow " ▲ ", down-arrow " ▼ " and "ENTER".

(When the "ENTER" button is pressed, "EXT OPTION" menu is displayed.)

2.2. EXT OPTION Menu and Functions

EXT OPTION	
FAN FULLMODE	OFF / ON
AUTO SETUP	NORMAL / SPECIAL
SELF CHECK	
FLICKER ADJUST	
525i SD	OFF / ON
OS	OFF / ON
HPLL	OFF / ON

• FAN FULLMODE

Setting the cooling fan motor rotation speed

- Switching ON "FAN FULLMODE", the rotation level of the fan becomes high-speed rotation (fixed). Moreover, when "FAN FULLMODE" is ON, changing "ALTITUDE" in OPTION becomes impossible (setting FAN FULLMODE is given priority more than ALTITUDE).

• AUTO SETUP

Setting AUTO SETUP mode

- NORMAL: To set the normal mode (the dot clock is adjusted strictly)
- SPECIAL: To set the special mode (the dot clock is adjusted roughly)

* Do not change the initial setting (NORMAL).

• SELF CHECK

To enter the self-check mode

• FLICKER ADJUST

To enter the flicker adjustment mode

• 525i SD

When non-standard signal of 525i/625i is inputted (AV amplifier, etc.), synchronization might be disordered according to connected equipment. In this case, set 525i SD to ON.

• OS

When a component signal (except 525i, 625i, 1125/60p and 1125/50p) is inputted, reflection noise (vertical striated beat) might be generated according to connected equipment. In this case, set OS to ON. However, the resolution decreases a little.

• HPLL

When non-standard signal of VIDEO/S-VIDEO is inputted (VTR, VHD, etc.), horizontal synchronization might be disordered according to connected equipment. In this case, set HPLL to OFF.

2.3. Canceling EXT OPTION

Press "MENU" button on the main unit or remote control unit.

3 Self-Check Mode

This mode is used to narrow down the location of the failure.

3.1. Procedure to enter the self-check mode

Select "SELF CHECK" on "EXT OPTION" menu and press "ENTER" button on the main unit or remote control unit.

3.2. Self Check Display and Contents

Display example

①	SELF CHECK			
②	MM: 1.00	F: 1.00	IM: 1.00	
③	XGA 60			
④	H ***.***KHz	G SAVED	OK	⑮
⑤	V ***.***Hz	U SAVED	OK	⑯
⑥	IRIS	OK	FAN	⑰
⑦	FAN1	OK	FAN2	⑱
⑧	FAN3	OK	FAN4	⑲
⑨	TEMP	OK		⑳
⑩	TEMP1	***	TEMP1	㉑
⑪	TEMP2	***	TEMP2	㉒
⑫	LAMP	OK	2000H	㉓
⑬	TOTAL	****H	RESET	㉔
⑭	****H**	****	****H**	
⑮	****H**	****	****H**	
⑯	****H**	****	****H**	

★ This display is an example and the display contents depend on the input signal mode.

- The result of items "G SAVED" and "U SAVED", "OK" is displayed for OK and "NG" is displayed for NG.
- The result of items "IRIS", "FAN", "FAN1", "FAN2", "FAN3", "FAN4", "TEMP", "LAMP" and "2000H", the OK display becomes red characters when shutting down because abnormality happened last time.

	Display Contents	Remarks
①	Microcomputer / FPGA / IRIS Control Microprocessor Software Version Display *1	Microcomputer (IC1010), FPGA (IC1032) and IRIS control microprocessor (IC1143) software versions are shown from the left.
②	Signal Name	Different display according to the input signal
③	Horizontal Signal Frequency	RGB or YPbPr (YCbCr) signal reception only
④	Vertical Signal Frequency	RGB or YPbPr (YCbCr) signal reception only
⑤	Iris Abnormality Check	It is distinguished whether the iris operates normally.
⑥	FAN1 Error Information	FAN1 (Power fan) Error
⑦	FAN3 Error Information	FAN3 (Intake fan) Error
⑧	Temperature Abnormality Check	Cause of Lamp Malfunction
⑨	Thermosensor 1 A/D conversion value (0 - 255) *2	Current temperature around the air outlet
⑩	Thermosensor 2 A/D conversion value (0 - 255) *2	Current temperature around the air inlet
⑪	Lamp Abnormality Check	Cause of Lamp Malfunction
⑫	Total Usage Time	Projector Cumulative Usage Time
⑬	Lamp ON - Cumulative Usage Time / Frequency / Cumulative Usage Time	Current
⑭		Second
⑮		First
⑯	Gamma Correction Data Check	It is distinguished whether gamma data is stored in the flash ROM.
⑰	Color Unevenness Correction Data Check	It is distinguished whether color unevenness correction data is stored in the flash ROM.
⑱	Fan Stop Check	Cause of Lamp Malfunction
⑲	FAN2 Error Information	FAN2 (Exhaust fan) Error
⑳	FAN4 Error Information	FAN4 (PBS fan) Error
㉑	Thermosensor 1 A/D conversion value (0 - 255) *2	Temperature around the air outlet when the last thermal shutdown occurs
㉒	Thermosensor 2 A/D conversion value (0 - 255) *2	Temperature around the air inlet when the last thermal shutdown occurs
㉓	Lamp - Judgment for Cumulative Usage more than 2 000 h *3	Judgment for Replacement Time of Lamp
㉔	Lamp - Reset Frequency of Cumulative Usage Time	Reset Frequency (0 - 255)

*1 FPGA (Field Programmable Gate Array)

LSI that is rewritable quickly while inspecting the program by system designer. (This will be able to reduce the development time.)

*2 When detected abnormal temperature (high temperature around the air inlet and/or outlet ports), TEMP indicator turned on. If arriving at the critical temperature, the power supply will shutdown automatically and the indicator will flash.

*3 Warning of the lamp cumulative usage time and shutdown use the conversion time for 165 W.

3.3. Canceling the self-check mode

Press "MENU" button on the main unit or remote control unit.

4 Flicker Adjustment Mode


If replacing the optical parts (LCD Panel / LCD block) or A-P.C.Board of this projector, enter the flicker adjustment mode and minimize the flicker.

4.1. Procedure to enter the adjustment mode

Select "FLICKER ADJUST" on "EXT OPTION" menu and press "ENTER" button on the main unit or remote control unit.

Note:

"DESK setting (red)" is displayed when entering the adjustment mode.

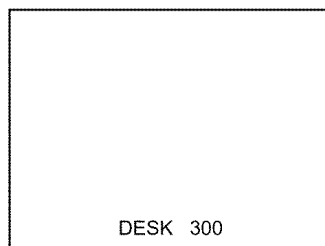

Adjustment Display when DESK setting

4.2. Adjustment Display and Contents

- Setting value is increased and decreased with the right-arrow " ► " and left-arrow " ◀ " buttons.
 - " ◀ ": Decrease, " ► ": Increase
 - Adjust the setting value to minimize the flicker on the screen.
 - Execute the adjustment by 6 patterns below.
- The pattern (adjustment display) is switched with the up-arrow " ▲ " and down-arrow " ▼ " buttons.
 - " ▲ ": Forward direction, " ▼ ": Reverse direction
 - There are 6 patterns of "DESK setting (red)", "DESK setting (blue)", "DESK setting (green)", "CEILING setting (red)", "CEILING setting (blue)" and "CEILING setting (green)".
 - The setting value is saved into this projector when the pattern is switched.

4.3. Canceling the flicker adjustment mode

Press "MENU" button on the main unit or remote control unit.

Note:

When "MENU" button is pressed, the setting value at that time is saved into this projector and the adjustment mode is canceled.


5 Using the SERIAL Connector

The serial connector which is on the back connector panel of the projector conforms to RS-232C standard. This projector can be controlled by a PC which is connected as shown in "5.1. Connection".

For controlling this projector by a PC, requires communication software on the market, and inputs control commands according to communication settings and basic format below.

5.1. Connection


〈Back connector panel of the projector〉

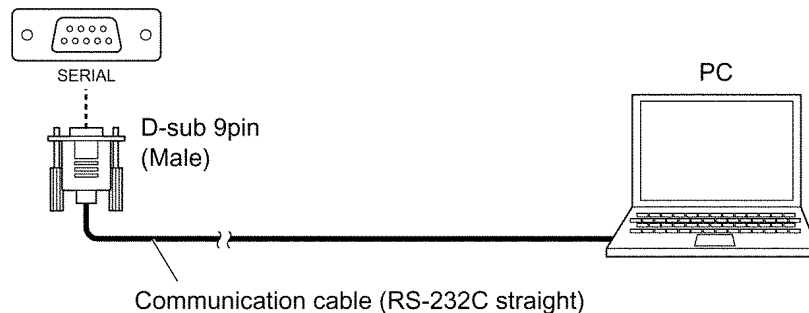

Note:

Use a proper communication cable which is suitable for the PC to connect SERIAL connector and the PC.

5.2. Pin Layout and Signal Names for SERIAL Connector

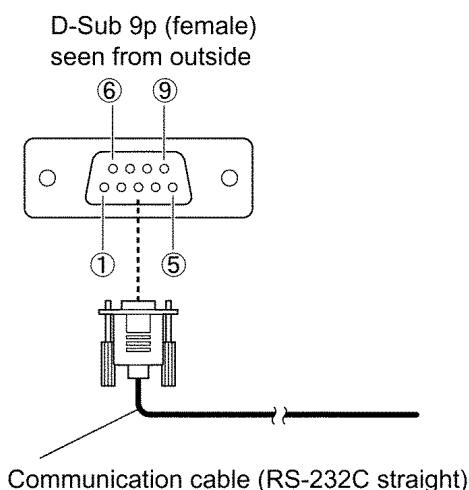


Pin No	Signal Name	Contents
1	---	NC
2	TXD	Transmit data
3	RXD	Receive data
4	---	NC
5	GND	Ground
6	DSR	Connected internally
7	CTS	
8	RTS	
9	---	NC

5.3. Communication Settings

Signal Level	Conforms to RS-232C standard	Contents	Description
Sync. method		Asynchronous	Synchronizes every 1 character (8 bits)
Baud rate		9 600 bps	Data transfer speed
Parity		None	Error detection method
Character length		8 bits	Number of bit composing 1 character
Stop bit		1 bit	Uses stop bit when asynchronous method
X parameter		Not used	
S parameter		Not used	

5.4. Basic Format

The data sent from the PC to the projector is transmitted in the format shown below.

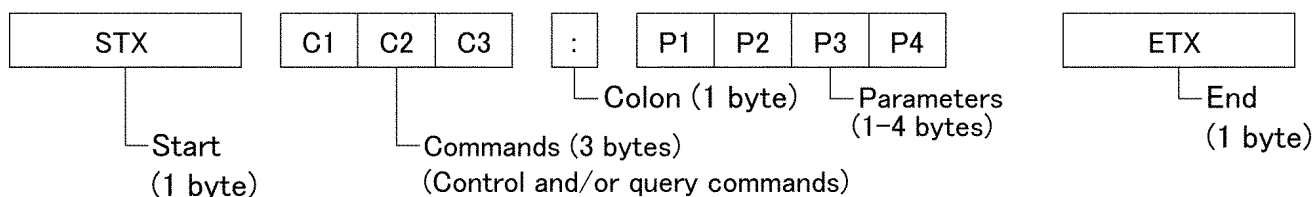

Notes:

- If sending multiple commands, check that a call back has been received from the projector for 1 command before sending the next command.
- When a command which does not require parameters is sent, the colon (:) is not required.

5.5. Control / Query Commands

Control Commands

Command Name (Parameter format is shown in <>)	Function / Contents	Call back from Projector (Parameter format is shown in <>)	Minimum Value of Parameter	Maximum Value of Parameter
PON *	POWER ON	PON		
POF *	POWER OFF	POF		
IIS :<input signal>	INPUT SELECT	IIS :<input signal>	—	—
OFZ :<off_on>	FREEZE	OFZ :<off_on>	0	1
OEN :	ENTER	OEN		
VPM :<picture mode>	PICTURE MODE	VPM :<picture mode>	—	—
<NOR>	NORMAL	<NOR>	—	—
<DYN>	DYNAMIC	<DYN>	—	—
<CN1>	CINEMA1	<CN1>	—	—
<CN2>	CINEMA2	<CN2>	—	—
<CN3>	CINEMA3	<CN3>	—	—
<CL1>	COLOR1	<CL1>	—	—
<CL2>	COLOR2	<CL2>	—	—
OMN	MENU	OMN		
OCU	CURSOR UP	OCU		
OCD	CURSOR DOWN	OCD		
OCL	CURSOR LEFT	OCL		
OCR	CURSOR RIGHT	OCR		
OSH *	BLANK	OSH		
OST	DEFAULT	OST		
OVM	PIC.MODE	OVM		
VS1	ASPECT	VS1		
OBK	RETURN	OBK		
OLE	LENS	OLE		
OOT :<sleep>	SLEEP	OOT :<sleep>	0	7
OWM :<x>	WAVEFORM MONITOR	OWM :<x>	0	8

- * Do not transmit the PON, POF and/or OSH commands continuously in a short time.
The lamp may be damaged and/or cause malfunctions.

Query Commands

Query Command	Contents	Call back from Projector (Parameter format is shown in < >)
QPW	POWER CONDITION	<power condition>
QIN	INPUT SIGNAL	<input signal>
QPM	PICTURE MODE	<NOR>=NORMAL <DYN>=DYNAMIC <CN1>=CINEMA1 <CN2>=CINEMA2 <CN3>=CINEMA3 <CL1>=COLOR1 <CL2>=COLOR2
QFZ	FREEZE	<off_on>
QOT	SLEEP	<sleep>
QSH	BLANK	<off_on>
QWM	WAVEFORM MONITOR	<x>

Parameters


Parameter Format	Parameter Size (Byte)	Parameter Definition
<off_on>	1	0=OFF, 1=ON
<input signal>	3	VID = VIDEO, SVD = S-VIDEO, RG1 = COMPUTER, CP1 = COMPONENT 1, CP2 = COMPONENT 2, HD1 = HDMI 1, HD2 = HDMI 2, HD3 = HDMI 3
<power condition>	3	000=Power OFF, 001=Power ON
<sleep>	1	0 = OFF, 1 = 60 min, 2 = 90 min, 3 = 120 min, 4 = 150 min, 5 = 180 min, 6 = 210 min, 7 = 240 min
<x>	1	0 = OFF, 1 = All Lines (Y), 2 = All Lines (R), 3 = All Lines (G), 4 = All Lines (B), 5 = Line Selection (Y), 6 = Line Selection (R), 7 = Line Selection (G), 8 = Line Selection (B)

* If an incorrect command is sent from the PC, the "ER401" command will be sent from the projector to the PC.

[Example]

When controls the audio volume to +30 by a PC

(Sends commands as the following:)

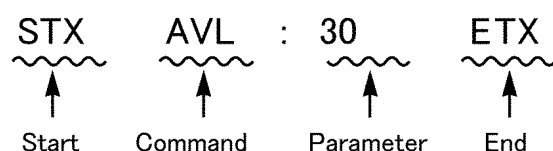

- When a command which does not require parameters is sent, the colon (:) is not required.

5.6. Communication Cable Specifications

At the projector			At the PC (DTE)		
1	NC		NC	1	
2				2	
3				3	
4	NC		NC	4	
5				5	
6	DSR		NC	6	
7				7	
8				8	
9	NC		NC	9	

5.7. Signal Selector Connecting Cable Specifications

When connecting to a signal selector (ex. TW-SWS62J), use a cable with specifications below.

Connecting method: Connects a video signal cable from the signal selector to "VIDEO IN", and an RGB signal cable to "PC IN".

At the signal selector D-sub 9p (male)			At the projector (DCE) D-sub 9p (male)		
Signal Name	Pin No.		Pin No.	Signal Name	
NC	1		1	NC	
RD Receive data	2		2	SD Transmit data	
SD Transmit data	3		3	RD Receive data	
NC	4		4	NC	
GND Ground	5		5	GND Ground	
NC	6		6	DSR	
RS Transmit request	7		7	CS Transmit permission	
CS Transmit permission	8		8	RS Transmit request	
NC	9		9	NC	

Note:

Set VP control terminal switch of the signal selector to VP TYPE "B".

6 Disassembly Instructions

Warning:


- Be sure to unplug the power cord from the power outlet before disassembling this projector.

Caution:


- While turning over a printed circuit board, be sure to put a insulating material under it to prevent a short circuit.
- Printed circuit boards and wires must not be pulled forcibly, but be handled carefully.
- Connectors also must be handled carefully.
- When reassembling, replace used adhesive tape with new one (Do not re-use used tape).
- After repairing this projector, be sure to put back the wires and connectors to the original condition.
- Service or repair the product according to service information on the service manual, etc. so that a fire, injury or electric shock caused by an improper repair may not occur.
 1. Do not modify equipments, components and materials when attempting to service or repair.
 2. Do not repair nor connect wires even in case of a part of the disconnection when the wiring unit is supplied as a replacement parts, replace the wiring unit (complete).
 3. For a fasten terminal (push-in type terminal), pull out or insert straightly without twisting it.
 4. When the fuse has blown, do not turn on the power supply replacing only the fuse because the secondary disaster of fumes, fire or other hazards is expected. Turn on the power supply after doing the confirmation and measures of defective causes (structure and circuit, etc.).
 5. After the service or the repair is completed, confirm the operation of the product is normal.

6.1. Printed Circuit Board and Main Parts Location

Electrical Parts

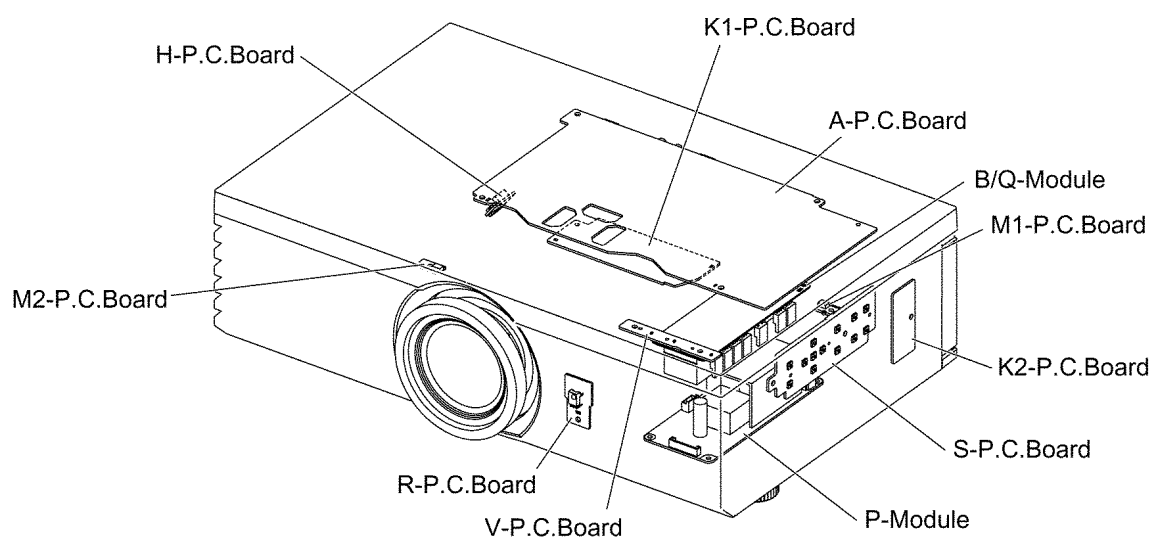


Optical Parts

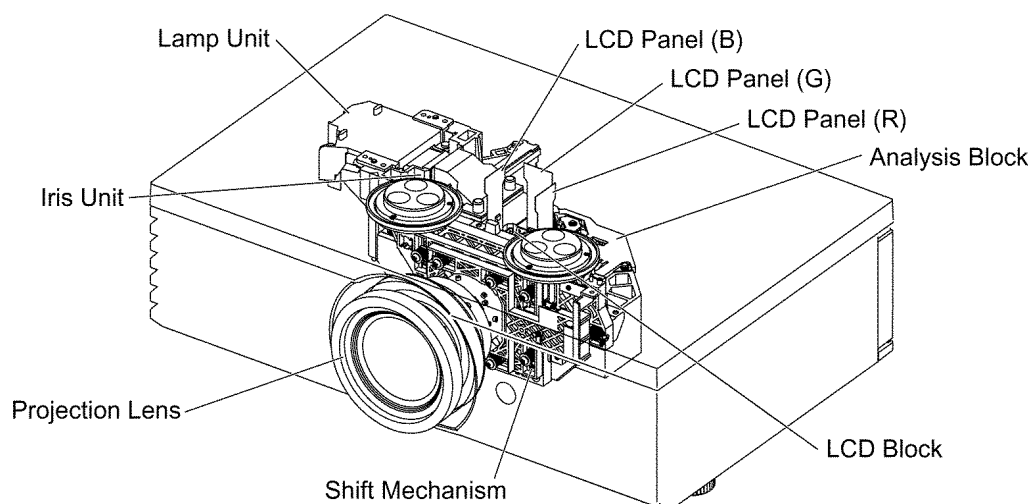


6.2. Removal of Upper Case


1. Lift the rear side of the top panel and disconnect the top panel Open/Close hook, then open the top panel.

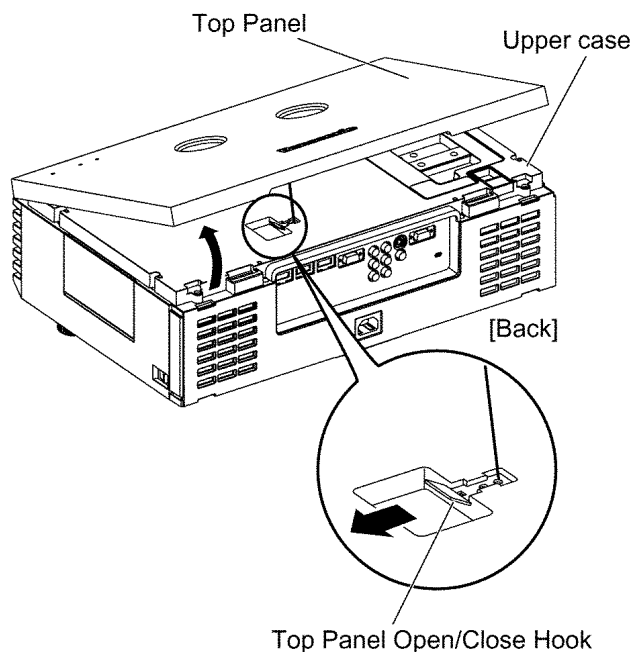

2. While pressing hooks of the 2 top panel fastening devices, remove the top panel.

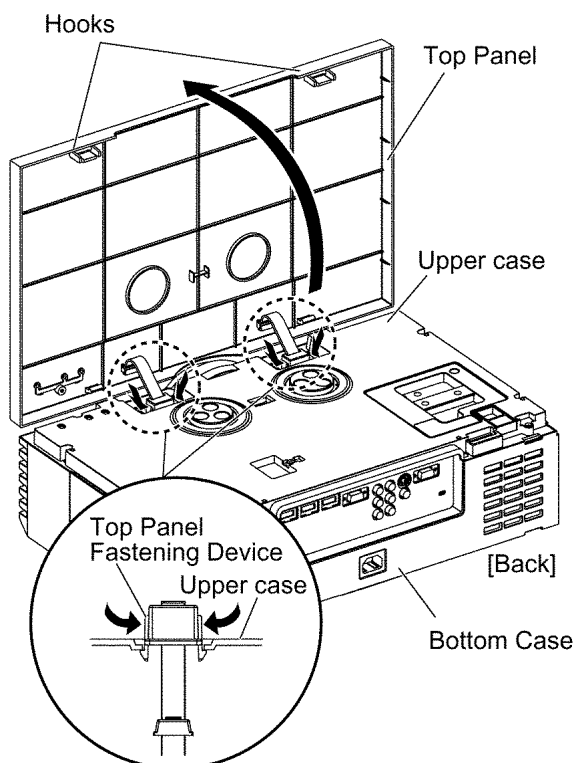


3. Loosen the 3 screws until they idle.
4. Slide the lamp lock button to release, and remove the lamp unit block (with lamp unit cover).
5. Unscrew the 8 screws and remove the upper case.

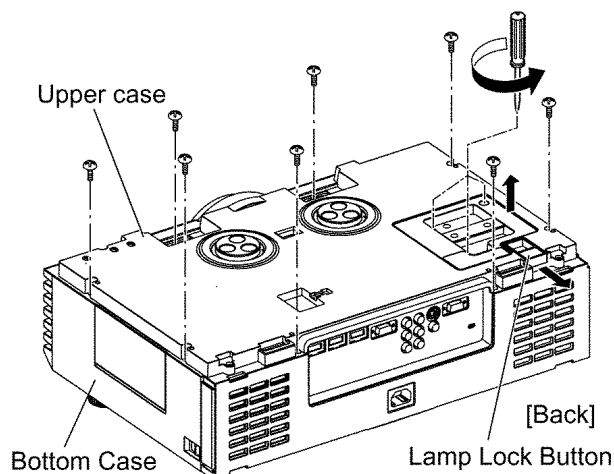


6.3. Removal of A-P.C.Board


1. Remove the upper case according to the section 6.2. "Removal of Upper Case".
2. Unscrew the 2 screws and remove the A-P.C.Board block.

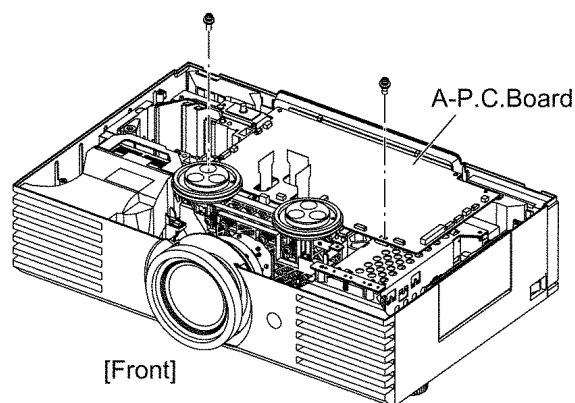

3. Unscrew the 2 screws and remove the connector cover.

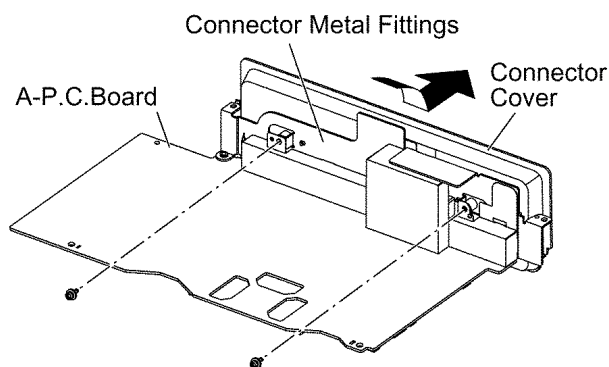


4. Unscrew the 11 screws and remove the A-P.C.Board.

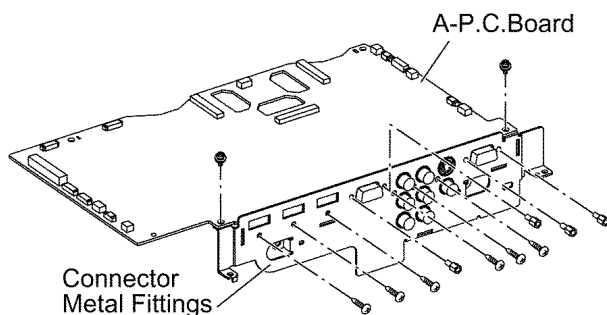


6.4. Removal of K1-P.C.Board


1. Remove the upper case according to the section 6.2. "Removal of Upper Case".
2. Unscrew the 2 screws and remove the A-P.C.Board block.

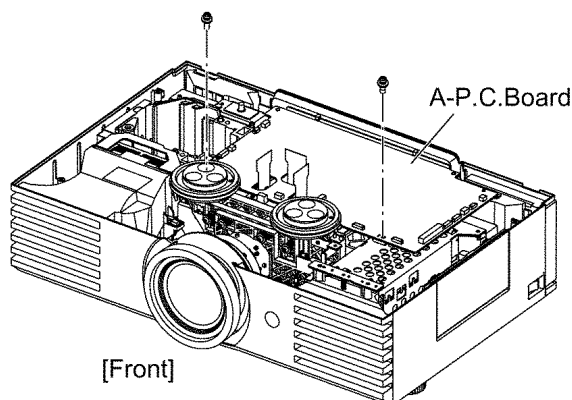


3. Unscrew the 1 screw and release the grounding terminal.
4. Unscrew the 4 screws and remove the block of Analysis Block, LCD Block, Shift Mechanism and Projection Lens.

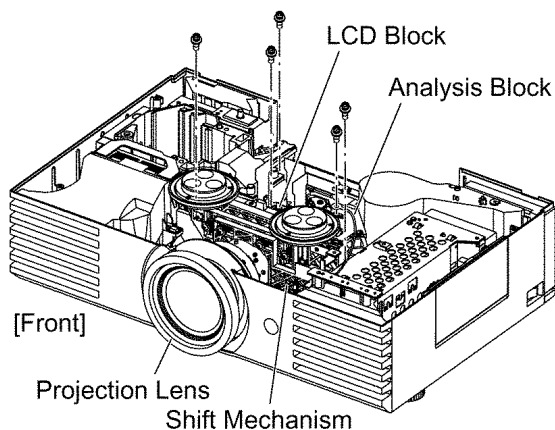


5. Unscrew the 4 screws and remove the intake air duct 2.

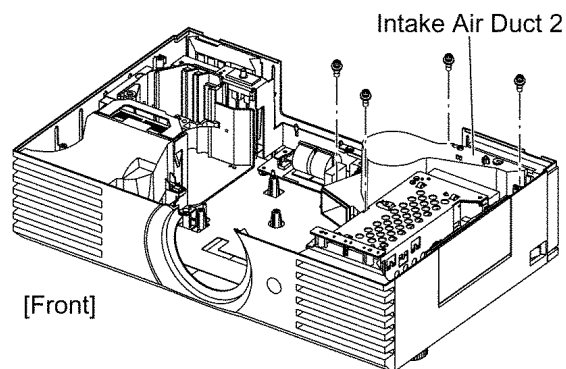

6. Unscrew the 1 screw and remove the intake air duct 1.

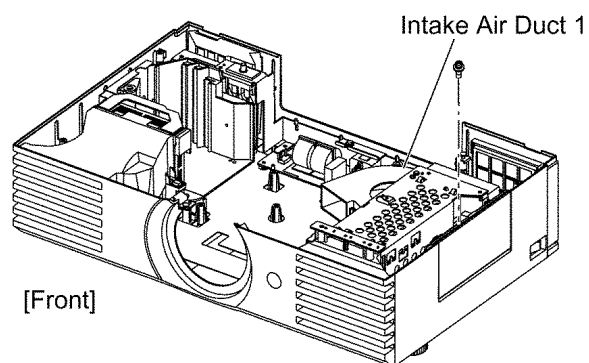


7. Unscrew the 3 screws and remove the K1-P.C.Board.

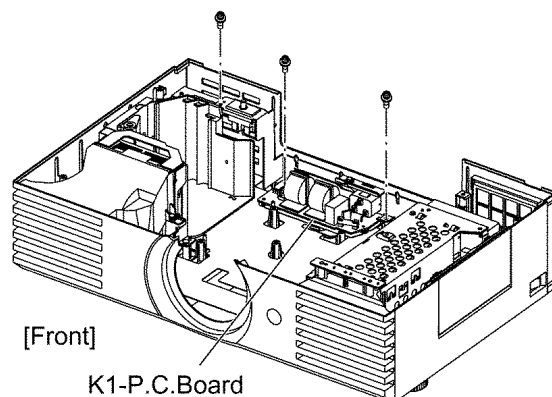

6.5. Removal of R-P.C.Board


1. Remove the upper case according to the section 6.2. "Removal of Upper Case".
2. Unscrew the 2 screws and remove the V-P.C.Board.

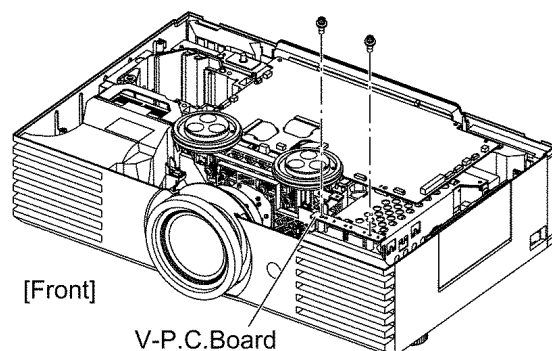


3. Unscrew the 1 screw and remove the P.C.Board attachment fittings with R-P.C.Board.

Note:

- R-P.C.Board is secured. Be careful not to apply excessive force.

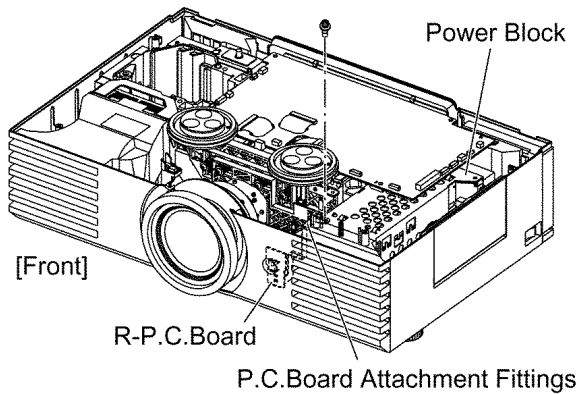


4. Unscrew the 1 screw and remove the R-P.C.Board.

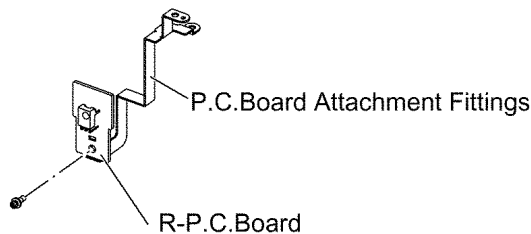


6.6. Removal of S-P.C.Board

1. Remove the upper case according to the section 6.2. "Removal of Upper Case".
2. Unscrew the 2 screws and release the grounding terminal.
3. Unscrew the 1 screw and remove the operation button block.

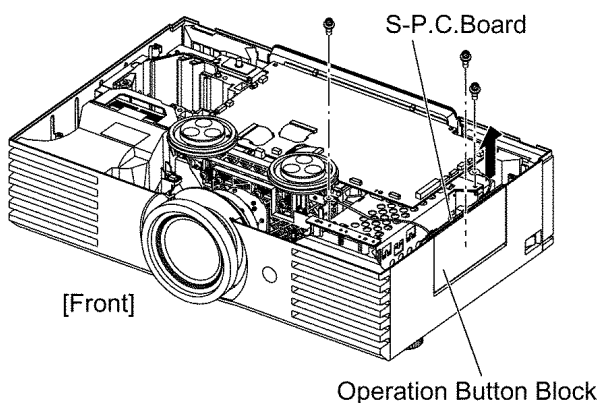


4. Unscrew the 2 screws and remove the S-P.C.Board.

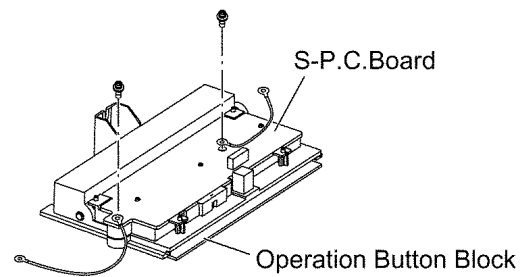


6.7. Removal of V-P.C.Board

1. Remove the upper case according to the section 6.2. "Removal of Upper Case".
2. Unscrew the 2 screws and remove the V-P.C.Board.

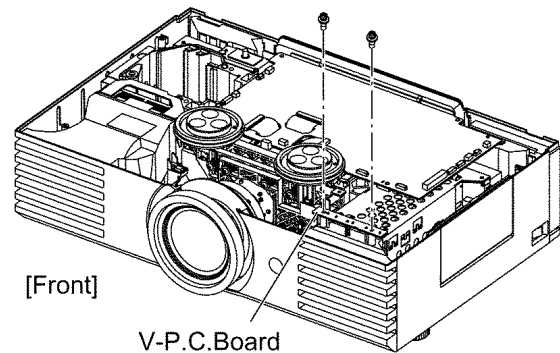


6.8. Removal of B/Q-Module

1. Remove the upper case according to the section 6.2. "Removal of Upper Case".
2. Unscrew the 2 screws and remove the A-P.C.Board block.

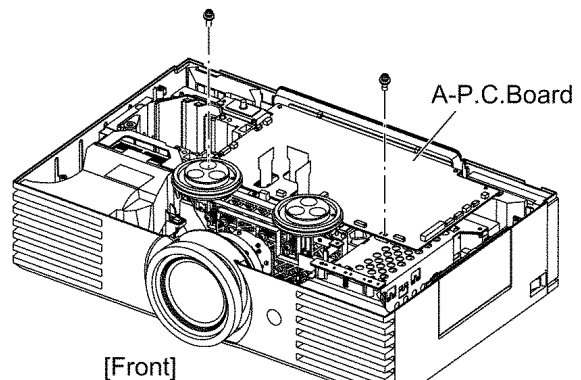

3. Unscrew the 2 screws and remove the V-P.C.Board.

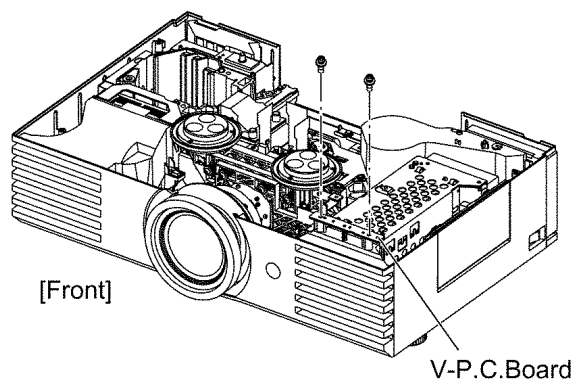


4. Unscrew the 1 screw and remove the P.C.Board attachment fittings with R-P.C.Board.


Note:

- R-P.C.Board is secured. Be careful not to apply excessive force.


5. Unscrew the 1 screw and release the grounding terminal.

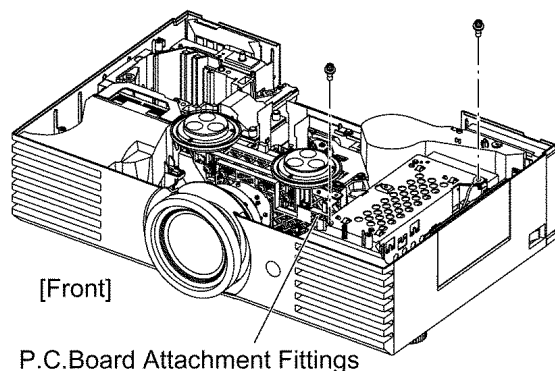


6. Unscrew the 1 screw and release the grounding terminal.
7. Unscrew the 4 screws and remove the block of Analysis Block, LCD Block, Shift Mechanism and Projection Lens.

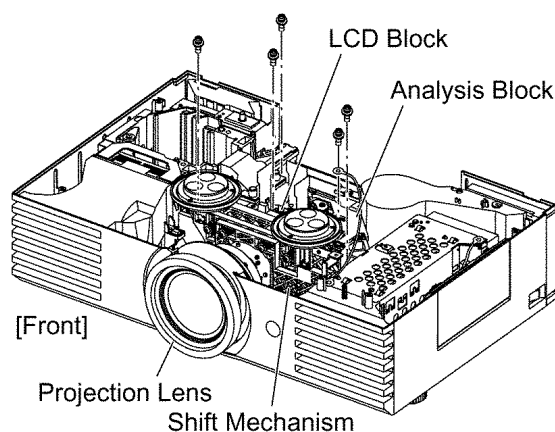


8. Unscrew the 2 screws and remove the exhaust fan.
9. Unscrew the 1 screw and release the lamp unit terminal.
10. Unscrew the 3 screws and remove the power block (B/Q-Module and P-Module).

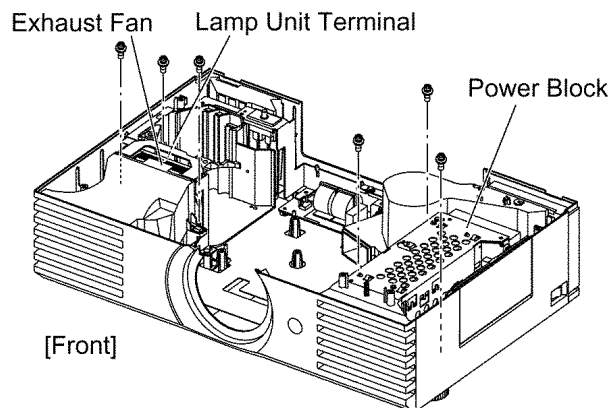

11. Unscrew the 1 screw and separate the B/Q-Module block and P-Module block.

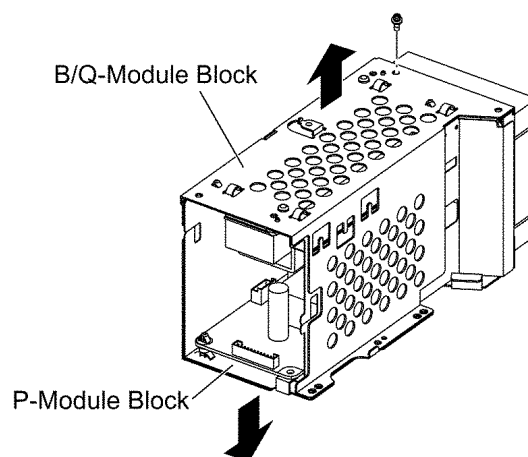


12. Unscrew the 2 screws.
13. While pressing to shut each hook of the 2 resinous stands, remove the B/Q-Module.

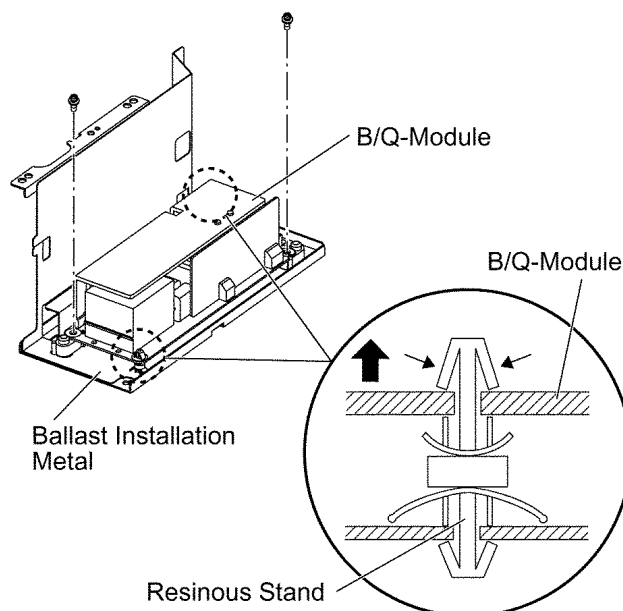

6.9. Removal of P-Module


1. Remove the P-Module block according to the steps 1 through 11 in the section 6.8. "Removal of B/Q-Module".
2. Unscrew the 2 screws.

3. While pressing to shut each hook of the 2 resinous stands, remove the P-Module.

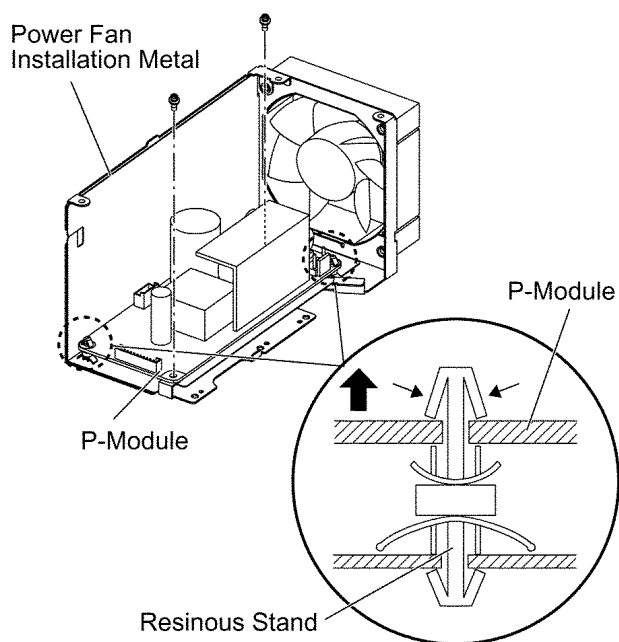


6.10. Removal of Lamp Unit

1. Lift the rear side of the top panel and disconnect the top panel Open/Close hook, then open the top panel.

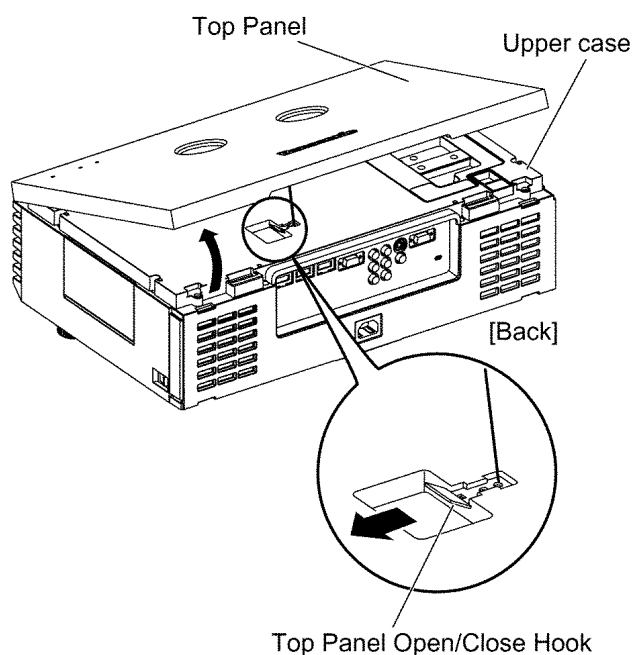


2. Loosen the 3 screws until they idle.
3. Slide the lamp lock button to release, and remove the lamp unit block (with lamp unit cover).

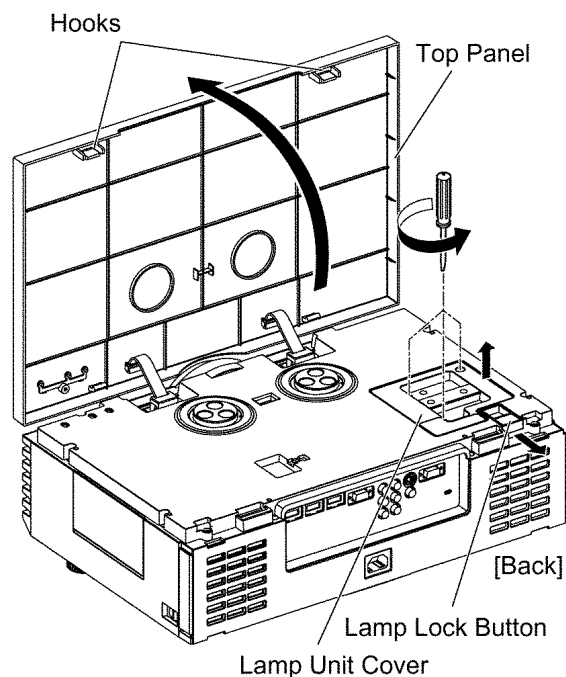


Note:

- When installing the lamp unit in the main unit, place it in a specified position and press the connector side and the opposite side of the lamp unit (arrow positions shown in the figure below), and confirm the lamp unit is inserted securely. Then, tighten the 3 screws fixing the lamp unit cover.

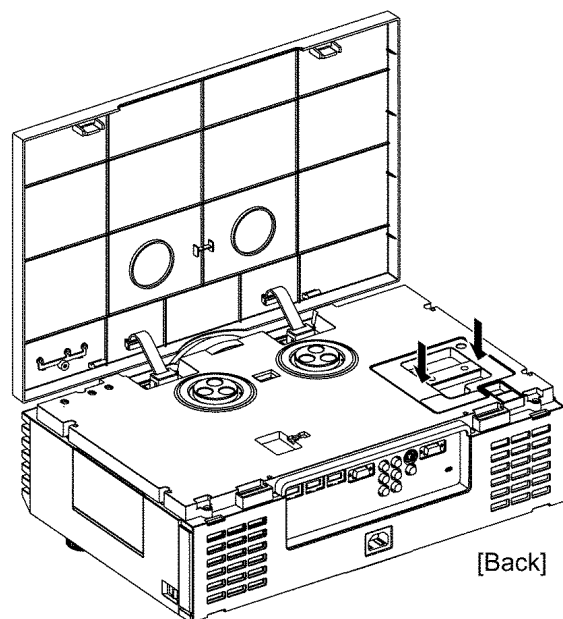


6.11. Removal of Analysis Block

- Remove the upper case according to the section 6.2. "Removal of Upper Case".
- Unscrew the 2 screws and remove the A-P.C.Board block.

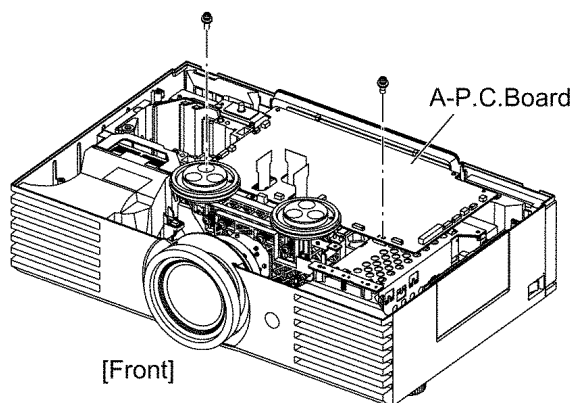


3. Unscrew the 1 screw and release the grounding terminal.
4. Unscrew the 4 screws and remove the block of Analysis Block, LCD Block, Shift Mechanism and Projection Lens.

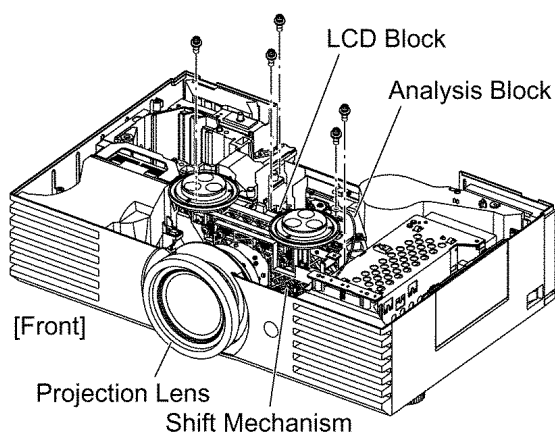

5. Unscrew the 2 screws and remove the block of LCD Block, Shift Mechanism and Projection Lens.

Note:


- There is not enough space between the analysis block and LCD block. Be careful not to damage nor dirty precision components (LCD panel, phase difference board, etc.) when removing.

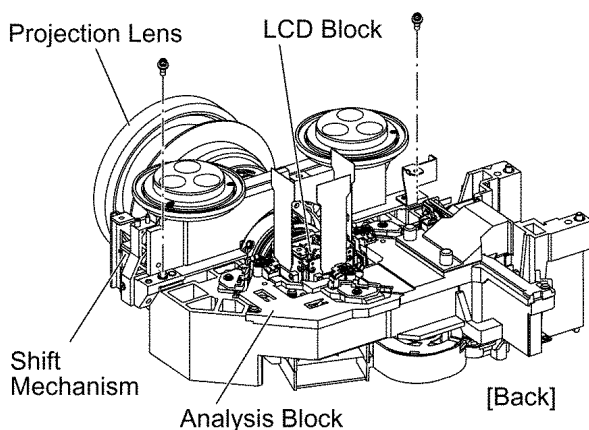


6.12. Removal of LCD Block / Projection Lens

1. Remove the block of LCD Block, Shift Mechanism and Projection Lens according to the section 6.11. "Removal of Analysis Block".

2. Unscrew the 5 screws, and separate the LCD block and block of Shift Mechanism and Projection Lens.

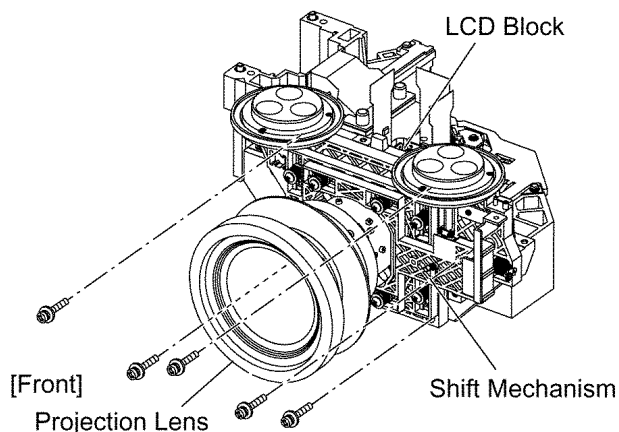


3. Unscrew the 4 screws and remove the projection lens .

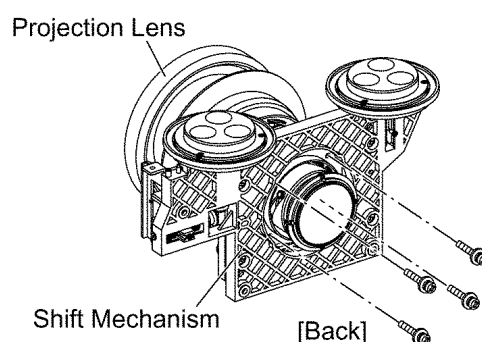

6.13. Replacement of Phase Difference Board

The procedure is described as an example of phase difference board (G).

1. Remove the upper case according to the section 6.2. "Removal of Upper Case".
2. Unscrew the 2 screws and remove the A-P.C.Board block.

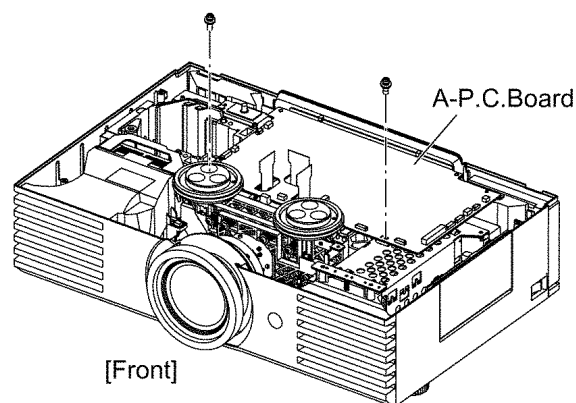


3. Mark positions of the phase difference board (G).

Note:

- Mark accurately as possible because the marks will be used for resetting the phase difference board position.
4. Unscrew the 1 screw and remove the phase difference board (G).

5. Attach a new phase difference board and align it with the mark.
6. Tighten the 1 screw with care not to move the phase difference board position.

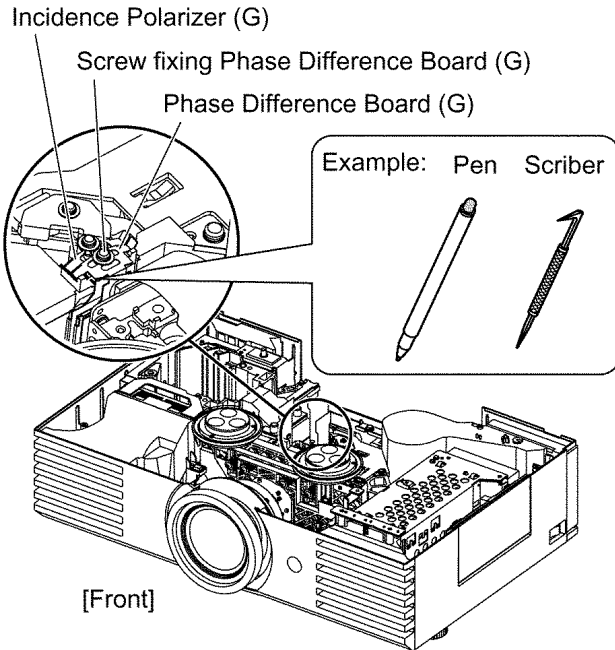

6.14. Replacement of Incidence Polarizer


The procedure is described as an example of incidence polarizer (G).

1. Remove the phase difference board according to the steps 1 through 4 in the section 6.13. "Replacement of Phase Difference Board".
2. Mark positions of the incidence polarizer (G).

Note:


- Mark accurately as possible because the marks will be used for resetting the incidence polarizer position.

3. Unscrew the 1 screw and remove the incidence polarizer (G).
4. Attach a new incidence polarizer and align it with the mark.
5. Tighten the 1 screw with care not to move the incidence polarizer position.

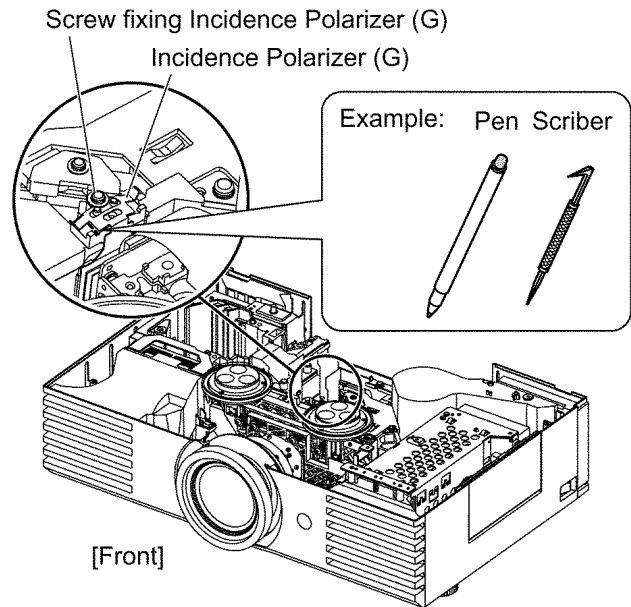

6.15. Replacement of PBS Array (Analysis Block)



1. Remove the upper case according to the section 6.2. "Removal of Upper Case".
2. Unscrew the 2 screws and remove the A-P.C.Board block.

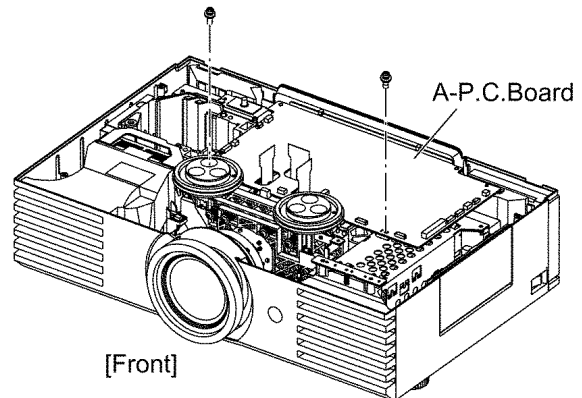

3. Unscrew the 4 screws and remove the analysis case (upper).

Note:

- The incidence polarizer and phase difference board are installed in the analysis case (upper). Be careful not to shift the installation positions nor damage them.

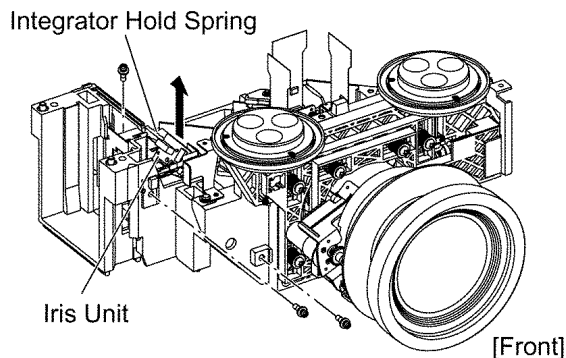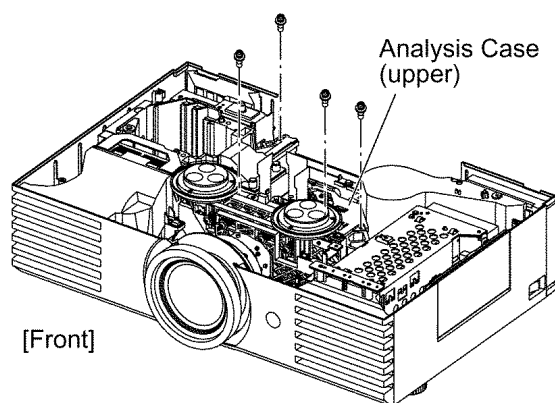


4. Remove the PBS array.

5. Install new PBS array.

Note:

- Be careful not to mistake the direction (inside/outside, upper/lower).
- Be careful not to touch the surface of PBS array.

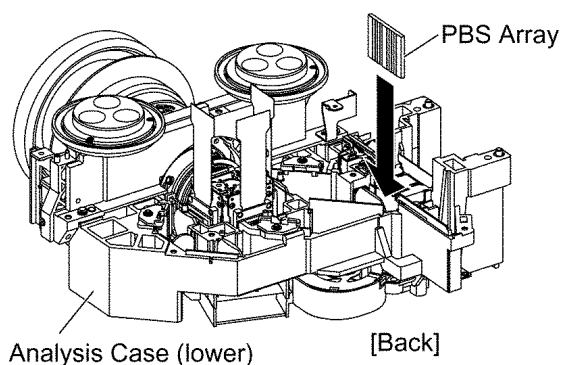


6.16. Removal of Iris Unit

1. Remove the analysis block according to the steps 1 through 4 in the section 6.11. "Removal of Analysis Block".

2. Unscrew the 4 screws and remove the analysis case (upper).

Note:

- The incidence polarizer and phase difference board are installed in the analysis case (upper). Be careful not to shift the installation positions nor damage them.

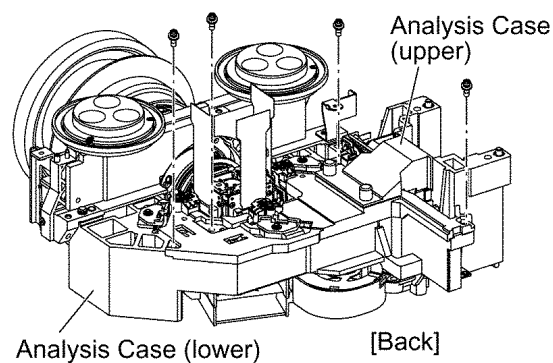


3. Unscrew the 1 screw and remove the integrator hold spring.

4. Unscrew the 2 screws and remove the iris unit .

7 Measurement and Adjustments

7.1. Adjustment Procedure Flowchart

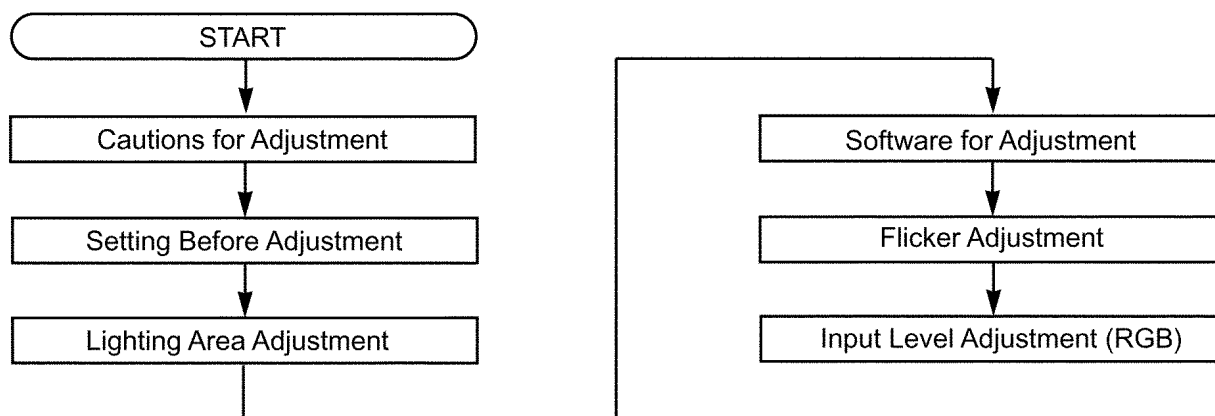


7.2. Cautions for Adjustment

- Never turn off the MAIN POWER switch until every fan completely stops.
- To maintain and ensure safety, always use the designated components for replacement parts.
- If removing any clamps, lead wires or connectors, always place them back in their proper locations.
- Be careful not to damage the lead wires or components when using a soldering iron or similar tool.

7.3. Setting Before Adjustment

- Set up the projector to obtain the projection distance below.
- Turn the zoom ring of the projector to obtain the largest size of the picture.

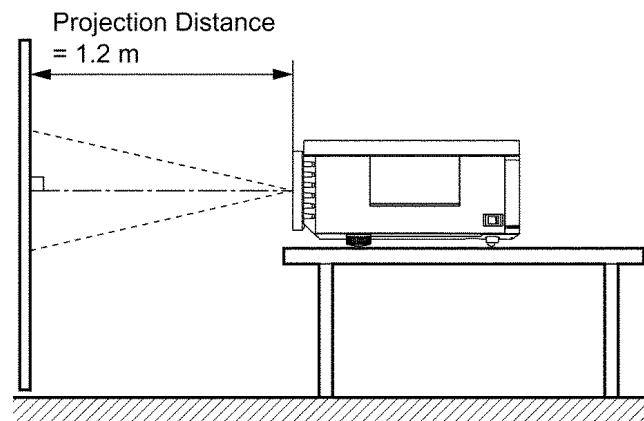

7.4. Lighting Area Adjustment

7.4.1. Tools to be used


Service Kit: This kit is composed of 3 extension flexible cables and 5 connector extension cables.

Note:

- Consult your dealer or Authorized Service Center for the service kit.

7.4.2. Preparation

1. Remove the upper case according to the section 6.2. "Removal of Upper Case".
2. Install the lamp unit block (with lamp unit cover) and tighten the 3 screws fixing the lamp unit cover.
3. Unscrew the 2 screws fixing the A-P.C.Board.

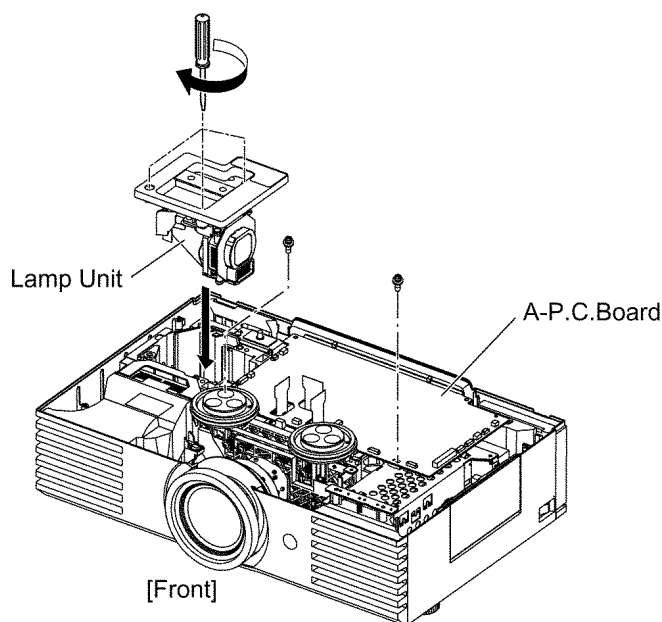


4. Connect the service kit (extension cables).

- Each flexible cable of LCD Panels (R/G/B) - Connectors (A1/A2/A3) on A-P.C.Board
- Intake fan connector - Connector (A15) on A-P.C.Board
- Power fan connector - Connector (A16) on A-P.C.Board
- PBS fan connector - Connector (A18) on A-P.C.Board
- Thermosensor (Intake air) connector - Connector (A7) on A-P.C.Board
- S-P.C.Board connector - Connector (A8) on A-P.C.Board

5. Covering with an insulator (cloth or the like) to prevent a short circuit, set the A-P.C.Board block on the main unit.

Note:

- Handle with care not to apply external force to connecting parts which connect the main unit and A-P.C.Board.

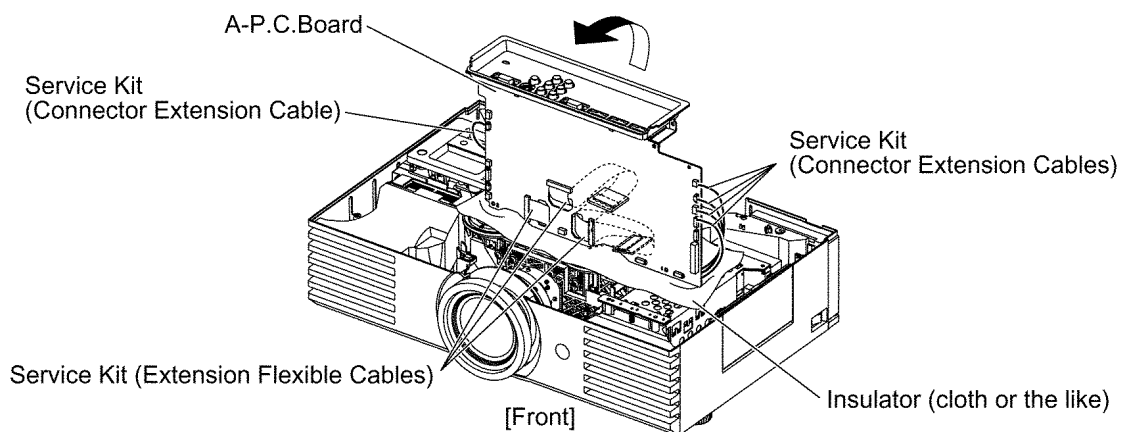


7.4.3. Adjustment Procedure

7.4.3.1. Outline

When the lighting area is off from the adjustment and color unevenness appears, adjust the lighting area into correct position.

Symptom	Measure
Magenta unevenness	G Reflector Adjustment
Cyan unevenness	R Reflector Adjustment
Yellow unevenness	B Reflector Adjustment

- Shifting the mirror adjusting lever horizontally, adjust color unevenness on the screen upper/lower sides.
- Twisting the mirror adjusting lever, adjust color unevenness on the screen right/left sides.

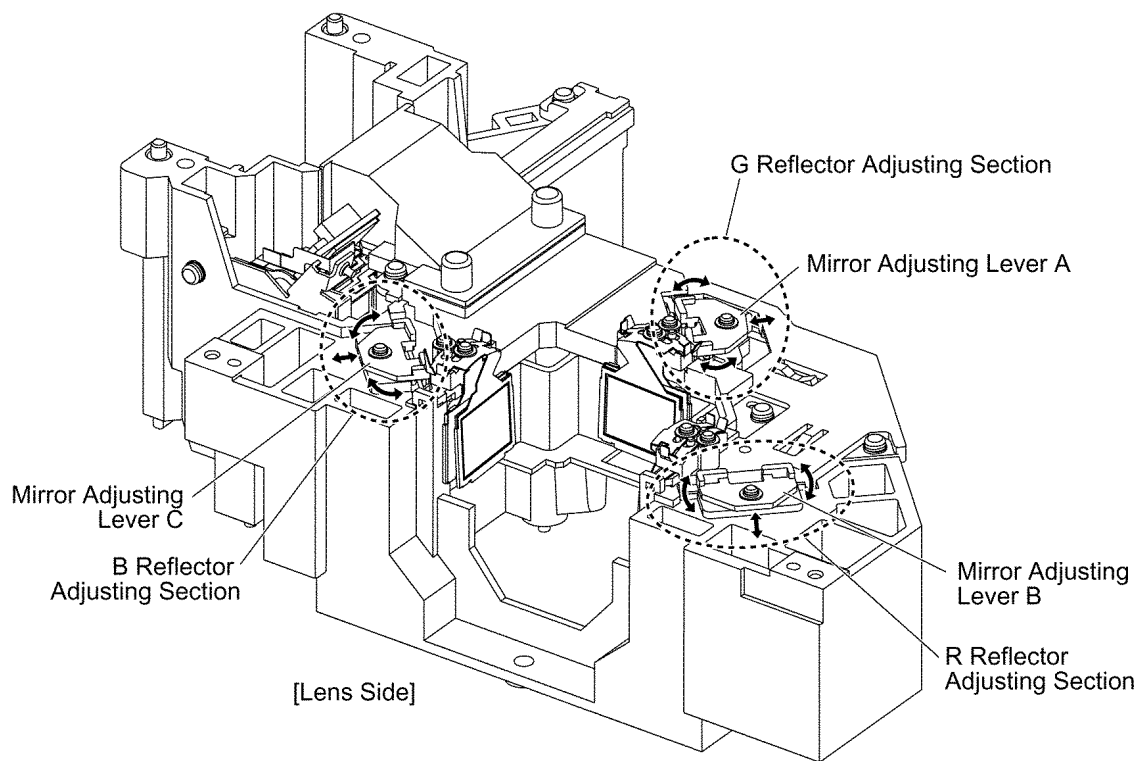

[Above figure is shown only the analysis block for explanation.]

7.4.3.2. G Reflector Adjustment

1. Turn on the power and display 100 % white pattern on the screen.
2. Loosen the 1 screw fixing the mirror adjusting lever A just until the lever can be shifted.
3. Adjust the mirror adjusting lever A position to minimize color unevenness on the screen by shifting the lever in arrow directions.
4. Tighten the 1 screw.

7.4.3.3. R Reflector Adjustment

1. Turn on the power and display 100 % white pattern on the screen.
2. Loosen the 1 screw fixing the mirror adjusting lever B just until the lever can be shifted.
3. Adjust the mirror adjusting lever B position to minimize color unevenness on the screen by shifting the lever in arrow directions.
4. Tighten the 1 screw.

7.4.3.4. B Reflector Adjustment


1. Turn on the power and display 100 % white pattern on the screen.
2. Loosen the 1 screw fixing the mirror adjusting lever C just until the lever can be shifted.
3. Adjust the mirror adjusting lever C position to minimize color unevenness on the screen by shifting the lever in arrow directions.
4. Tighten the 1 screw.

7.5. Software for Adjustment

7.5.1. Outline

- This projector needs computer-aided adjustments.
- After the software adjustments, this projector must be turned off and on again to memorize the settings.
- Connect the cable between the projector and a PC as shown below.
- Updating the software will change the version number.

〈Back connector panel of the projector〉

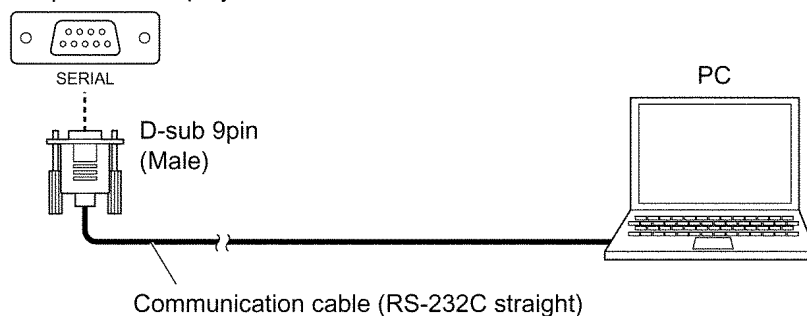

7.5.2. Operating Procedure

1. Run software program by the keyboard entry.


Note:

- Use the software program as below.

Adjustment Tool [AE2000]

2. The first menu is Port selection menu.
3. Adjust the projector by selecting the necessary item from the menu in each stage.

7.5.3. Port Selection Menu

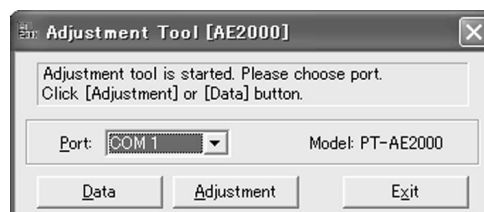

Select the port name of PC which connects with the projector, then click [Data] or [Adjustment] button.

7.5.3.1. Explanation of Buttons

Data:

Displays the data transmission/reception menu.


Adjustment:

Displays the adjustment menu.

Exit:

Exits this application.

7.5.4. Data Transmission/Reception Menu

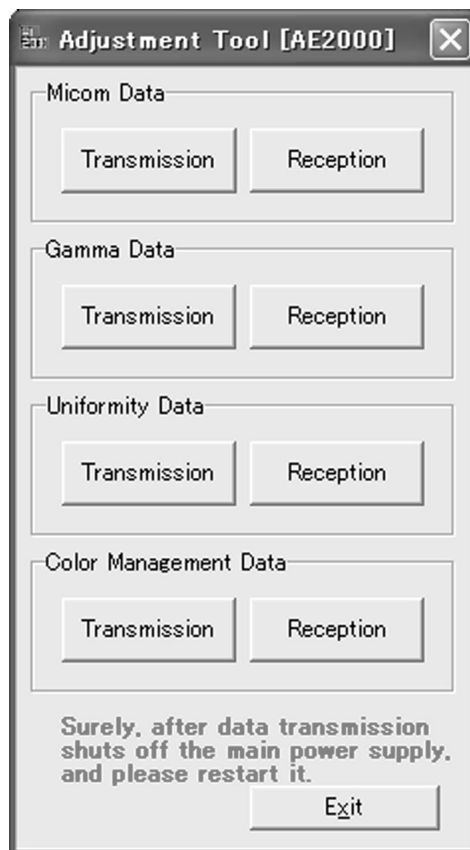

7.5.4.1. Explanation of Buttons

Micom Data Transmission:

Reads the microcomputer data from the file and transmits it to the projector.

Micom Data Reception:

Receives the microcomputer data from the projector and writes it in the file.

Gamma Data Transmission:

Reads the gamma data from the file and transmits it to the projector.

Gamma Data Reception:

Receives the gamma data from the projector and writes it in the file.

Uniformity Data Transmission:

Reads the color unevenness correction data from the file and transmits it to the projector.

Uniformity Data Reception:

Receives the color unevenness correction data from the projector and writes it in the file.

Color Management Data Transmission:

Reads the color management data from the file and transmits it to the projector.

Color Management Data Reception:

Receives the color management data from the projector and writes it in the file.


Exit:

Exits this application.

7.5.4.2. Receiving and transmitting of the data

Click a target button and specify a file name.

7.5.5. Adjustment Menu

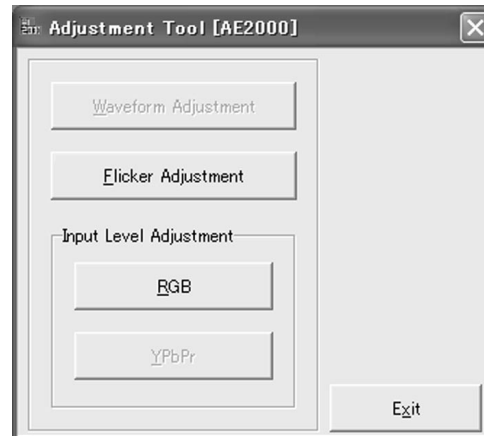

7.5.5.1. Explanation of Buttons

Flicker Adjustment:

Displays Flicker Adjustment menu.

Input Level Adjustment [RGB]:


Displays Input Level Adjustment (RGB) menu.

Exit:

Exits this application.

7.6. Flicker Adjustment

7.6.1. Adjustment Menu

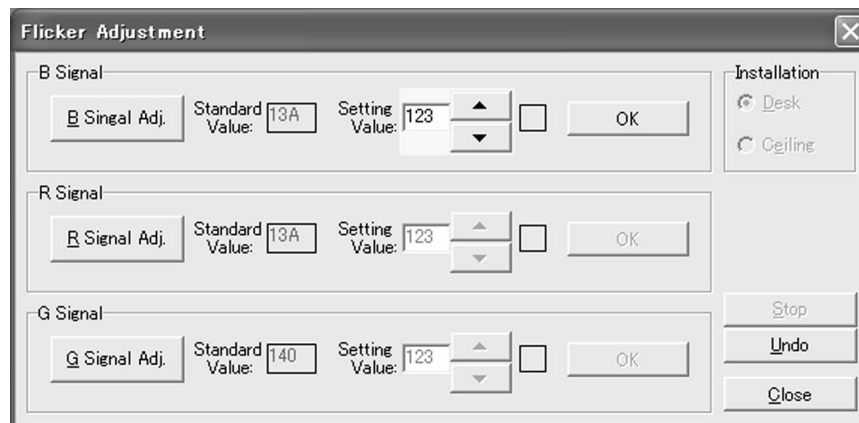

7.6.2. Explanation of Buttons

B Signal Adj.:

Sets the test signal mode to the B-signal and allows the " ▲ ", " ▼ " and "OK" buttons of the B-signal to become active.

R Signal Adj.:

Sets the test signal mode to the R-signal and allows the " ▲ ", " ▼ " and "OK" buttons of the R-signal to become active.

G Signal Adj.:

Sets the test signal mode to the G-signal and allows the " ▲ ", " ▼ " and "OK" buttons of the G-signal to become active.

▲ or ▼

Changes the setting value and transmits its data. (The 8 and 2 keys on the keyboard have the same functions.) If releasing the mouse or key after pressing it continuously, the data is transmitted once. The variable setting value is enclosed in a box and using the TAB or SPACE key allows the move of the box.

OK:

Determines the setting value and stores its data in the EEPROM. (The ENTER key on the keyboard has the same function.) The item having two or more kinds of setting values is processed two or more items. Clicking this button or pressing ENTER key changes the color of the text "OK" to cyan (light blue). If changing the setting value using the " ▲ " or " ▼ " button or

the 8 or 2 key, its color returns to black.

Stop:

Discontinues the communication. (This button is usually set for its inactive mode.)

Undo:

Returns the setting value to its original state and transmits its data. The color of the text "OK" returns to black.

Close:

Closes this menu.

7.6.3. Equipment to be used

PC, Software for Adjustment

7.6.4. Adjustment Procedure

1. Display Flicker Adjustment menu.
2. Click "B Signal Adj," and the blue flicker adjustment pattern will be displayed.
3. Minimize the flicker while observing the projected pattern.
4. Click "R Signal Adj," and the red flicker adjustment pattern will be displayed.
5. Minimize the flicker while observing the projected pattern.
6. Click "G Signal Adj," and the green flicker adjustment pattern will be displayed.
7. Minimize the flicker while observing the projected pattern.

7.7. Input Level Adjustment (RGB)

7.7.1. Adjustment Menu



7.7.2. Explanation of Buttons

OK:

Executes automatic sub contrast and sub brightness adjustments, then closes this dialog.

Cancel:

Cancels this menu.

7.7.3. Equipment to be used

PC, RGB Signal Generator, Software for Adjustment

7.7.4. Adjustment Procedure

1. Display Input Level Adjustment (RGB) menu.
2. Input a window pattern signal to COMPUTER IN connector.

Note:

- Use approx. 15 % window pattern as follows.
 - Black background (screen width) : White window width = 2 : 1
 - Black background (screen height) : White window height = 3 : 1
- Must use the window pattern of 1 080p (1 920 x 1 280).

3. Click the OK button.

8 Troubleshooting


- The letters in the left of the inspection items indicate the P.C.Boards or Modules related to their respective descriptions.


Note: A


The letter of the alphabet indicates the P.C.Board or Module name.


(Example) A: A-P.C.Board, P: P-Module


- If replacing A-P.C.Board (assembly), read the ROM data from the old P.C.Board and write it in the new one according to the section 7.5. "Software for Adjustment". At this time, if the readout from the old P.C.Board does not succeed, remove IC1061 and IC1063 from the old P.C.Board and install them on the new one. Then, execute the self-check according to the chapter 3. "Self-Check Mode", and confirm "G SAVED" and "U SAVED" display "OK".
- If replacing A-P.C.Board (assembly), minimize the flicker according to the chapter 4. "Flicker Adjustment Mode".
- If replacing A-P.C.Board (assembly), adjust RGB Input Level according to the chapter 7.7. "Input Level Adjustment".

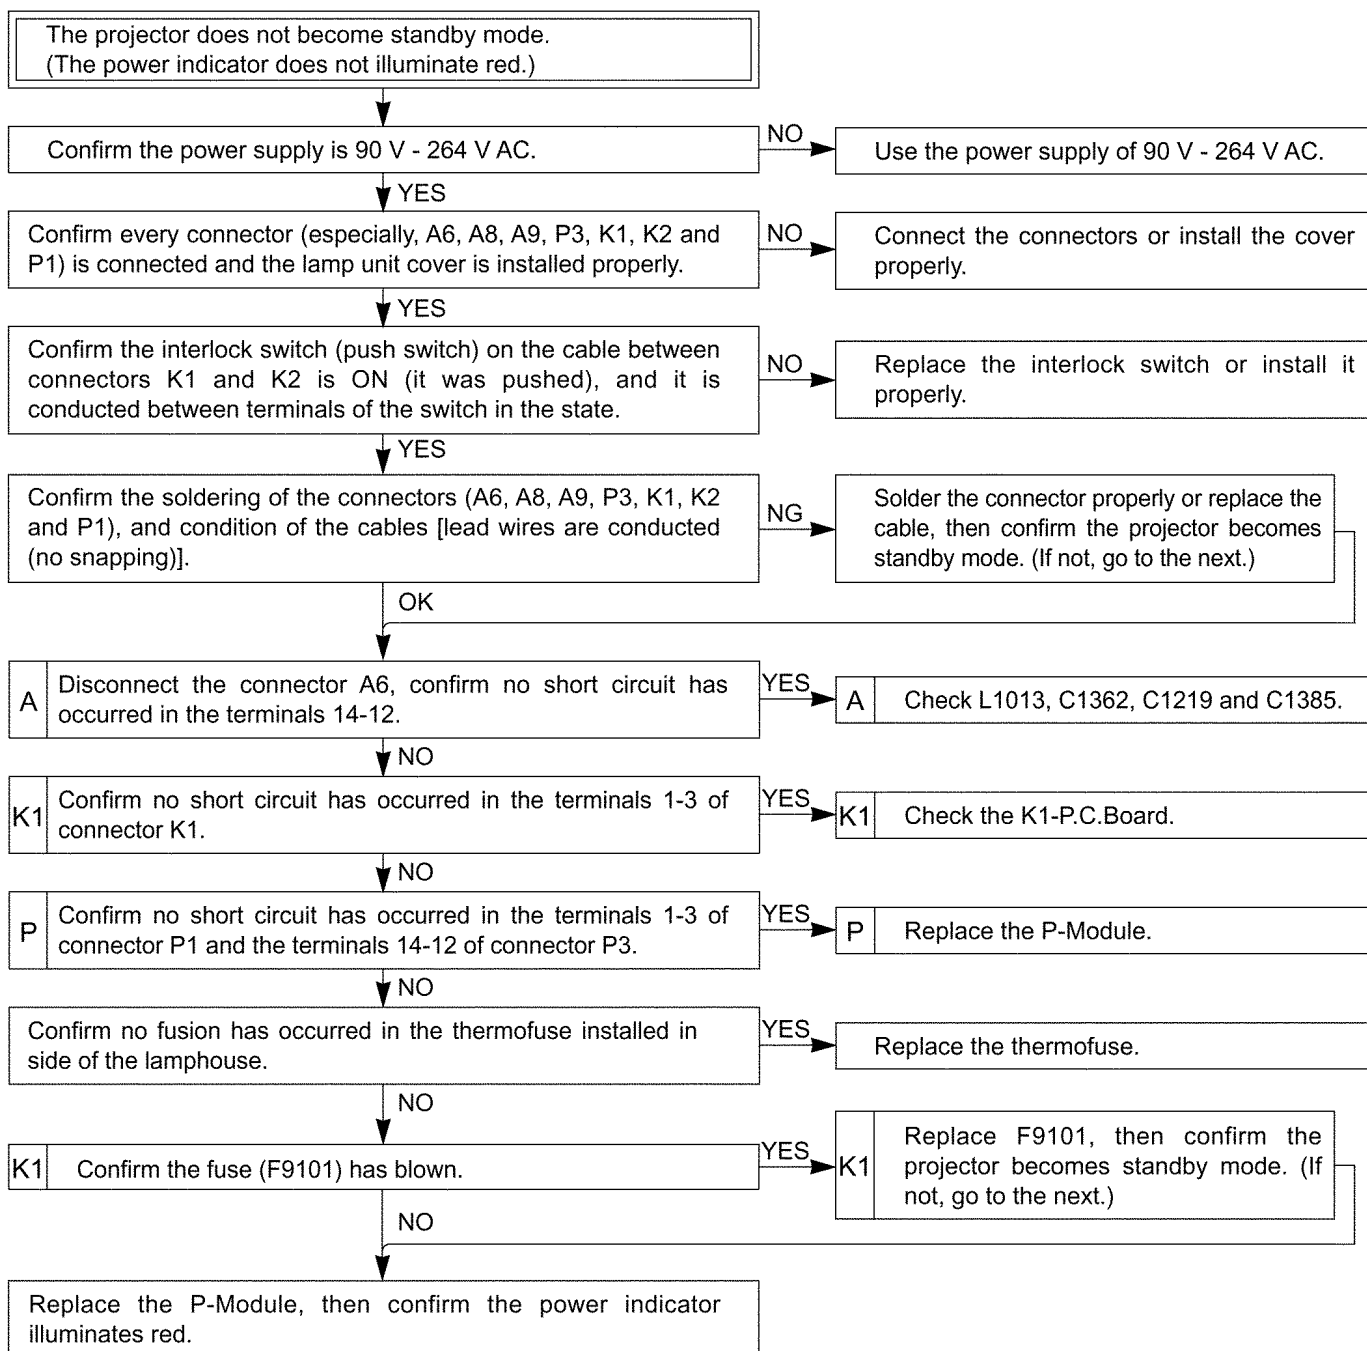


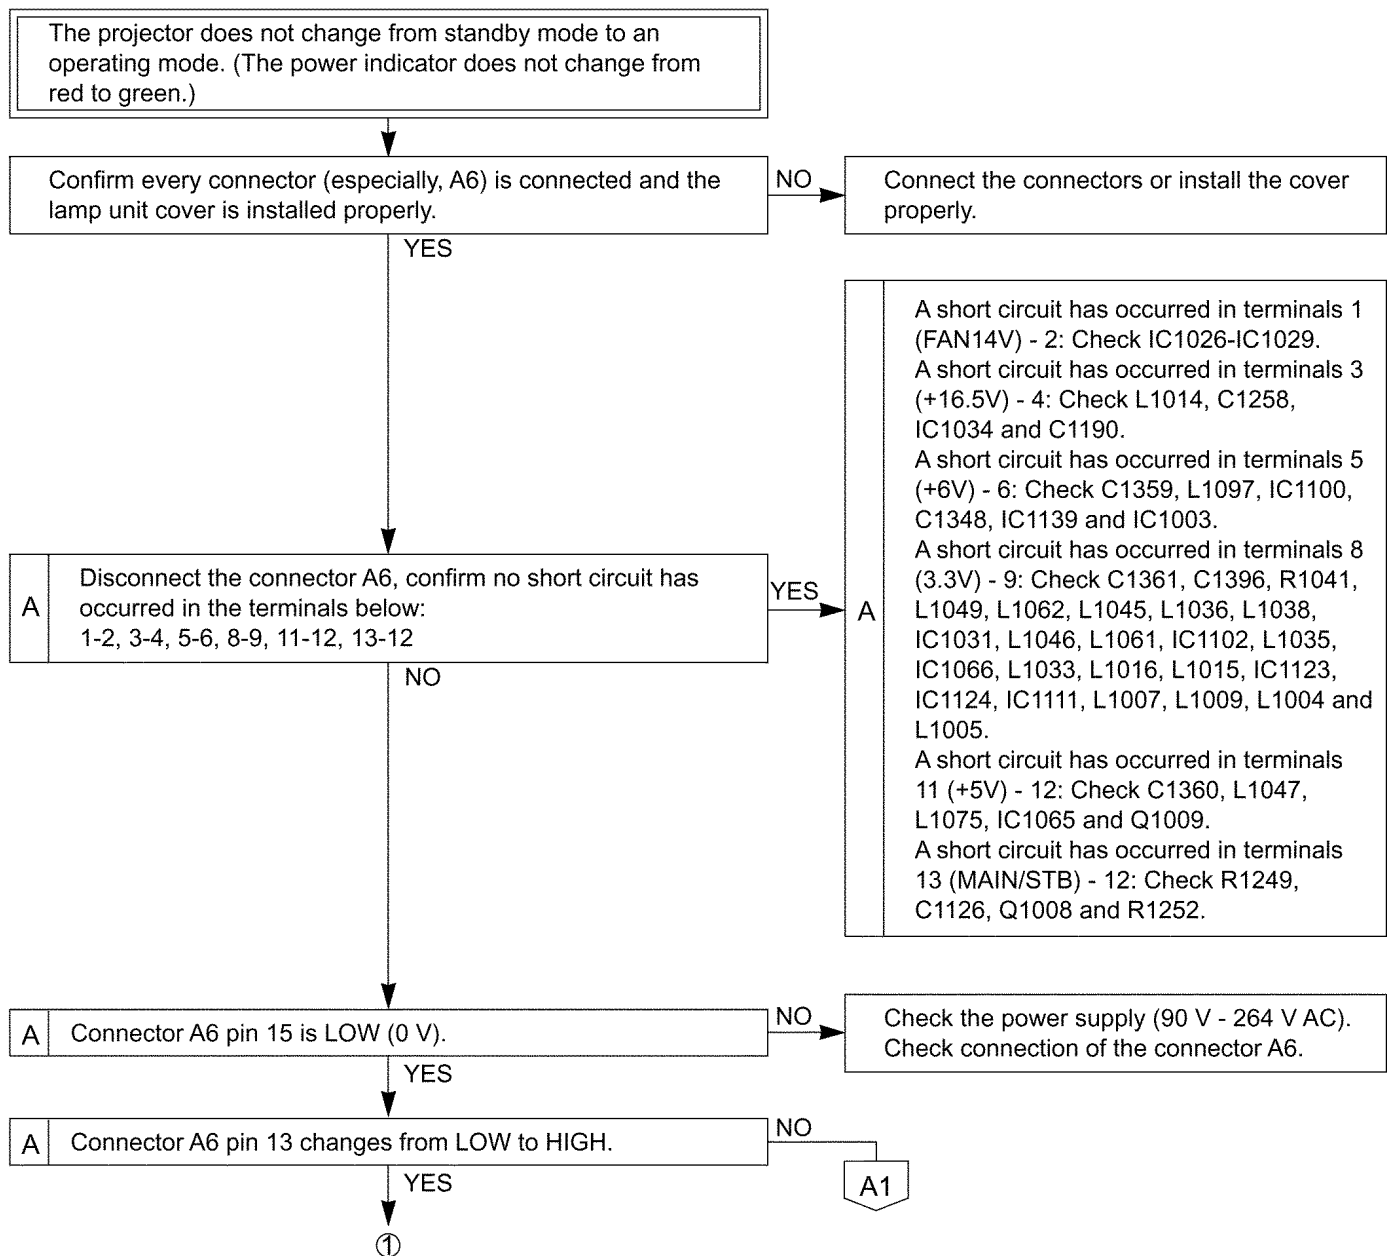


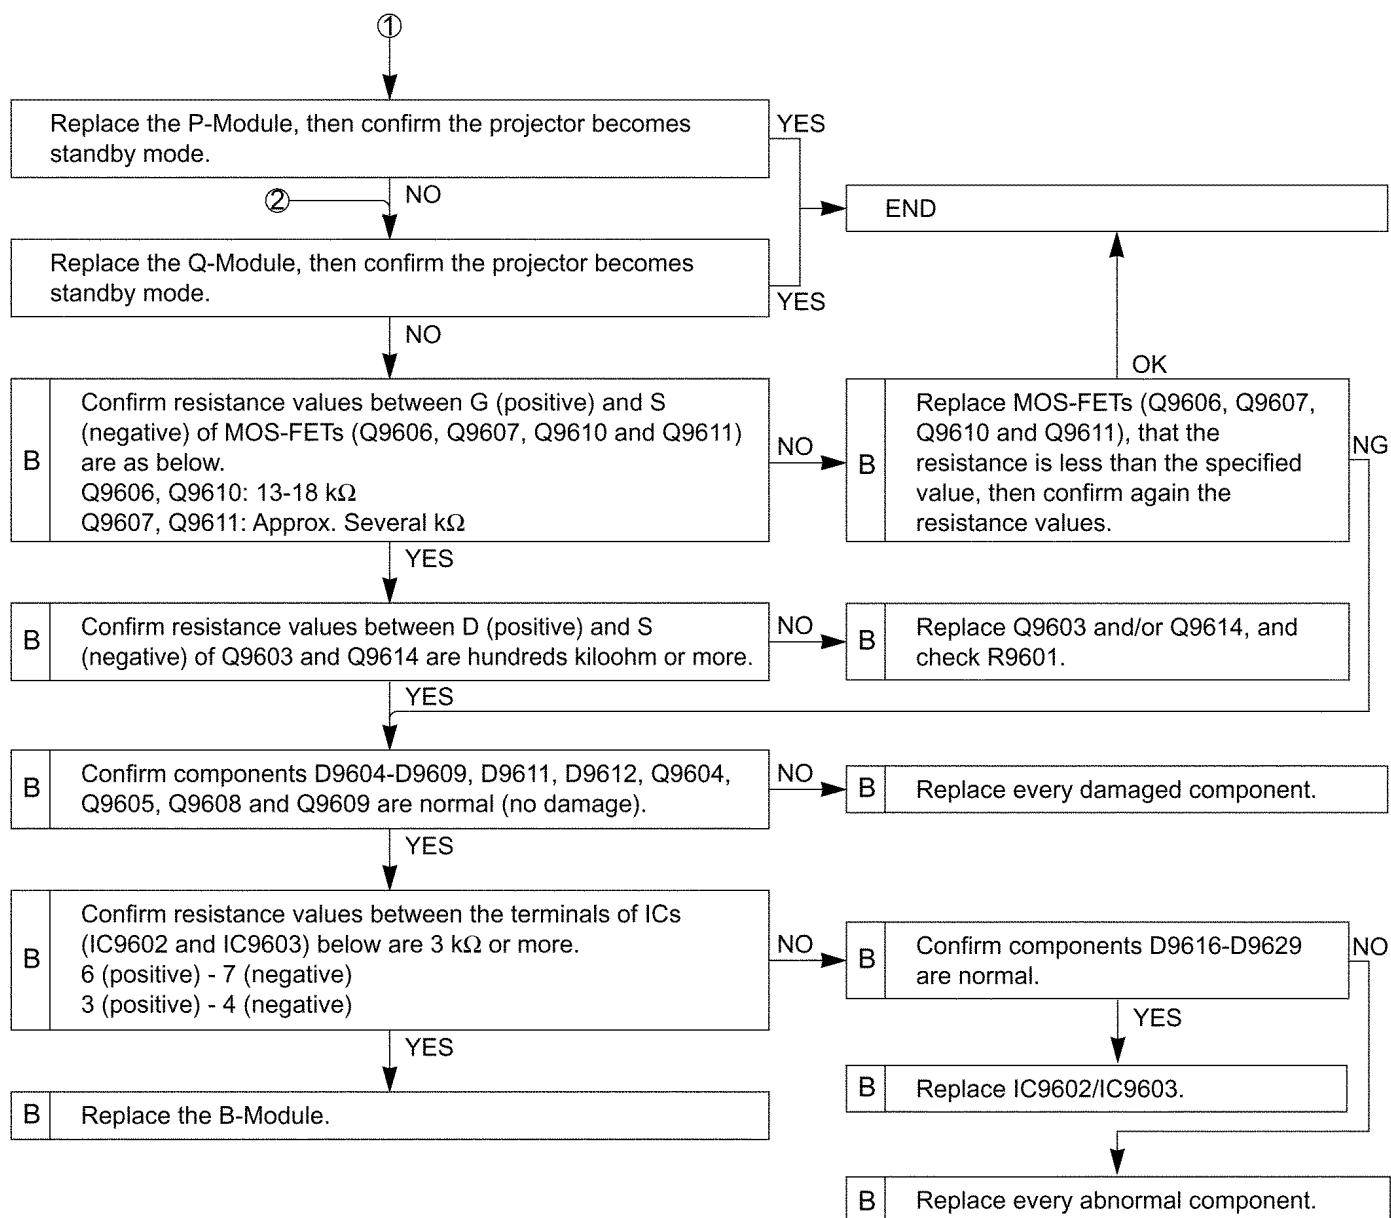


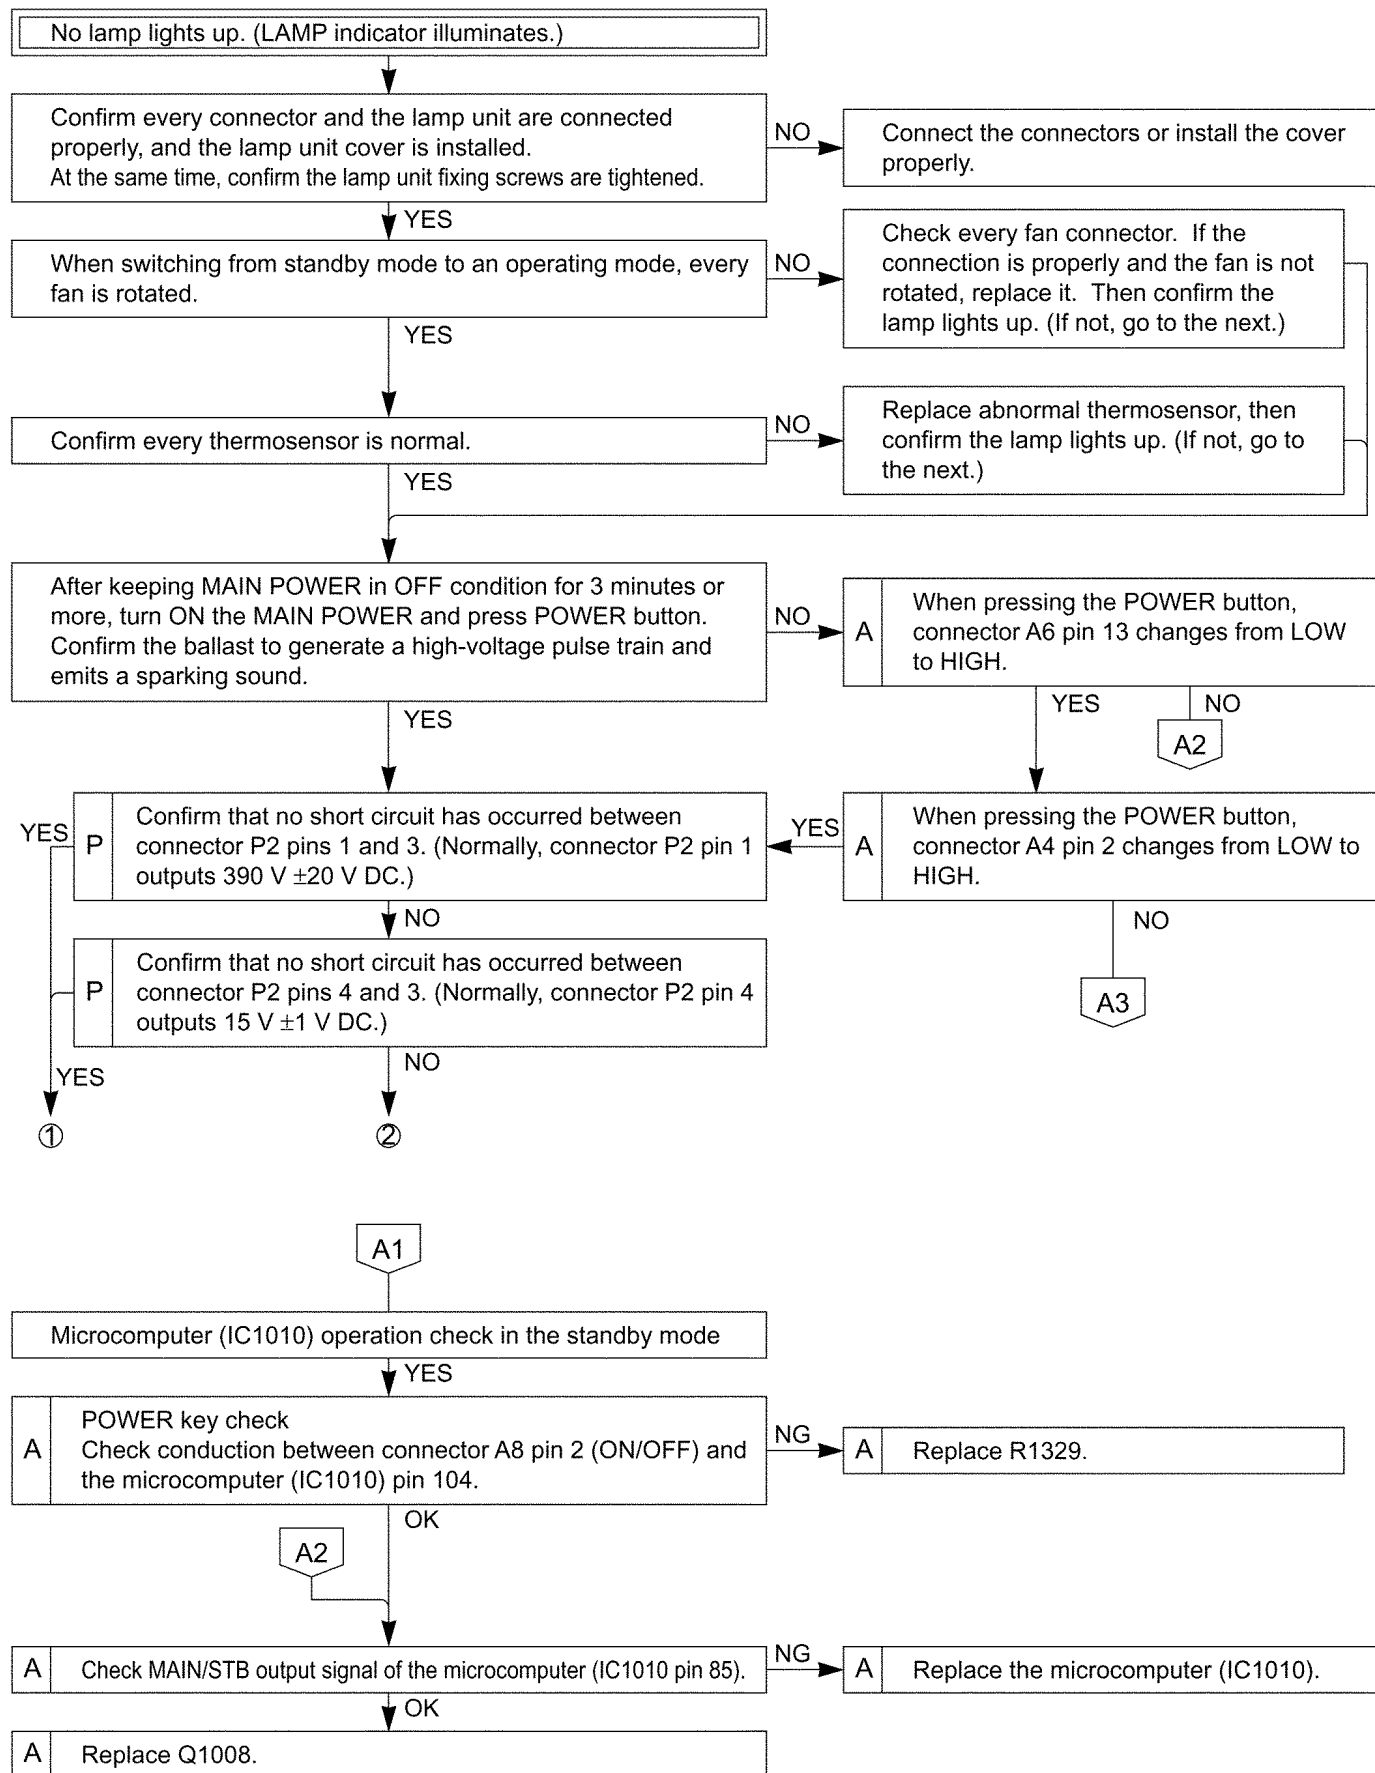


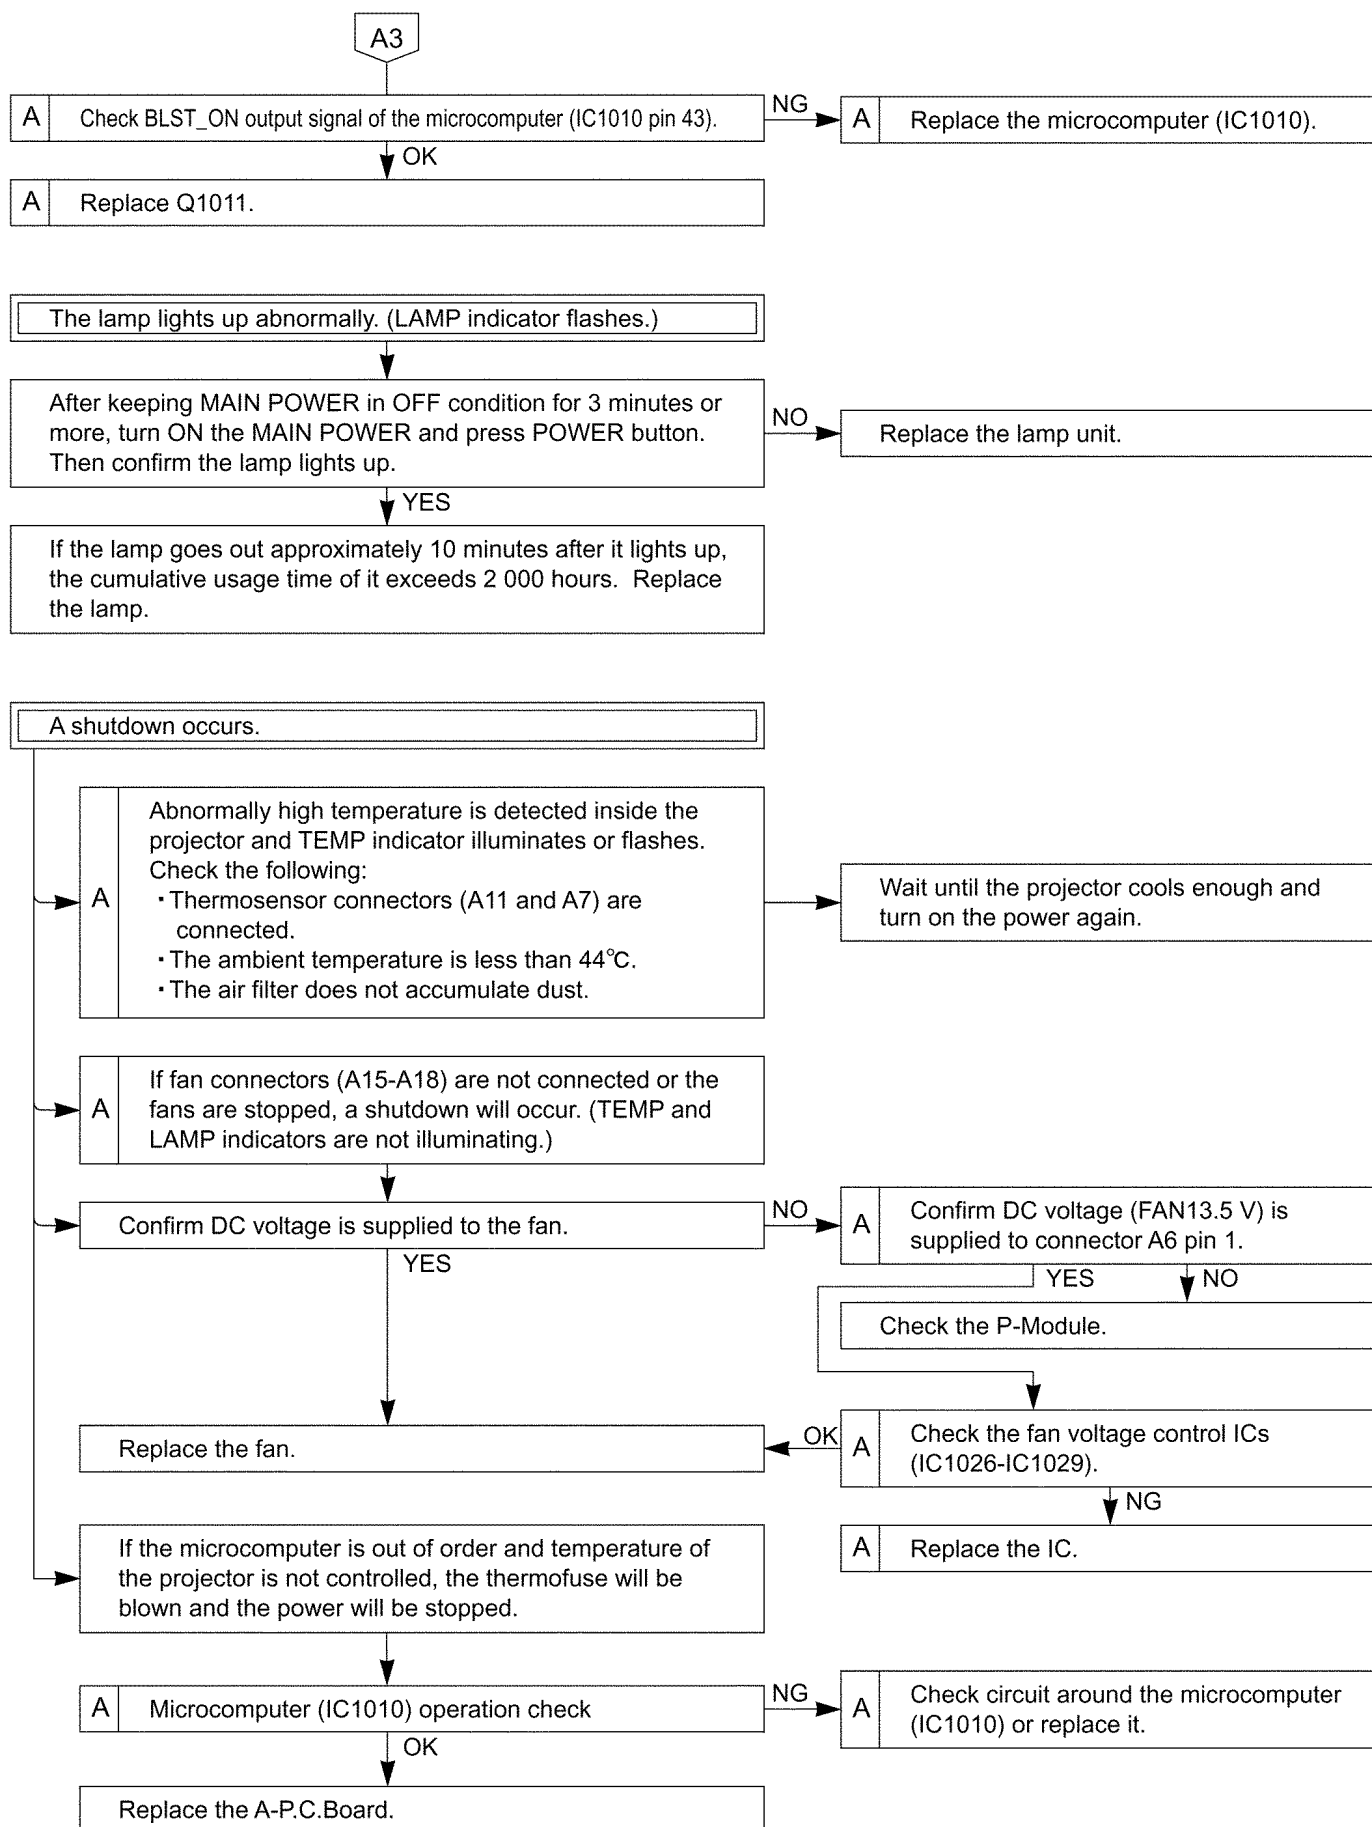

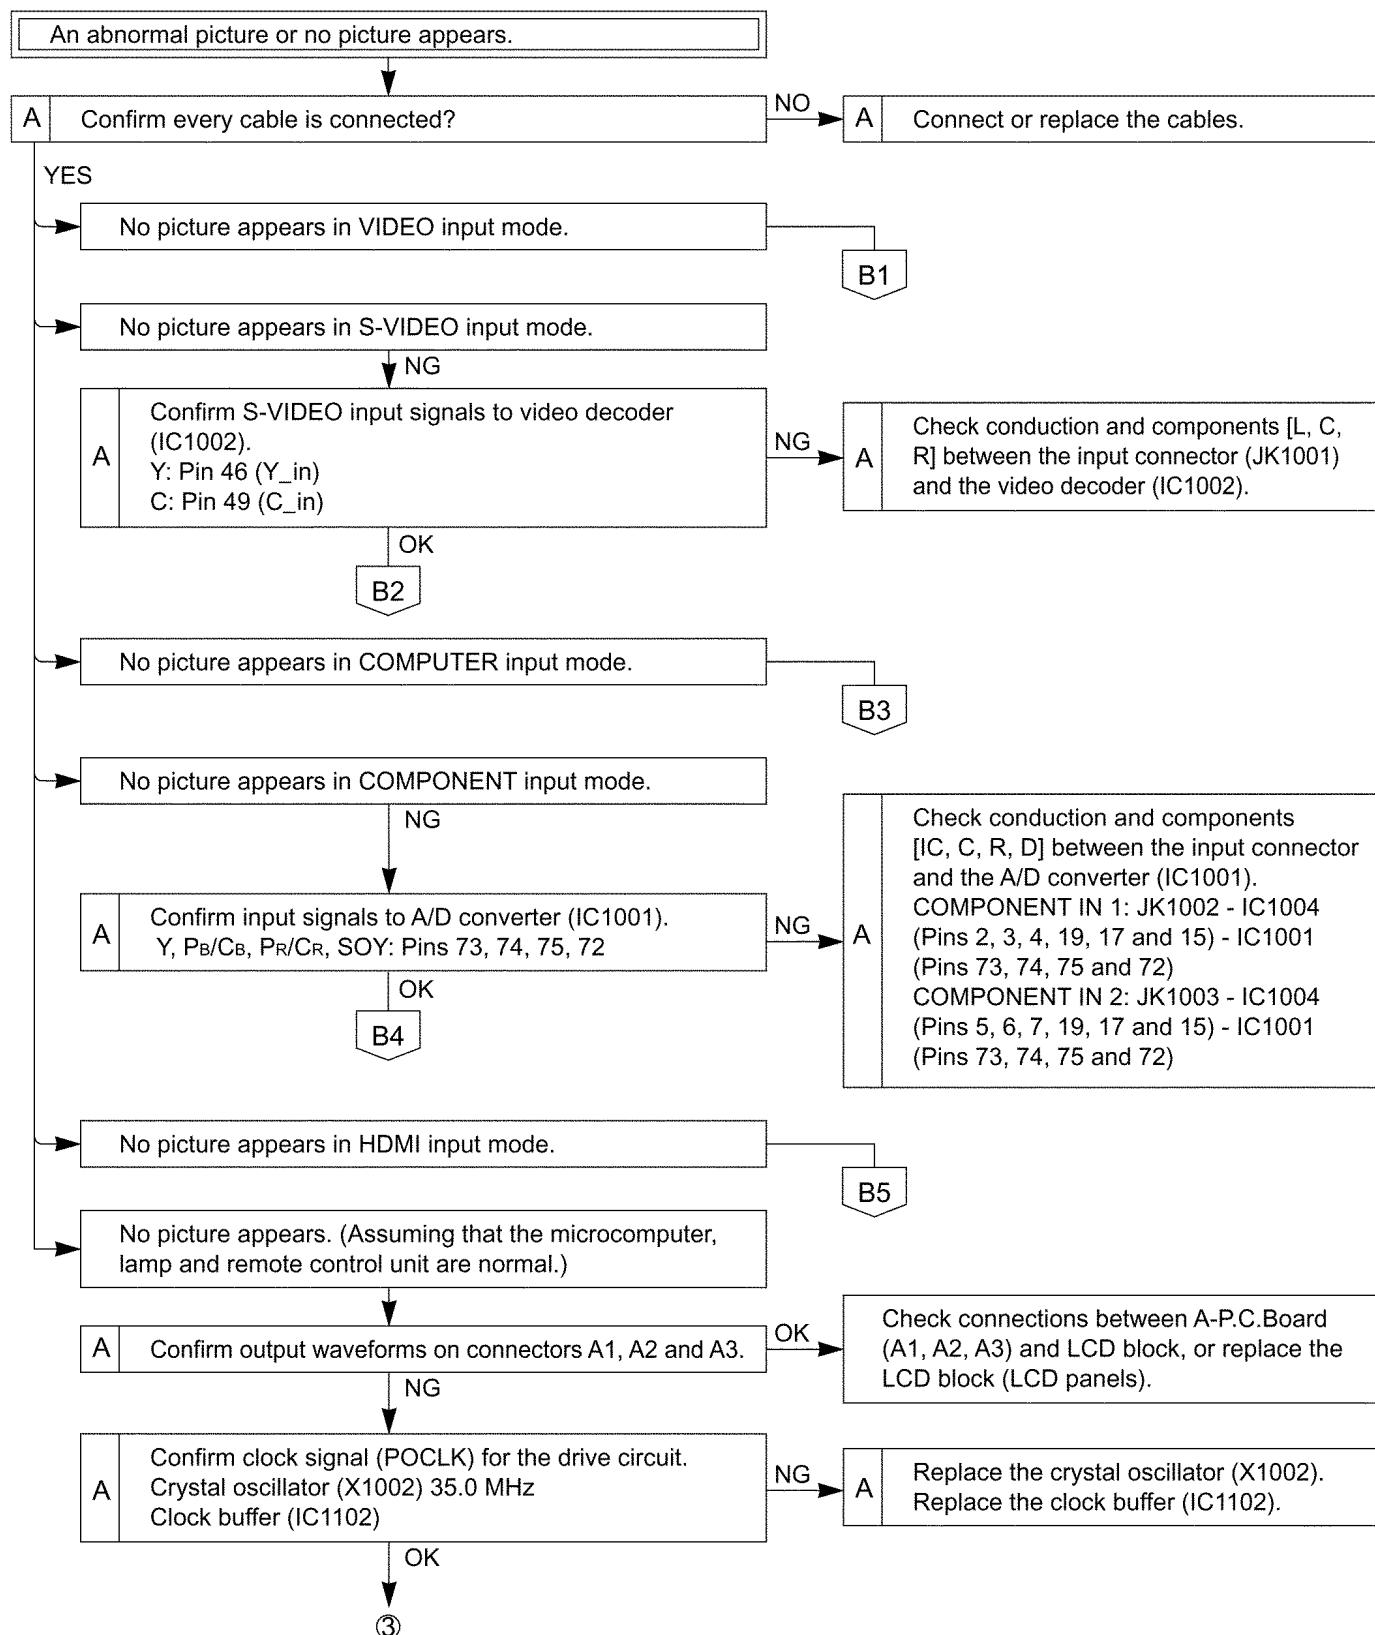

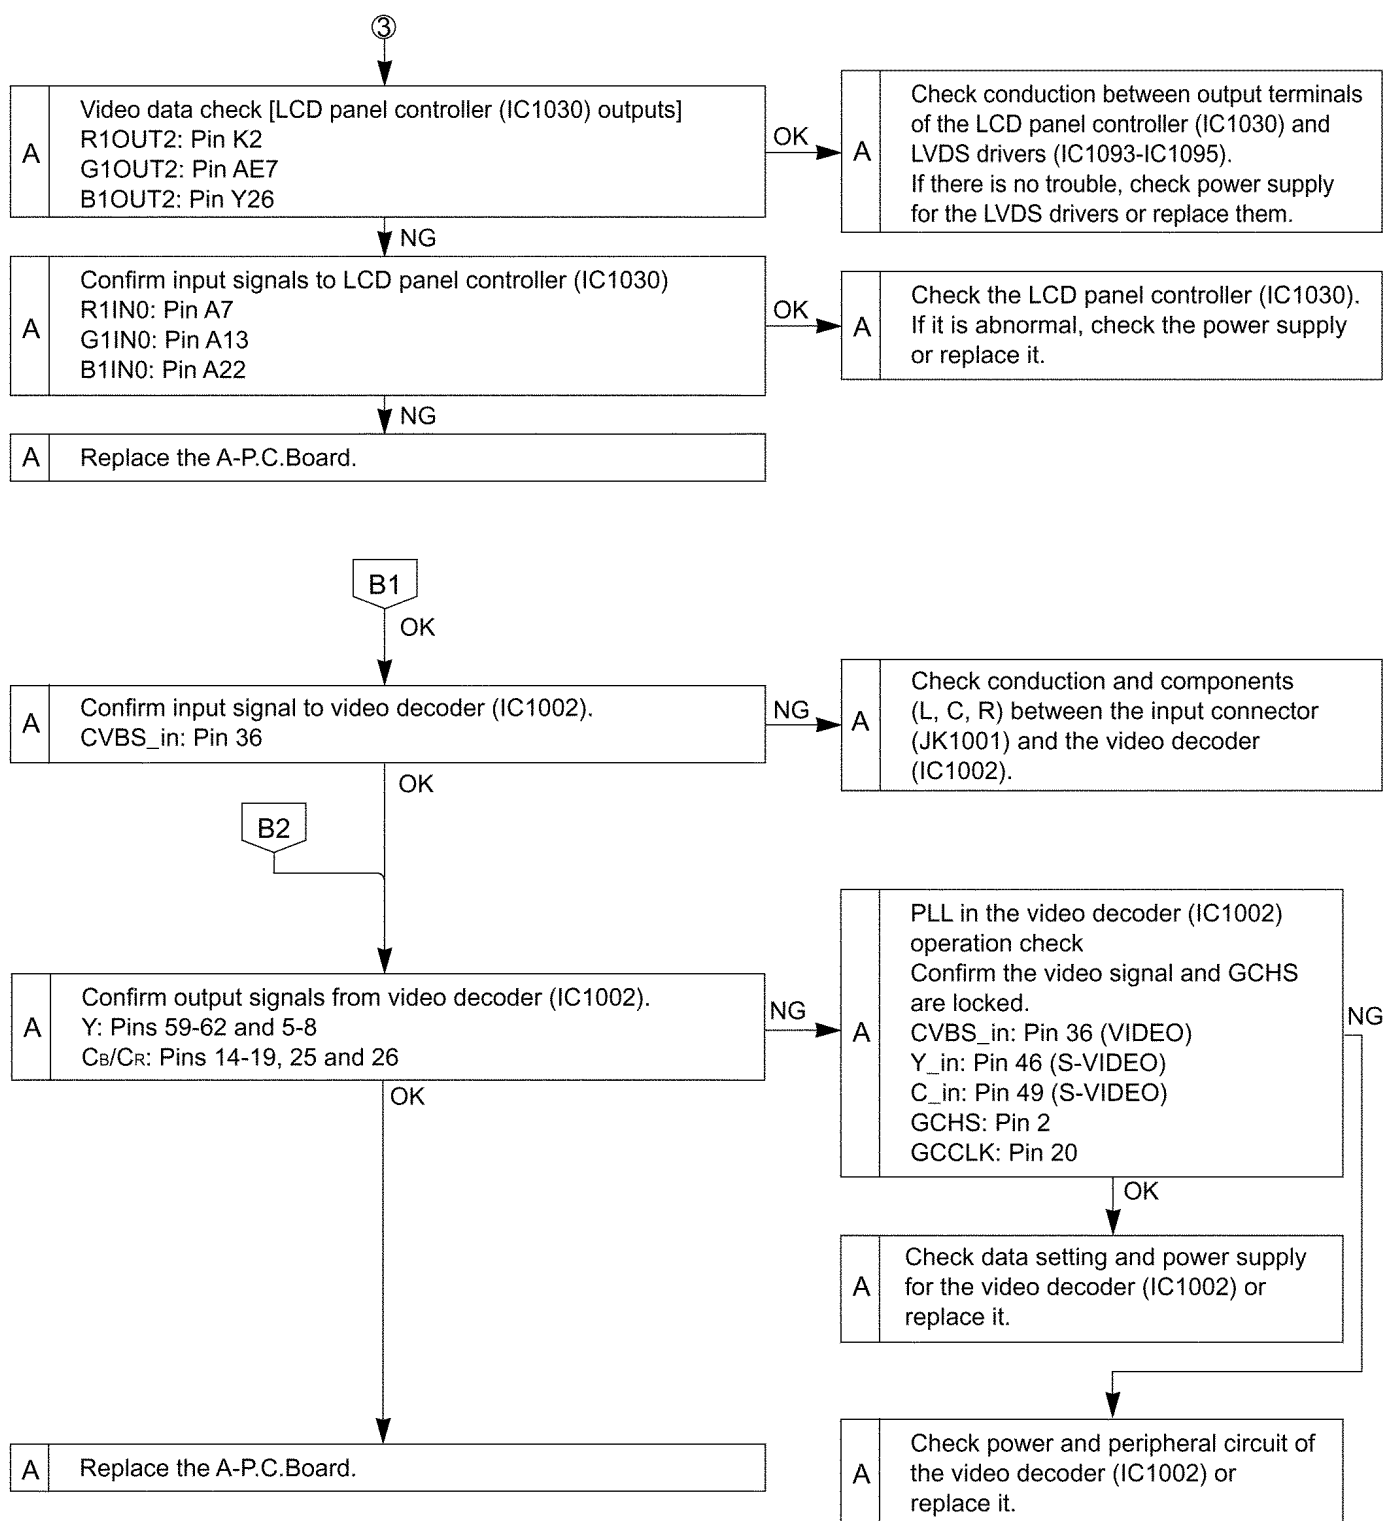


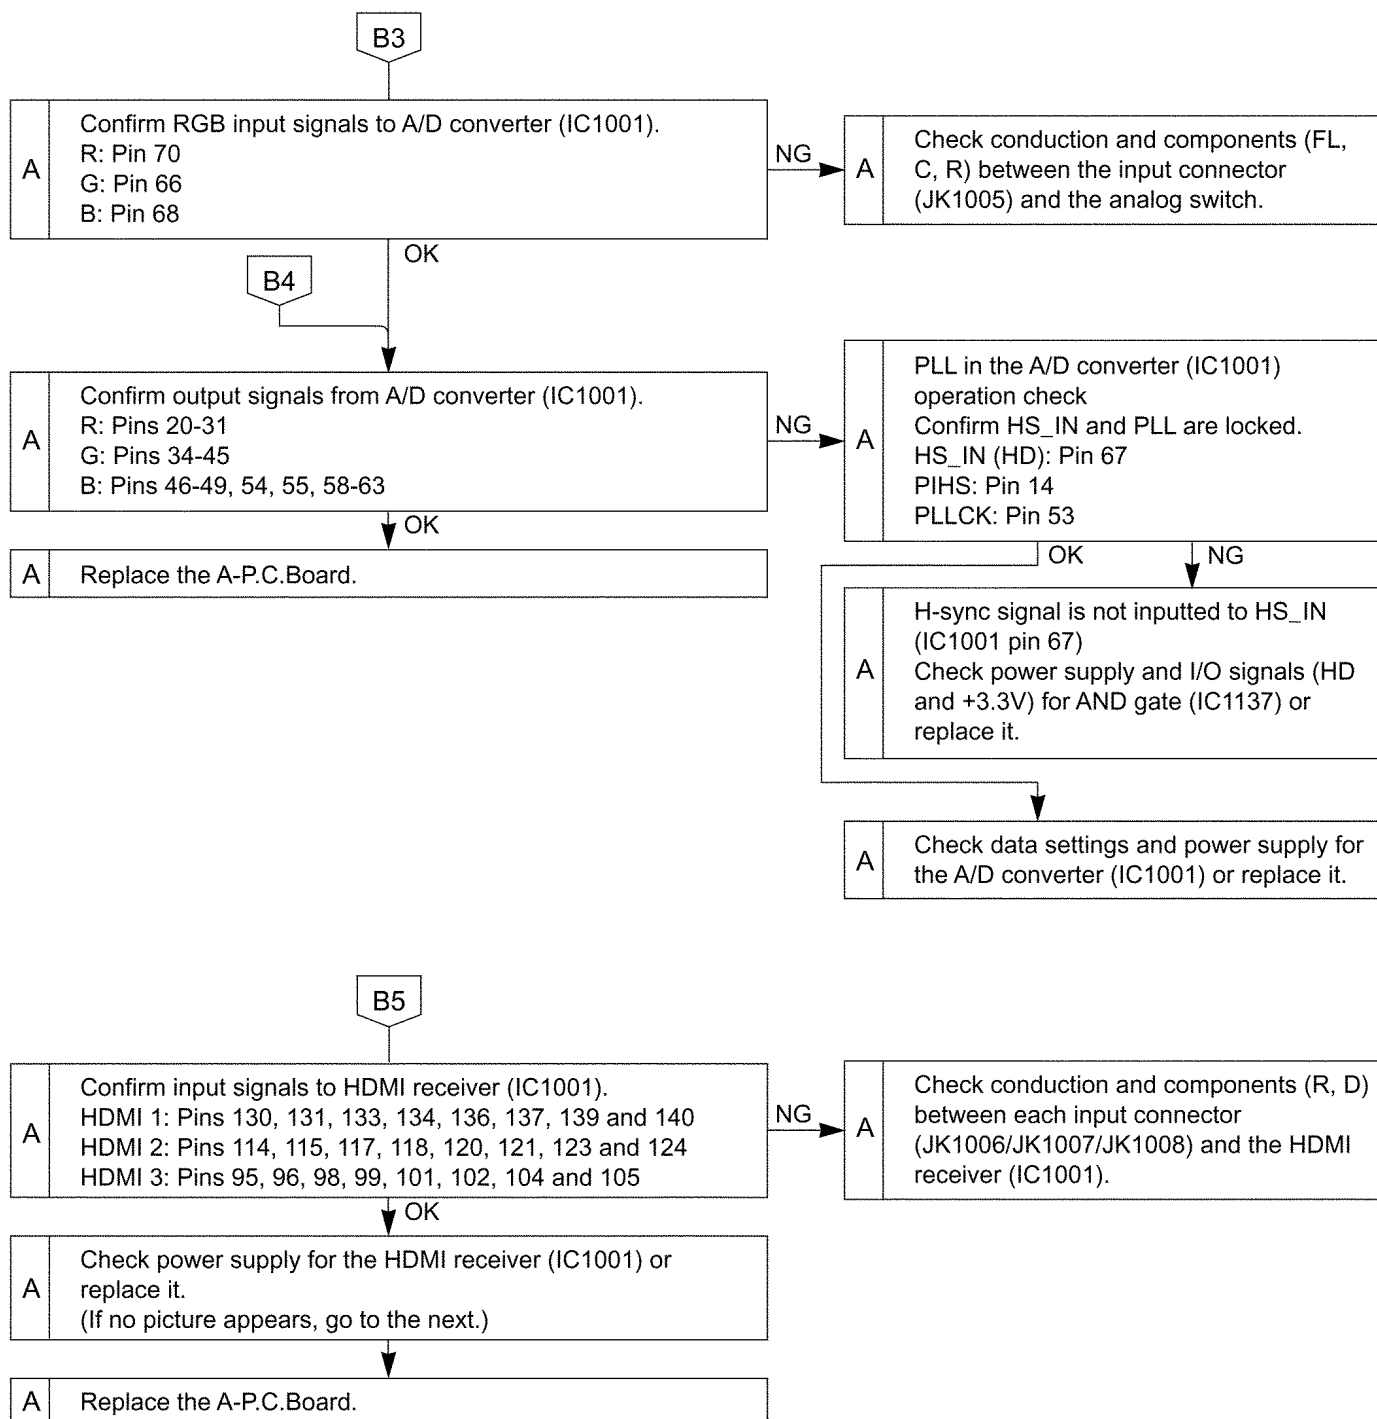

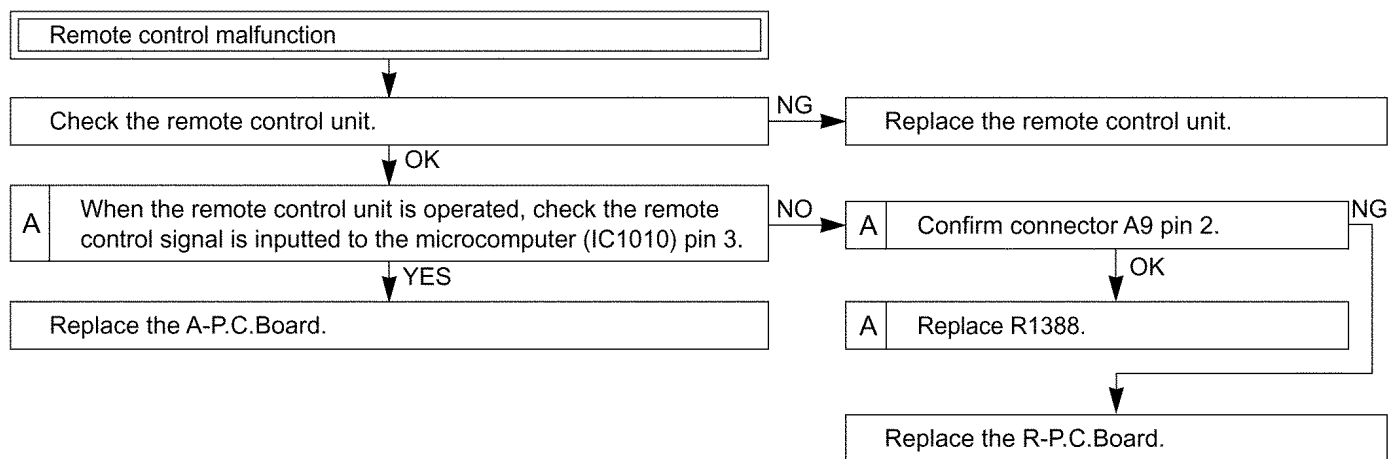


9 Interconnection Block Diagram

9.1. Interconnection Block Diagram (1/2)

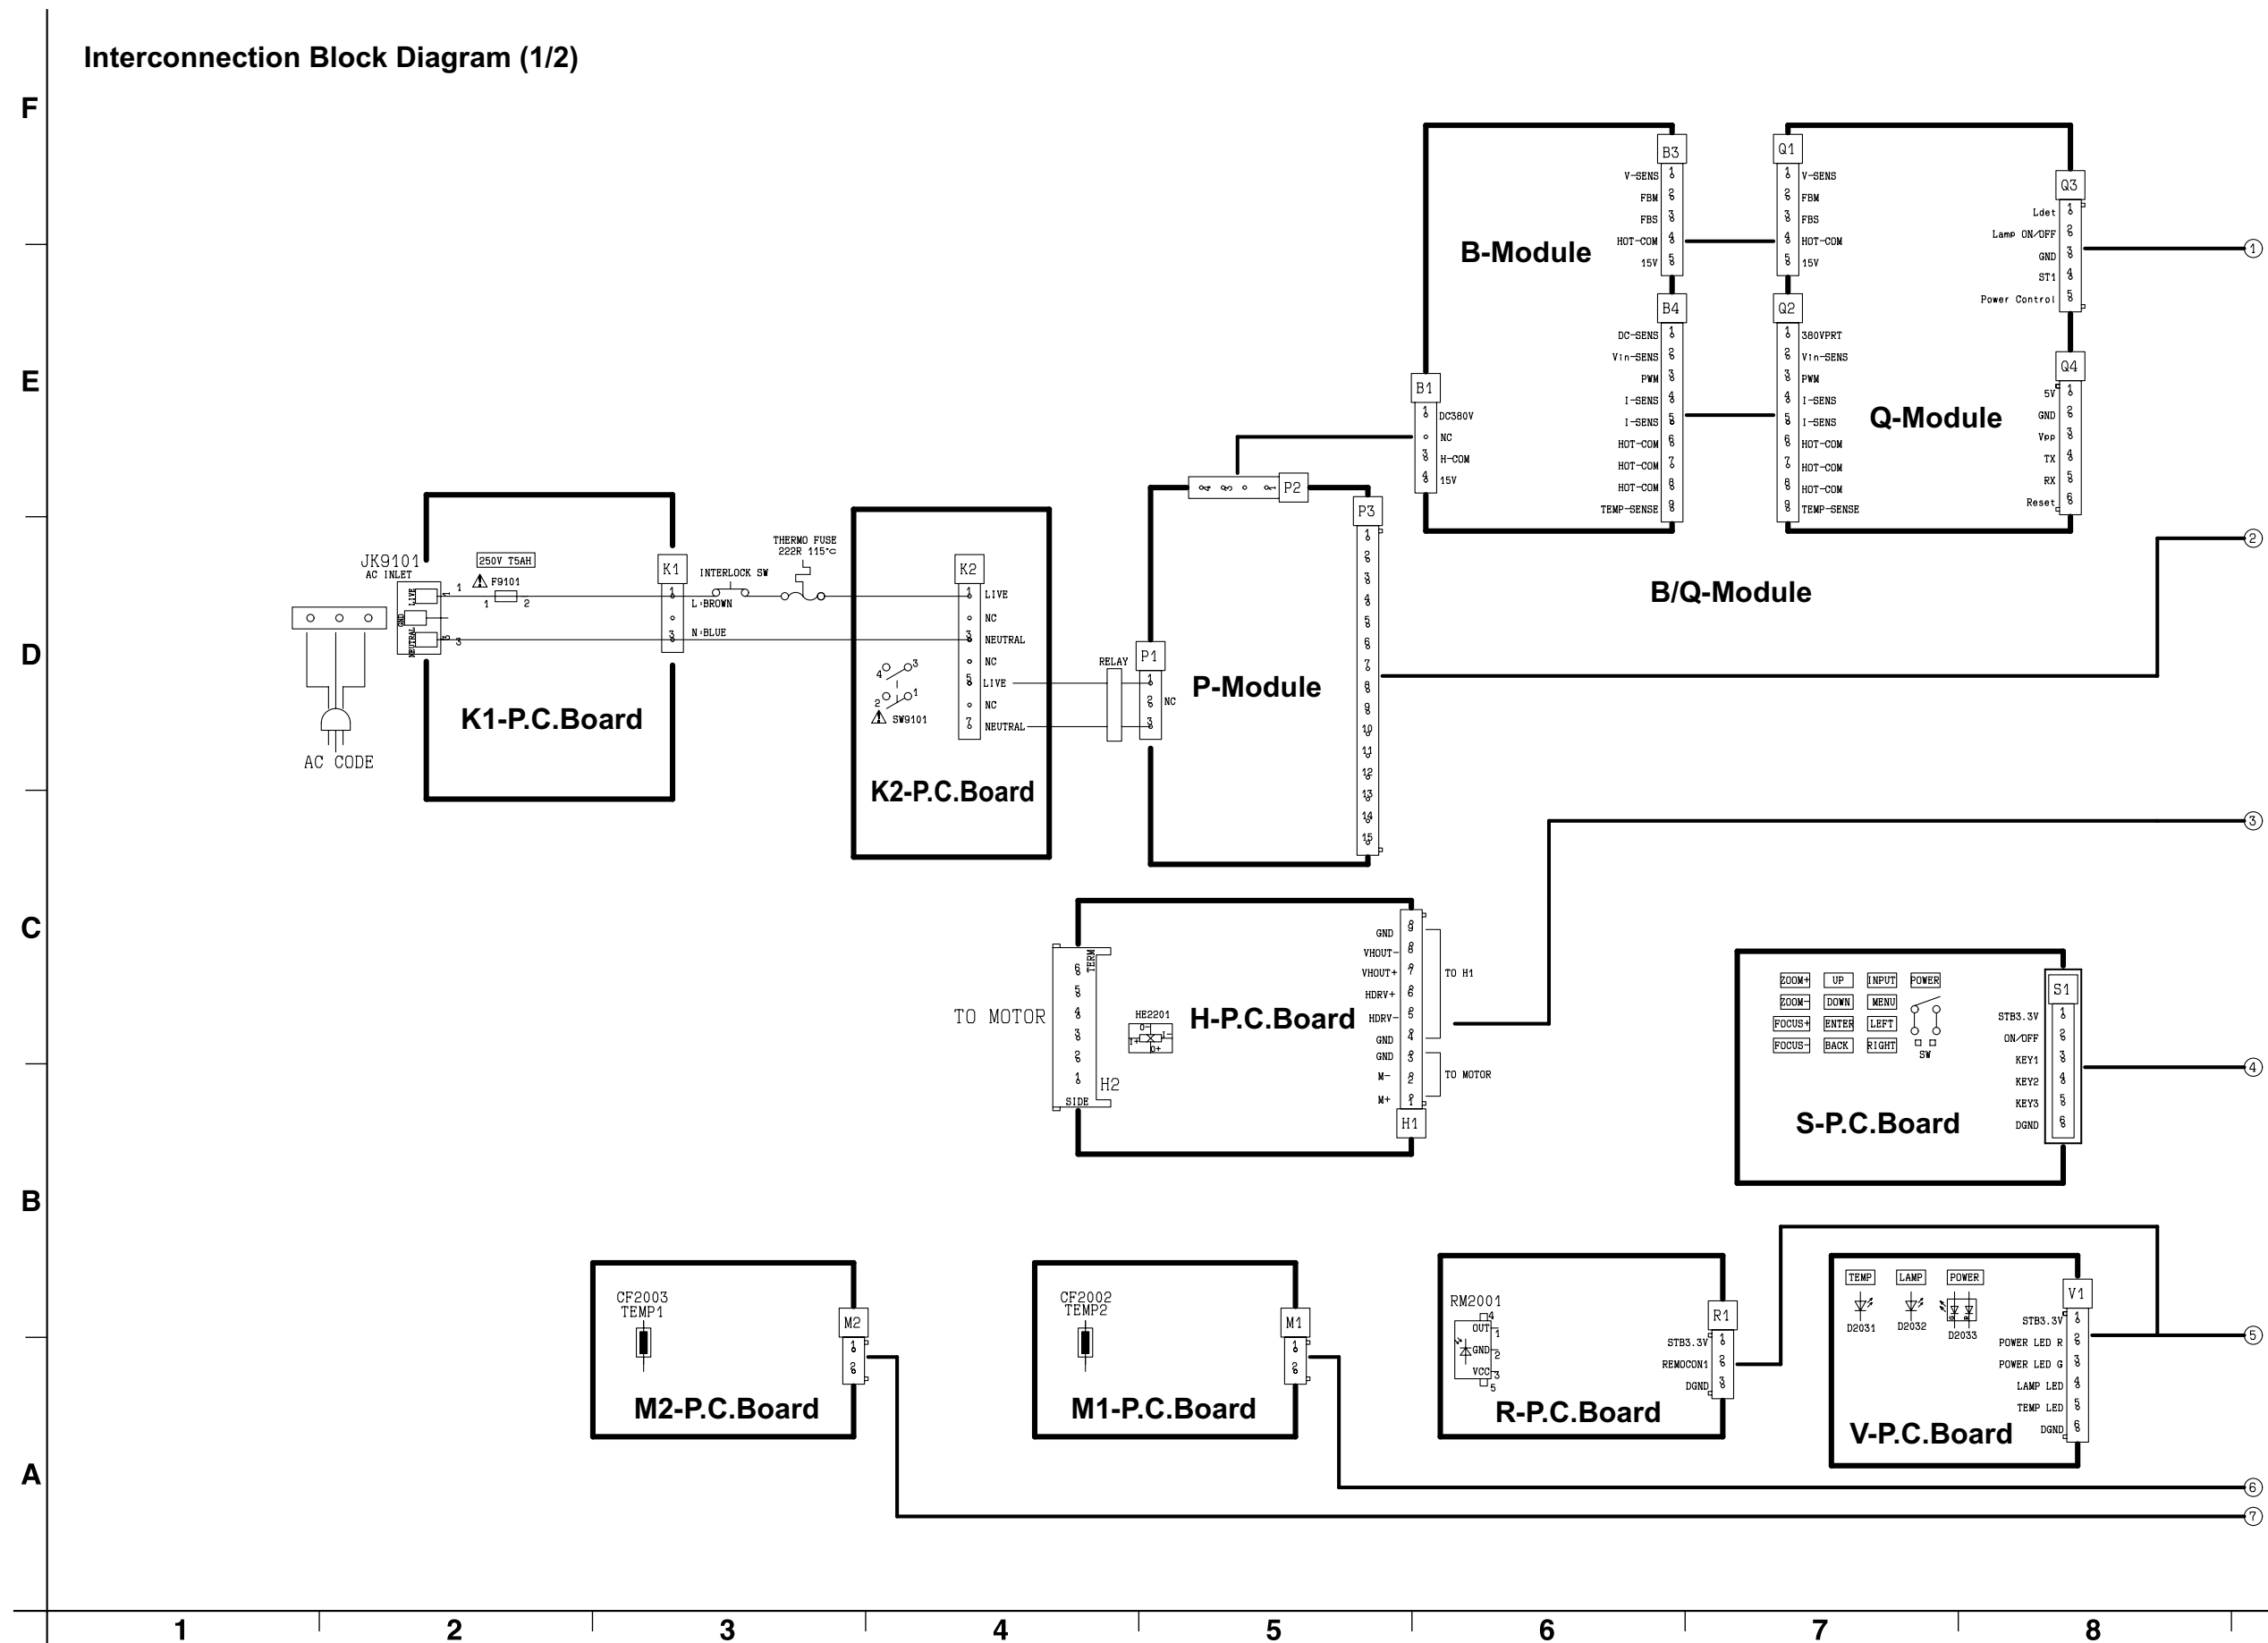


9.2. Interconnection Block Diagram (2/2)

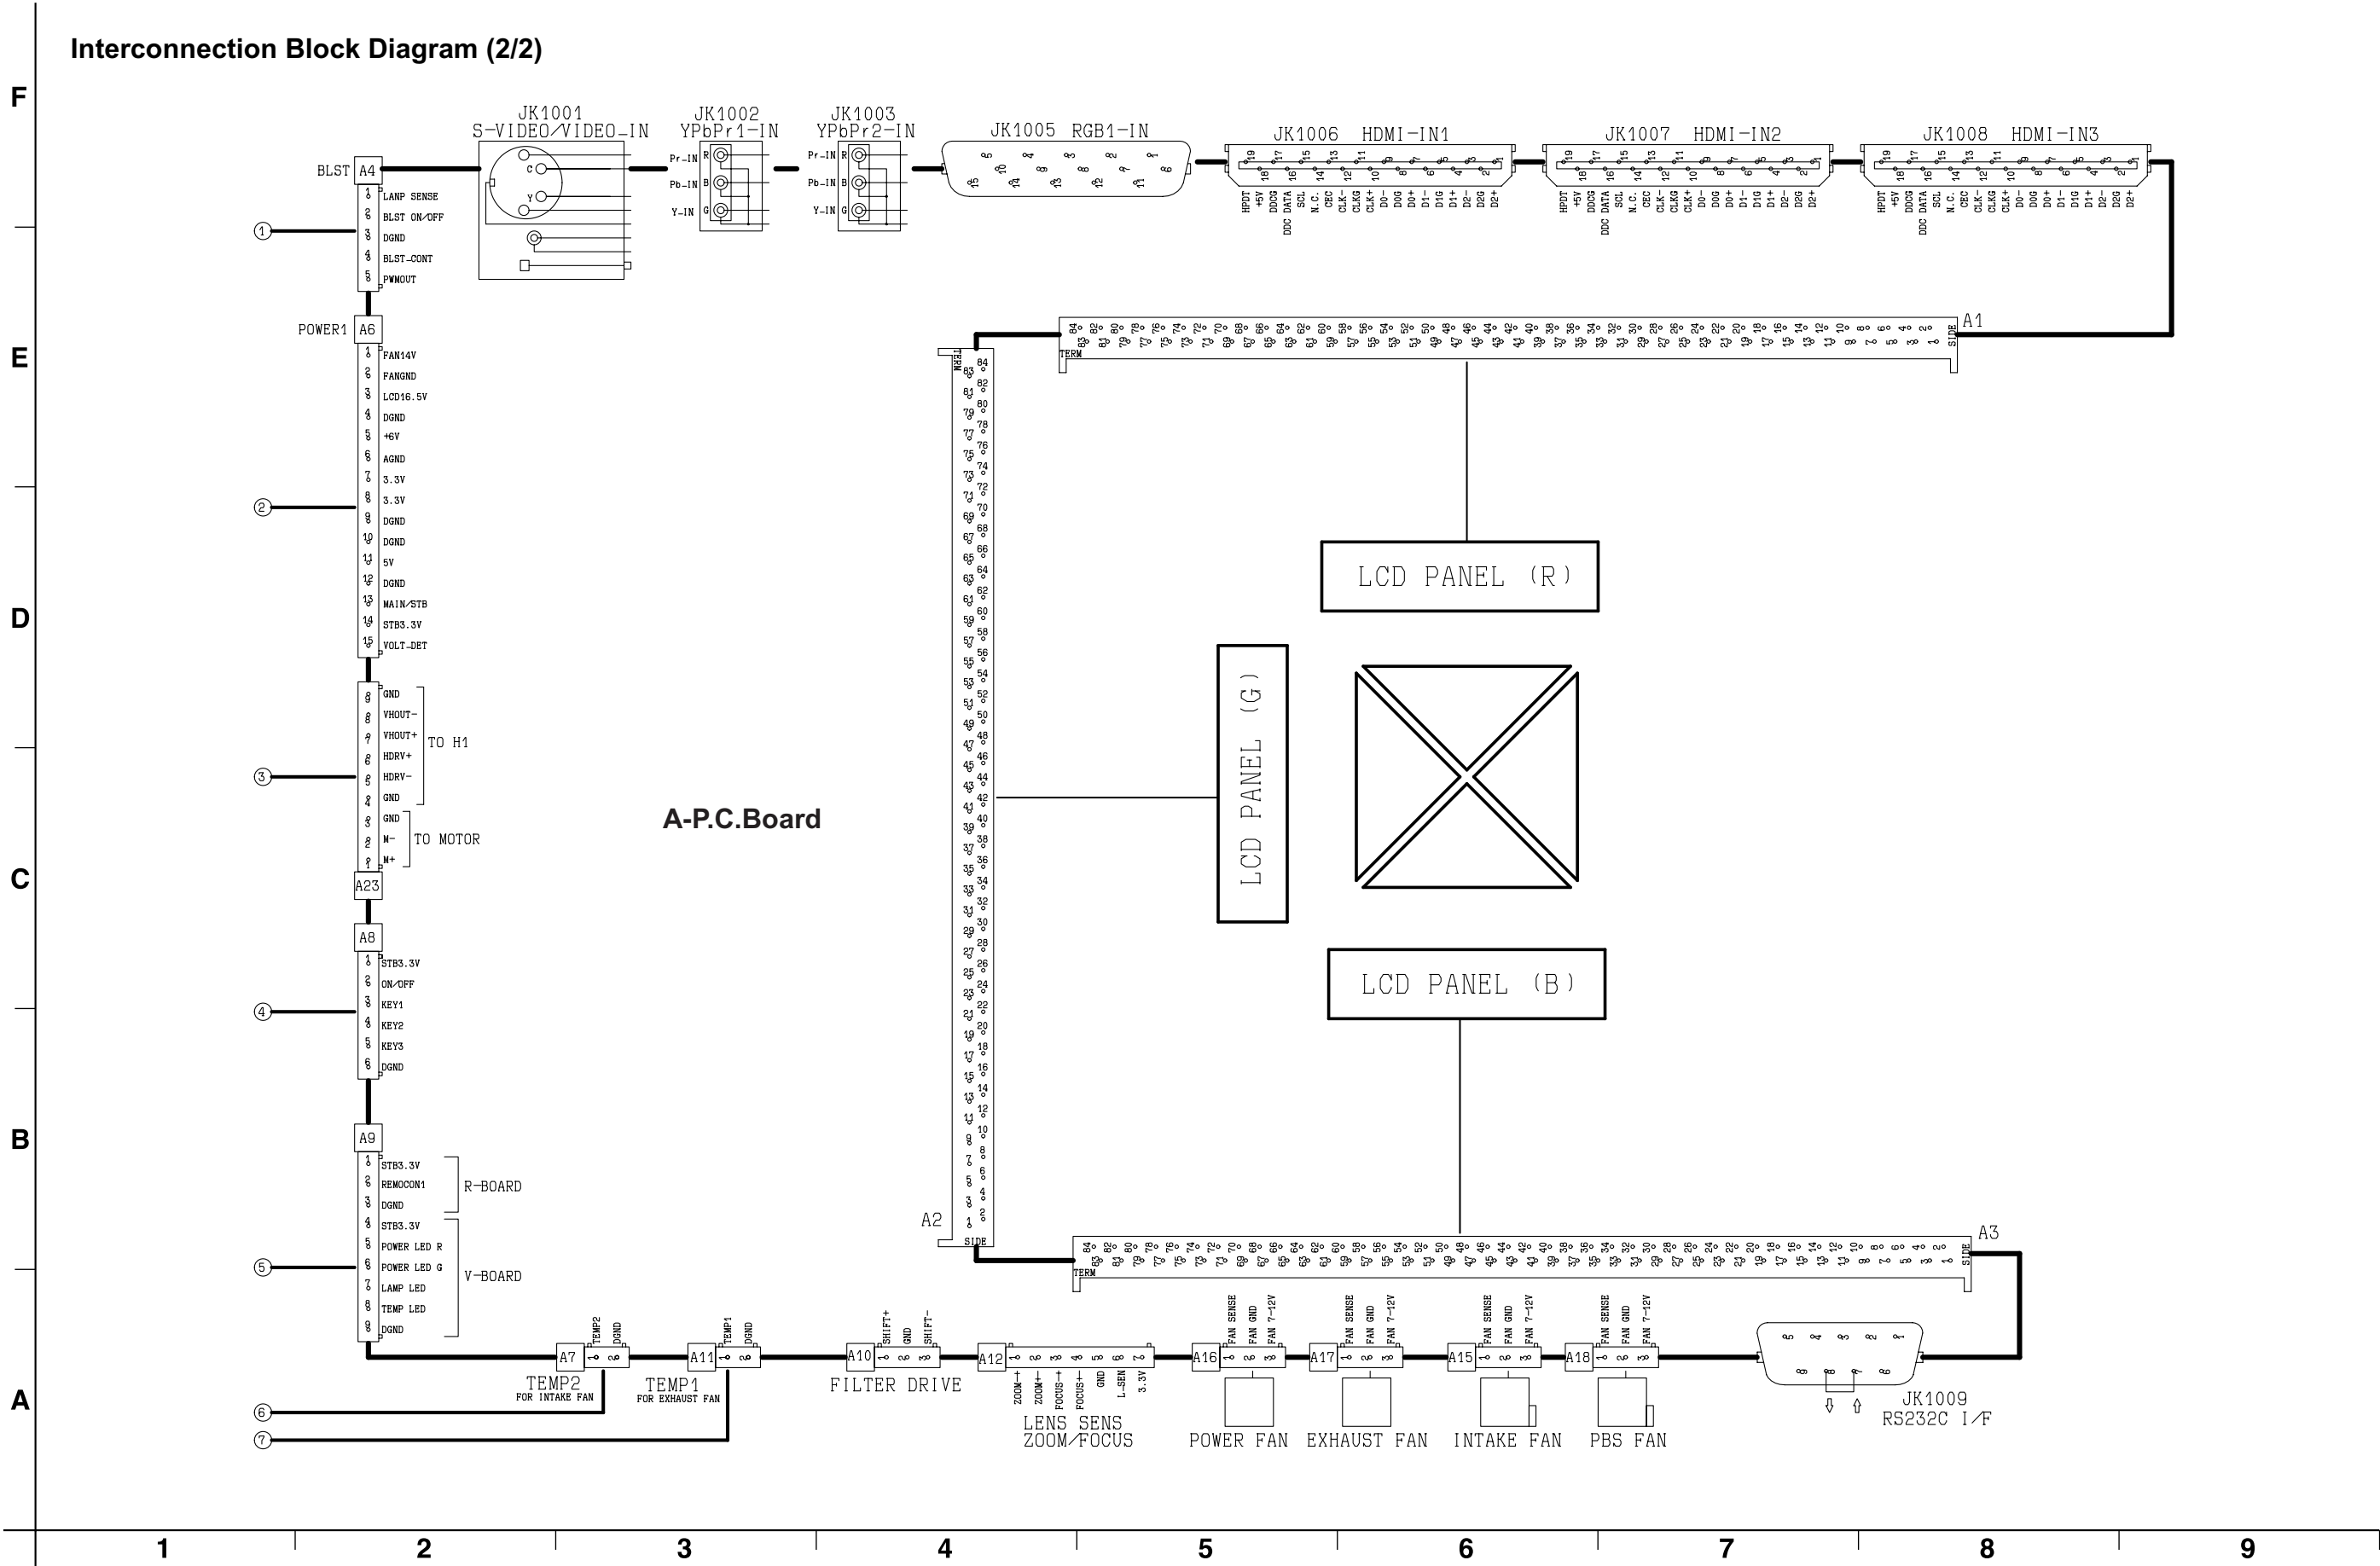


10 Block Diagram


10.1. Power Supply

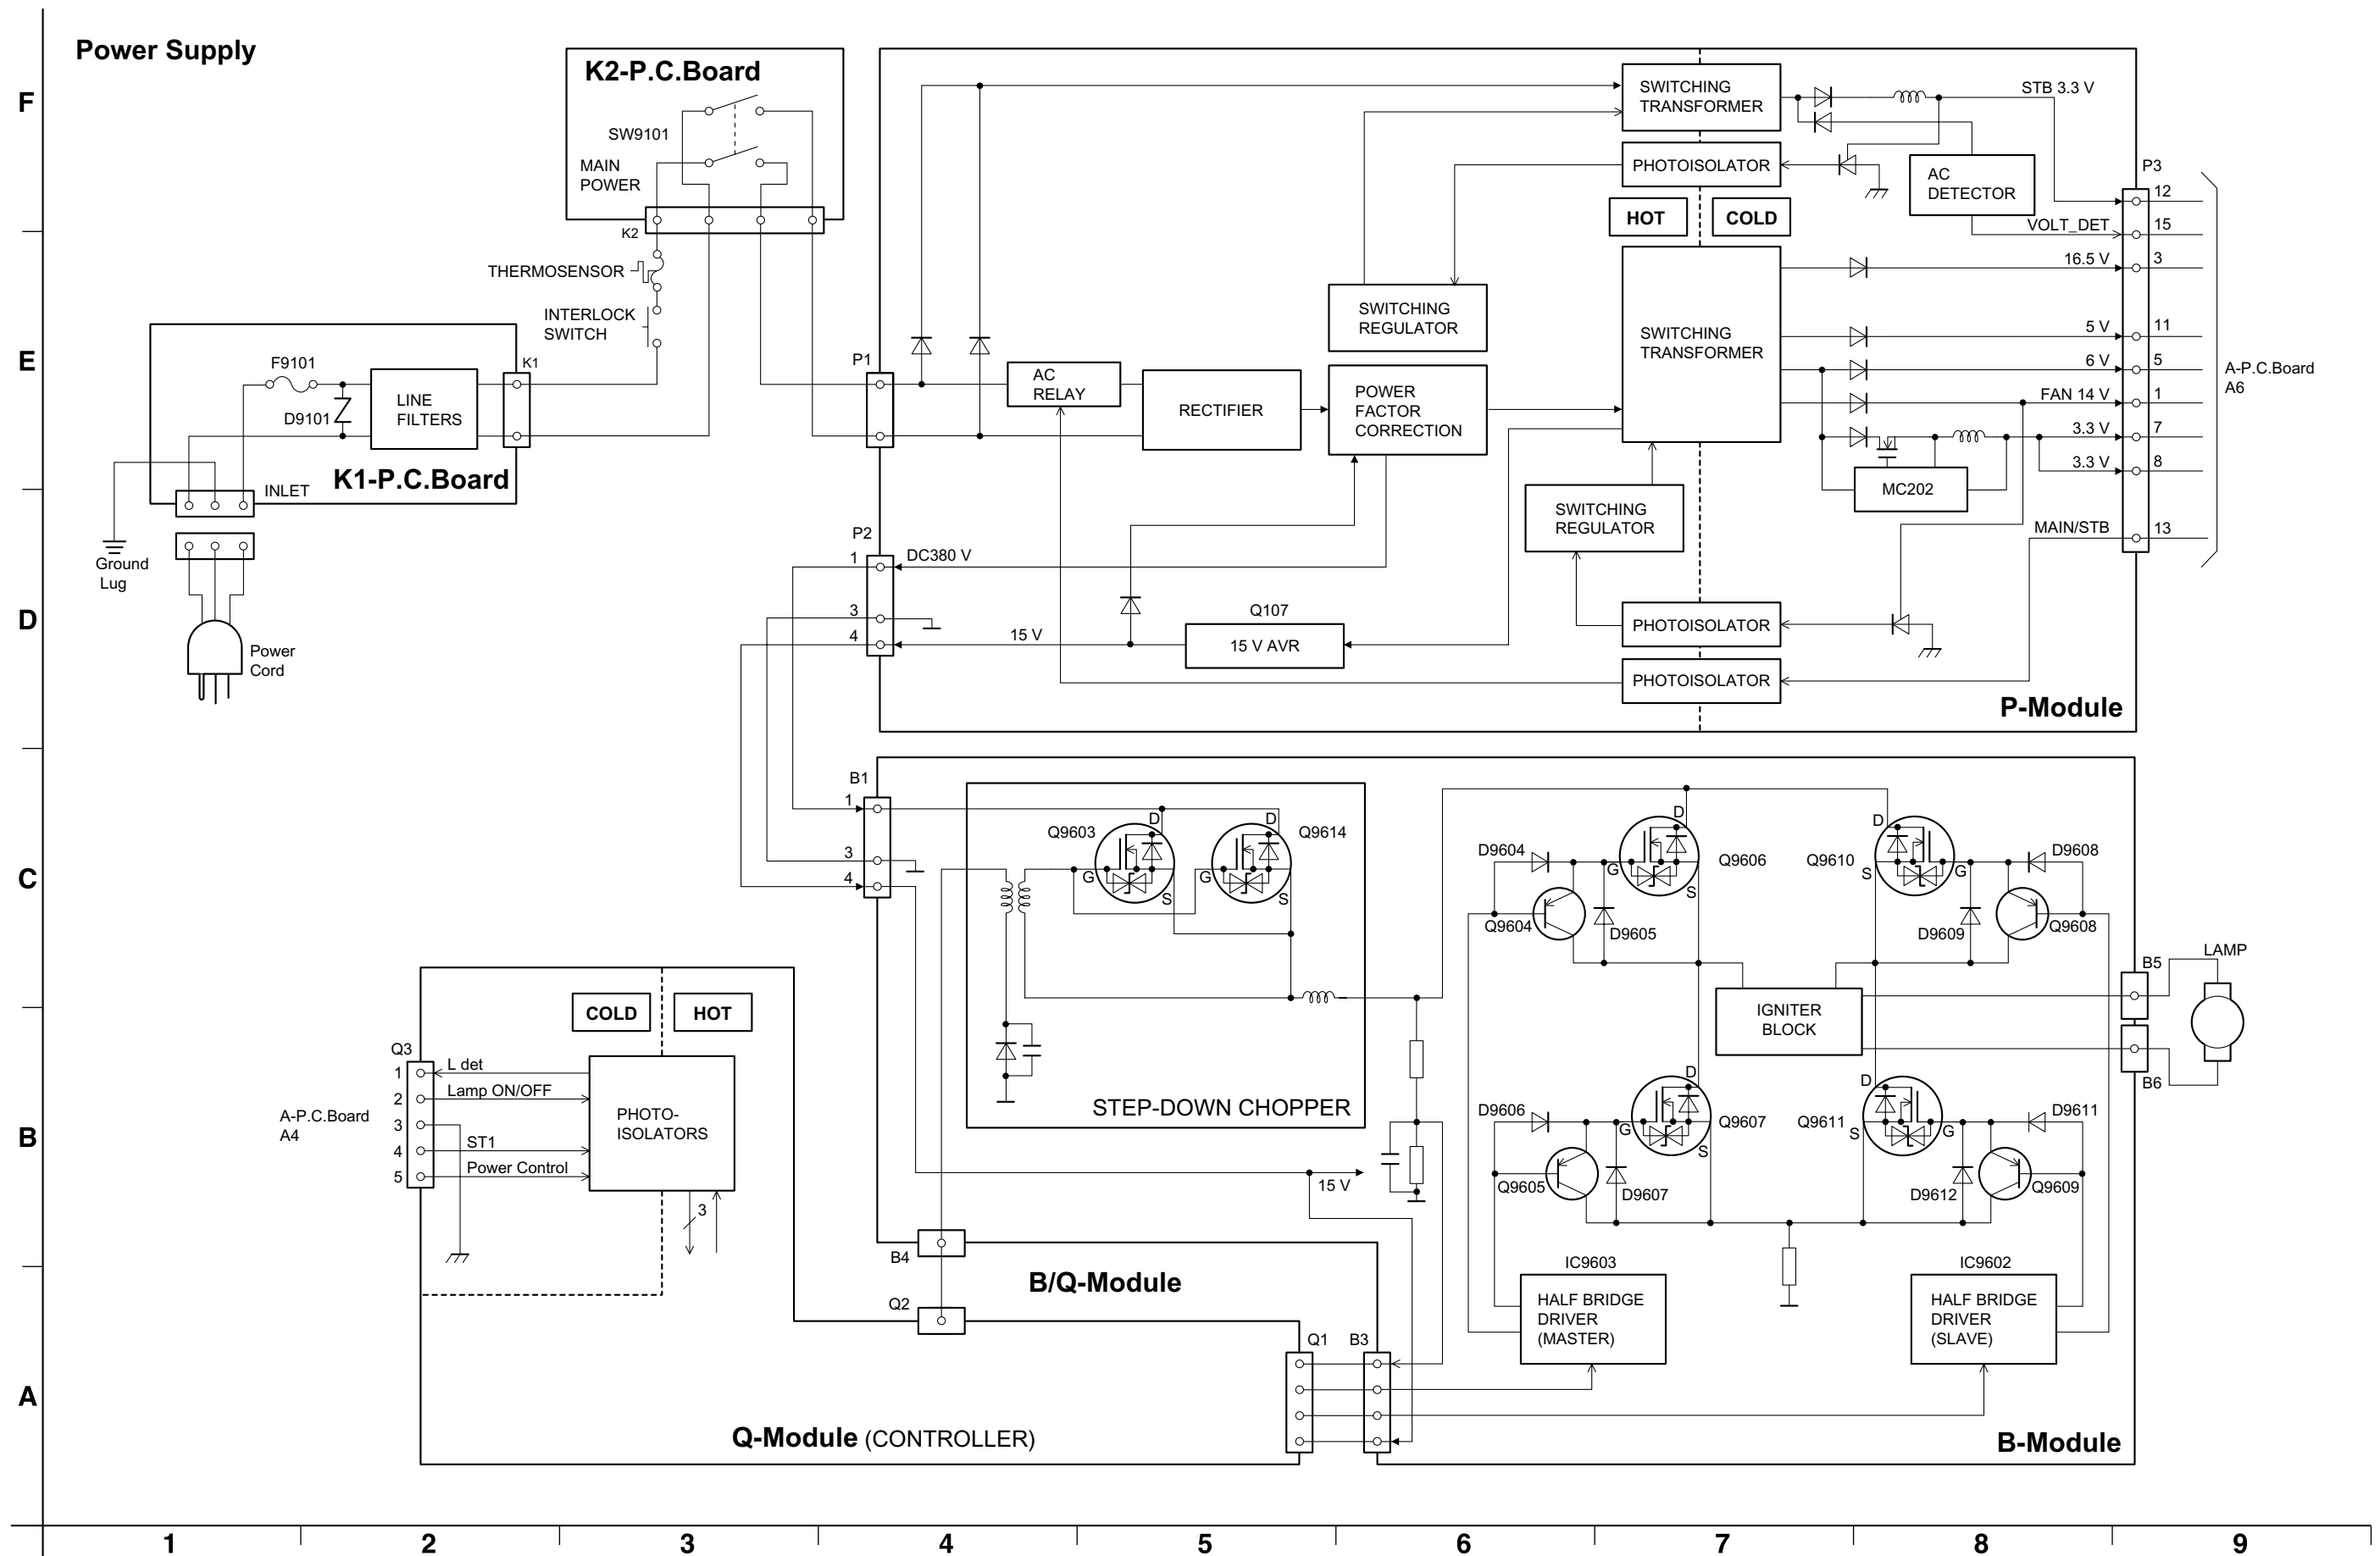

10.2. Signal Processing (1/3)

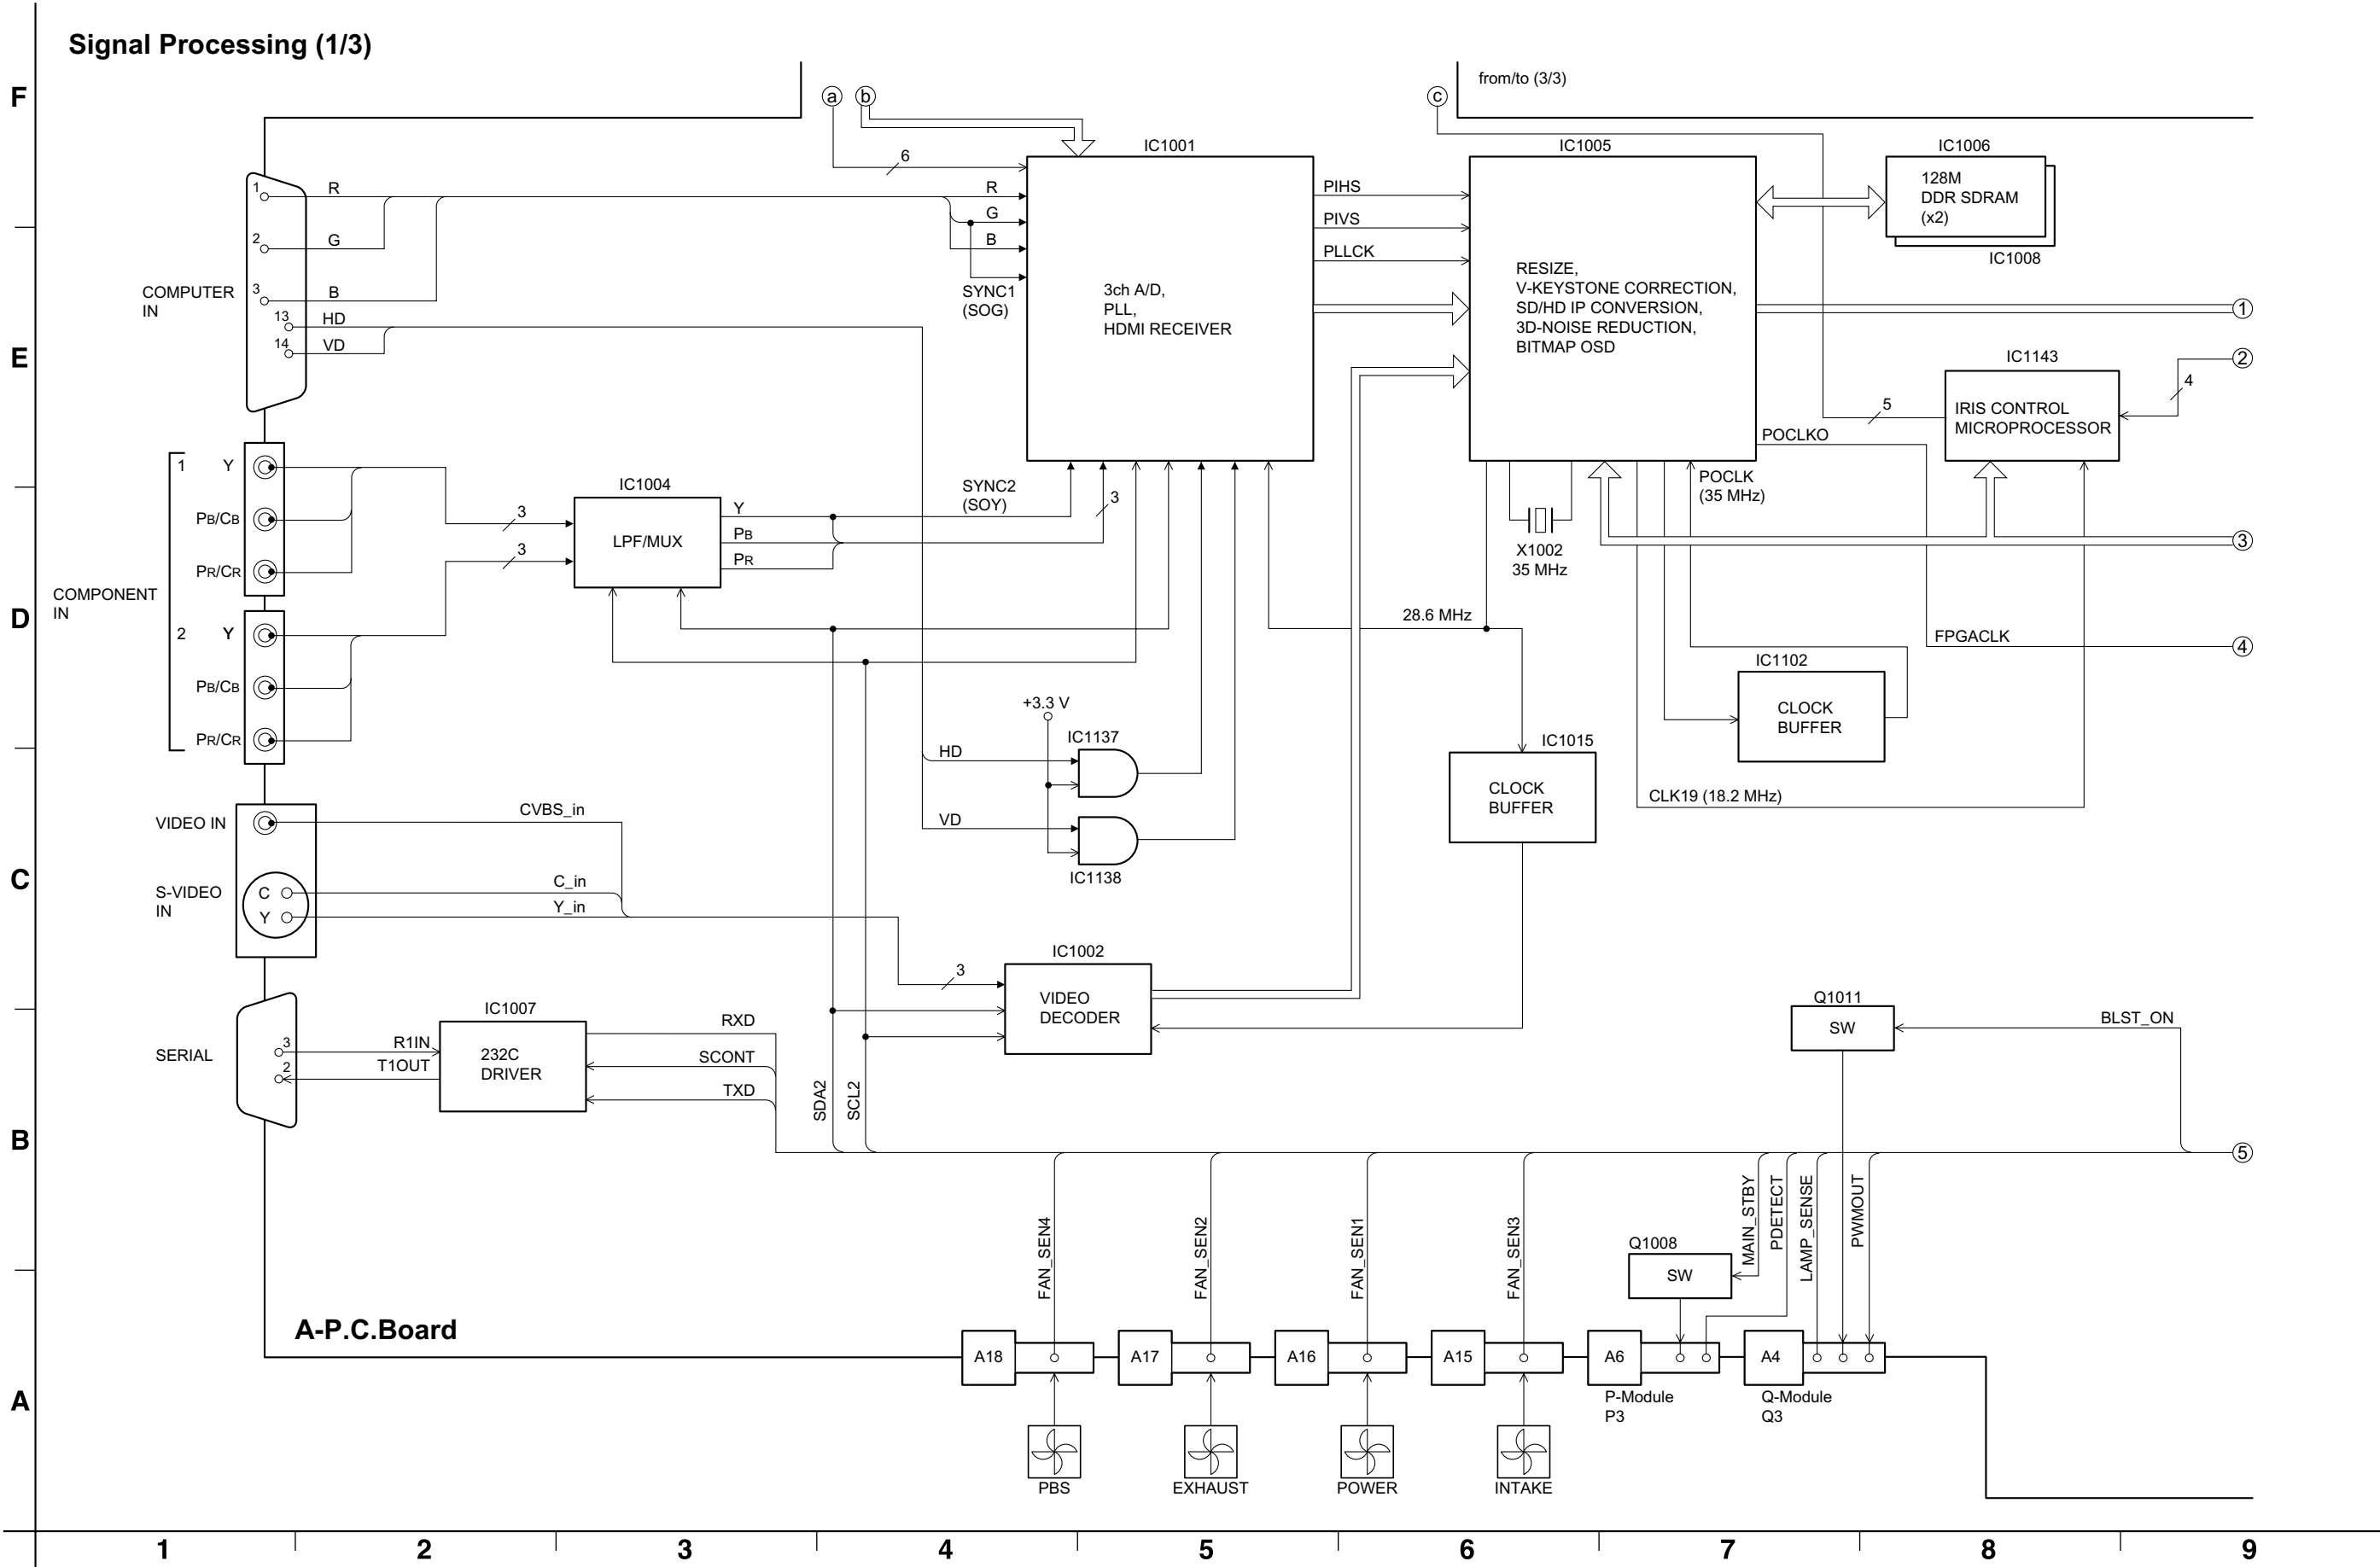

10.3. Signal Processing (2/3)

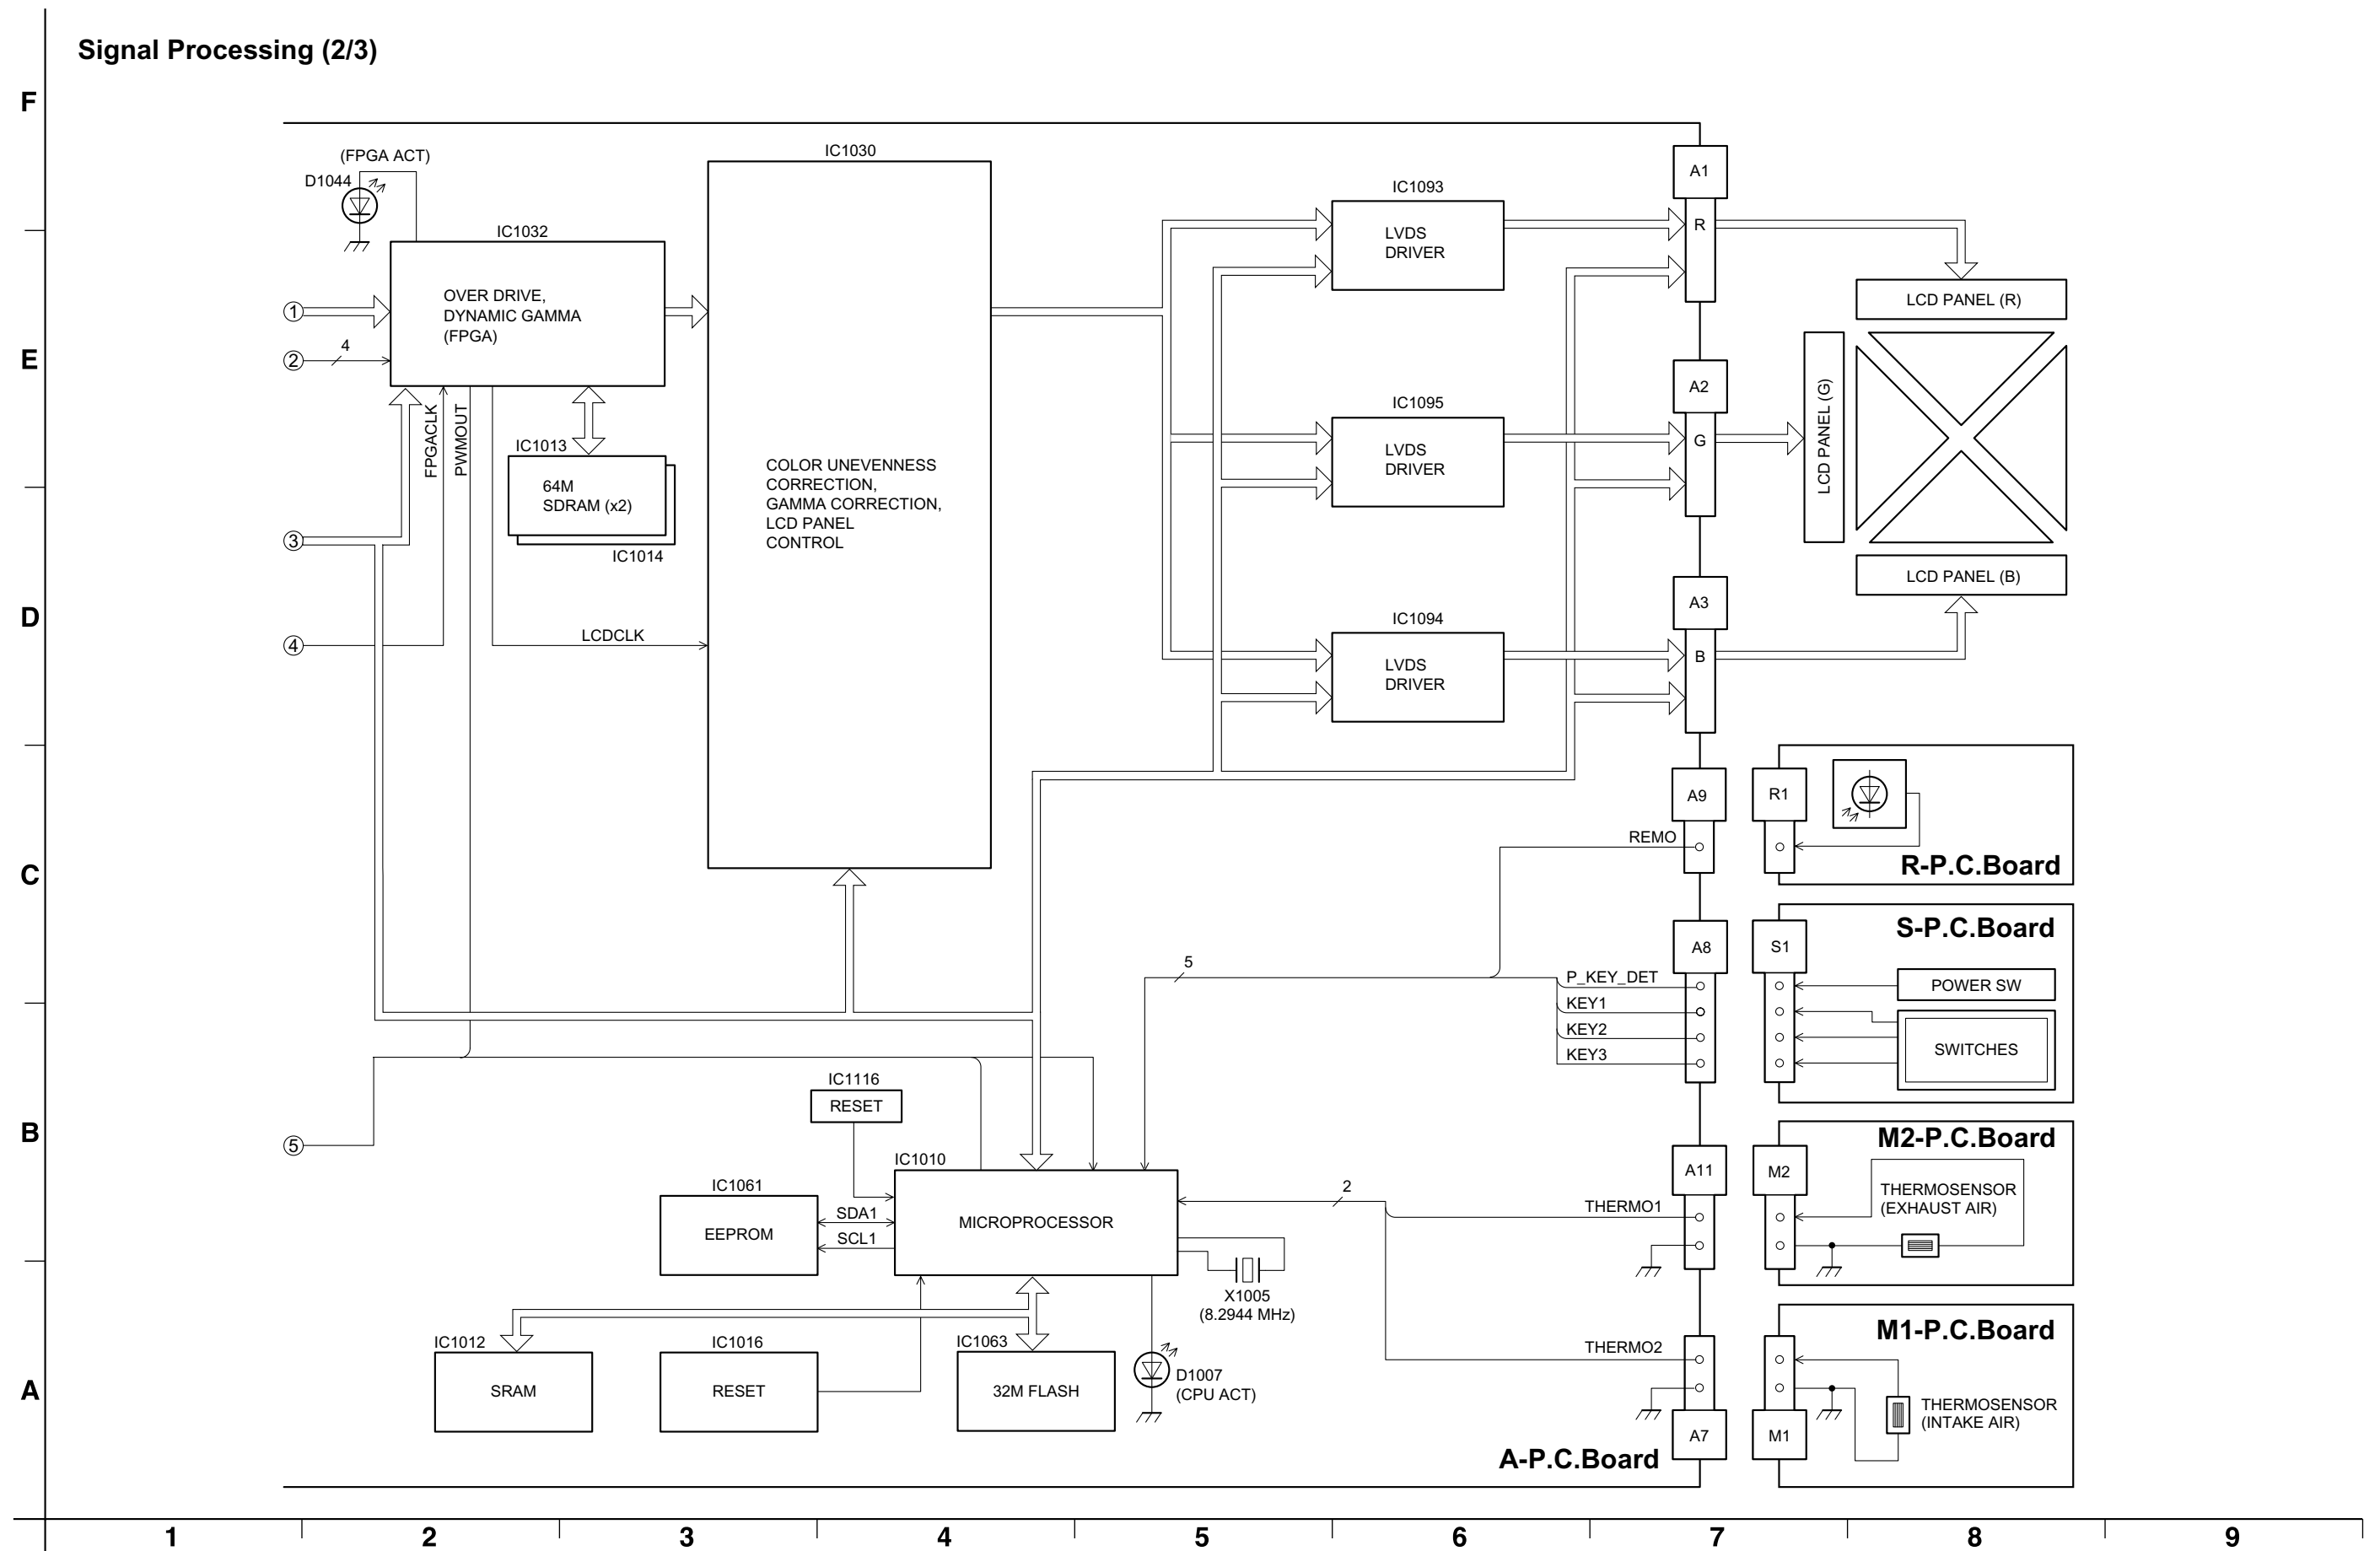



11 Schematic Diagram

Schematic Diagram for Model PT-AE2000U

IMPORTANT SAFETY NOTICE

THE SHADED AREA ON THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM FIRE AND ELECTRICAL SHOCK HAZARDS. WHEN SERVICING, IT IS ESSENTIAL THAT ONLY MANUFACTURER'S SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SHADED AREAS OF THE SCHEMATIC.

Schematic Diagram for Model PT-AE2000E

Important Safety Notice

Components identified by the international symbol  have special characteristics important for safety. When replacing any of these components, use only the manufacturer's specified ones.

Notes:

1. Resistor

All the resistors are carbon 1/4W resistors, unless marked as follows: The unit of resistance is an OHM [Ω] (K=1 000 M=1 000 000).

 : Nonflammable

 : Metal Oxide

 : Solid

 : Metal Film

 : Wire Wound

 : Fuse

2. Capacitor

 : Temperature Compensation

 : Electrolytic

 : Polyester

 : Bipolar

 : Metalized Polyester

 : Dipped Tantalum

 : Polypropylene

 : Z-Type

3. Coil

The unit of inductance is a H, unless otherwise noted.



4. Test Point

 : Test Point

5. Voltage Measurement

The voltage is measured by an electronic voltmeter receiving the colorbar signal when all the customer's controls are set to the standard condition.

6. Color code for the links between diagrams and circuit boards

From/To		To/From	Color code
Block diagram		Schematic diagram	Magenta
Schematic diagram		Schematic diagram	Green
Schematic diagram		Circuit boards	Yellow
Schematic diagram		Waveforms	Cyan (Light blue)

7. HOT and COLD indications

The power circuit board contains a circuit area using a separate power supply to isolate the ground connection. The circuit is defined by HOT and COLD indications in the schematic diagram. Take the precautions below:


8. This schematic diagram is the latest at the time of printing and the subject to change without notice.

Precautions:

1. NEVER touch the HOT part or the HOT and COLD parts at the same time, or you may get an electric shock.
2. NEVER short-circuit the HOT and COLD circuits, or the fuse may blow and the parts may break.
3. NEVER connect an instrument such oscilloscope to the HOT and COLD circuit simultaneously, or the fuse may blow. Connect the ground of instruments to the ground of the circuit being measured.
4. MAKE SURE to unplug the power cord from the power outlet before removing the chassis.


11.1. A-P.C.Board (1/8)

A-P.C.Board TXANP01VKF5 (1/8)

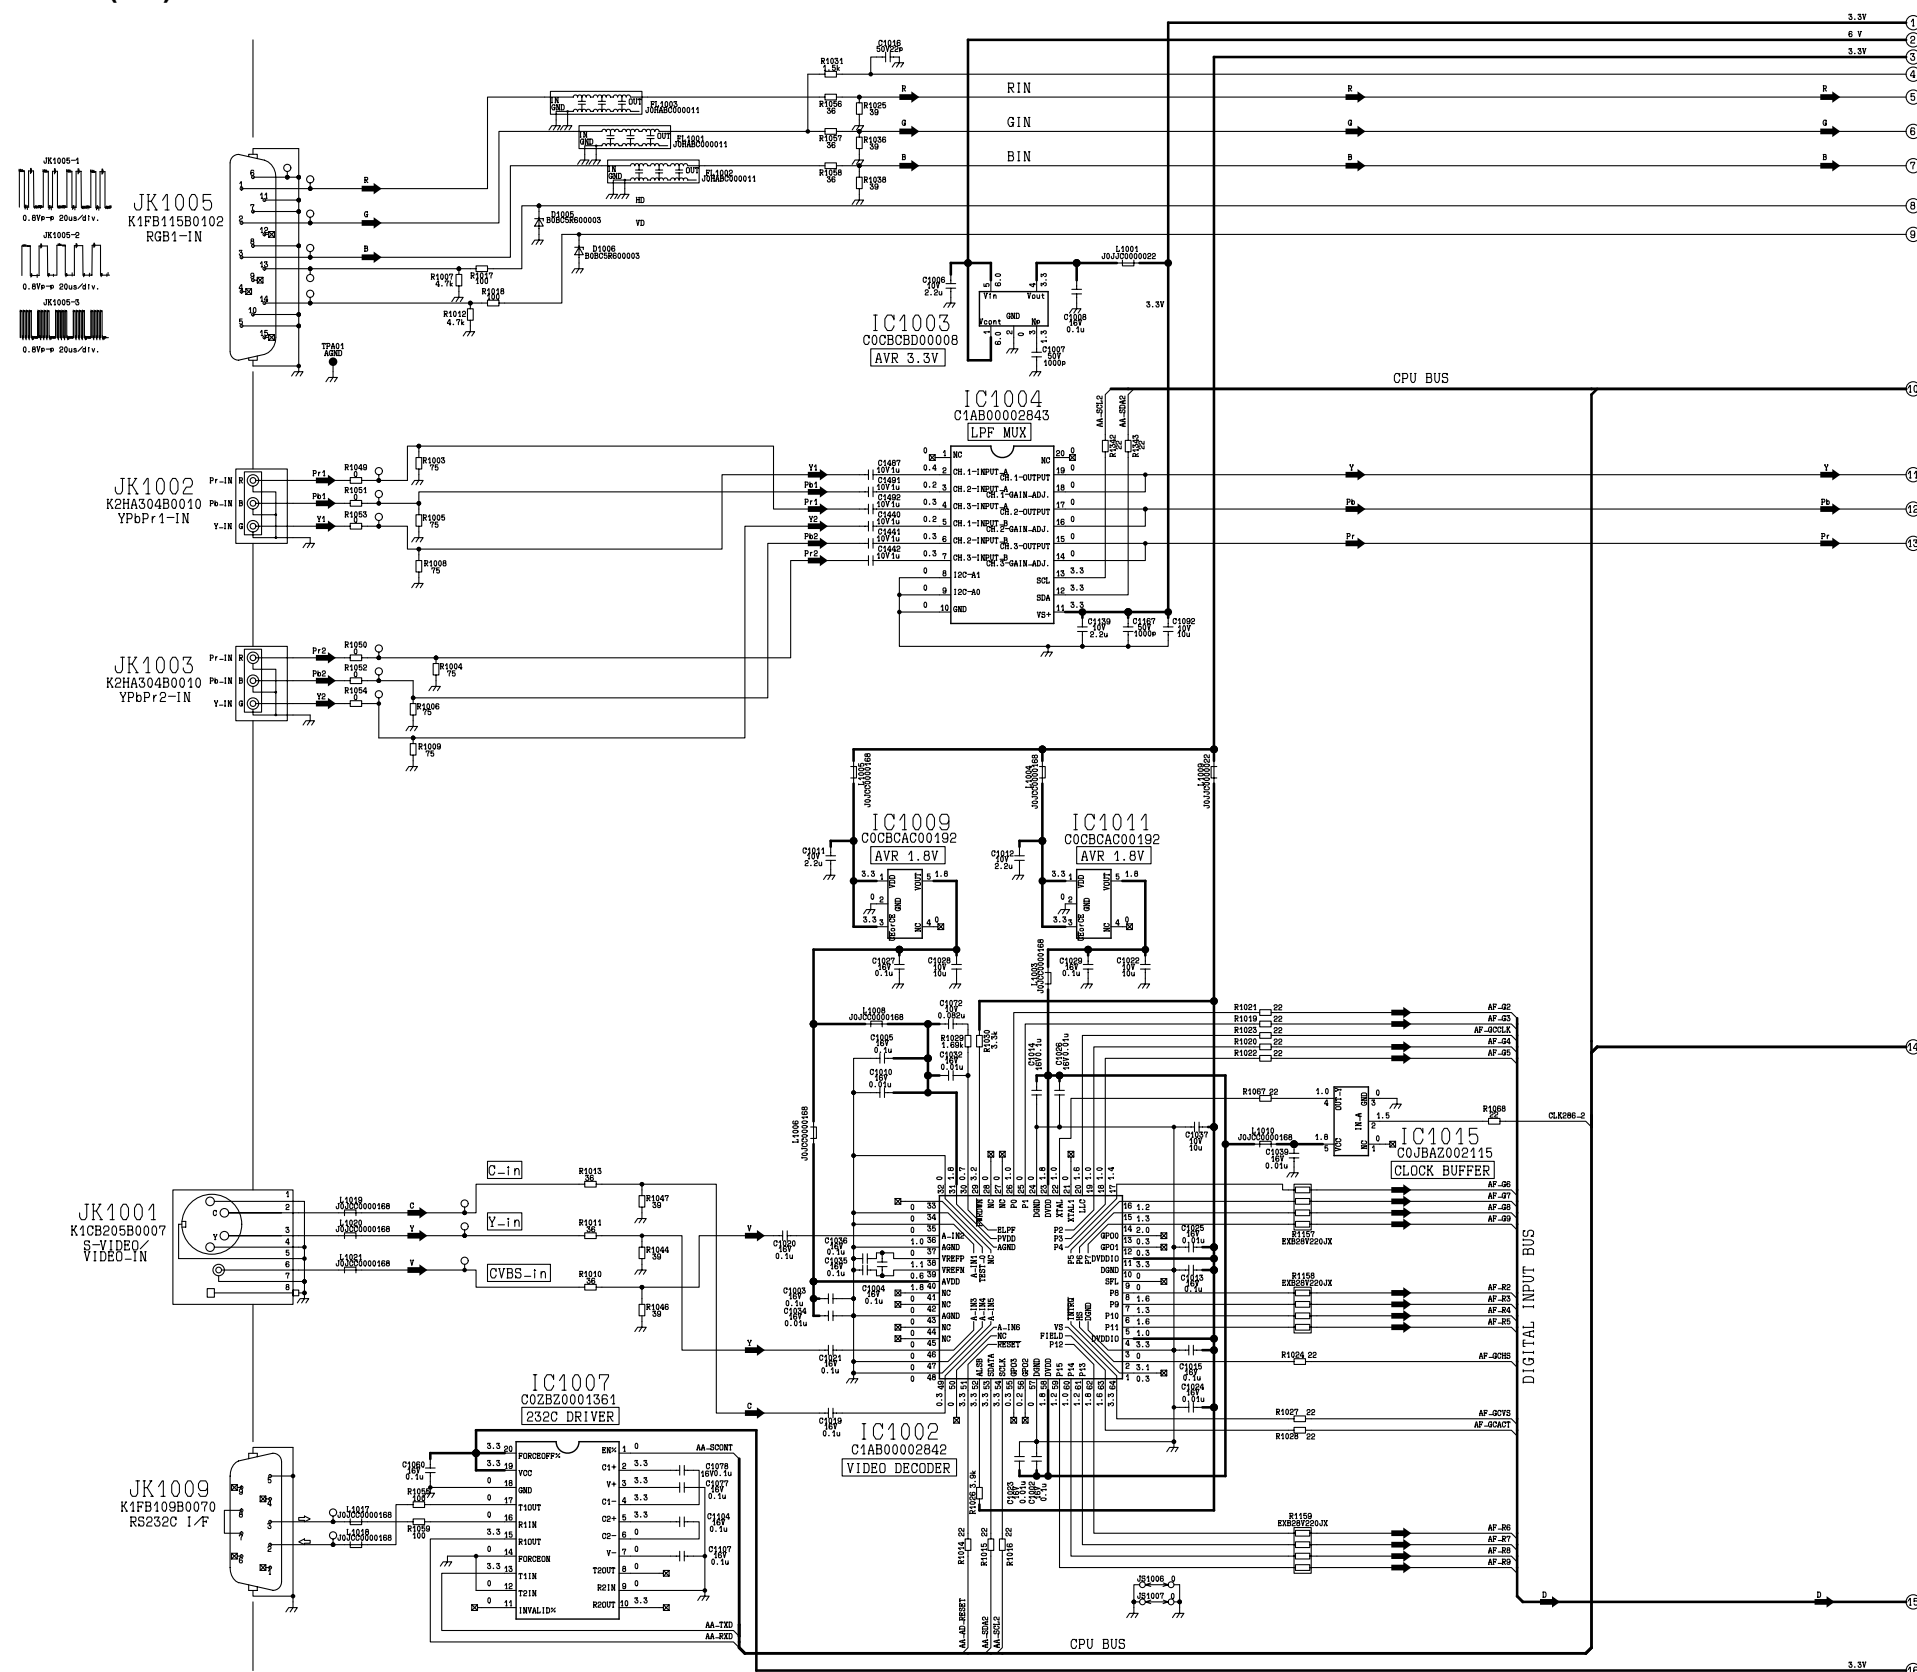

11.2. A-P.C.Board (2/8)

A-P.C.Board TXANP01VKF5 (2/8)

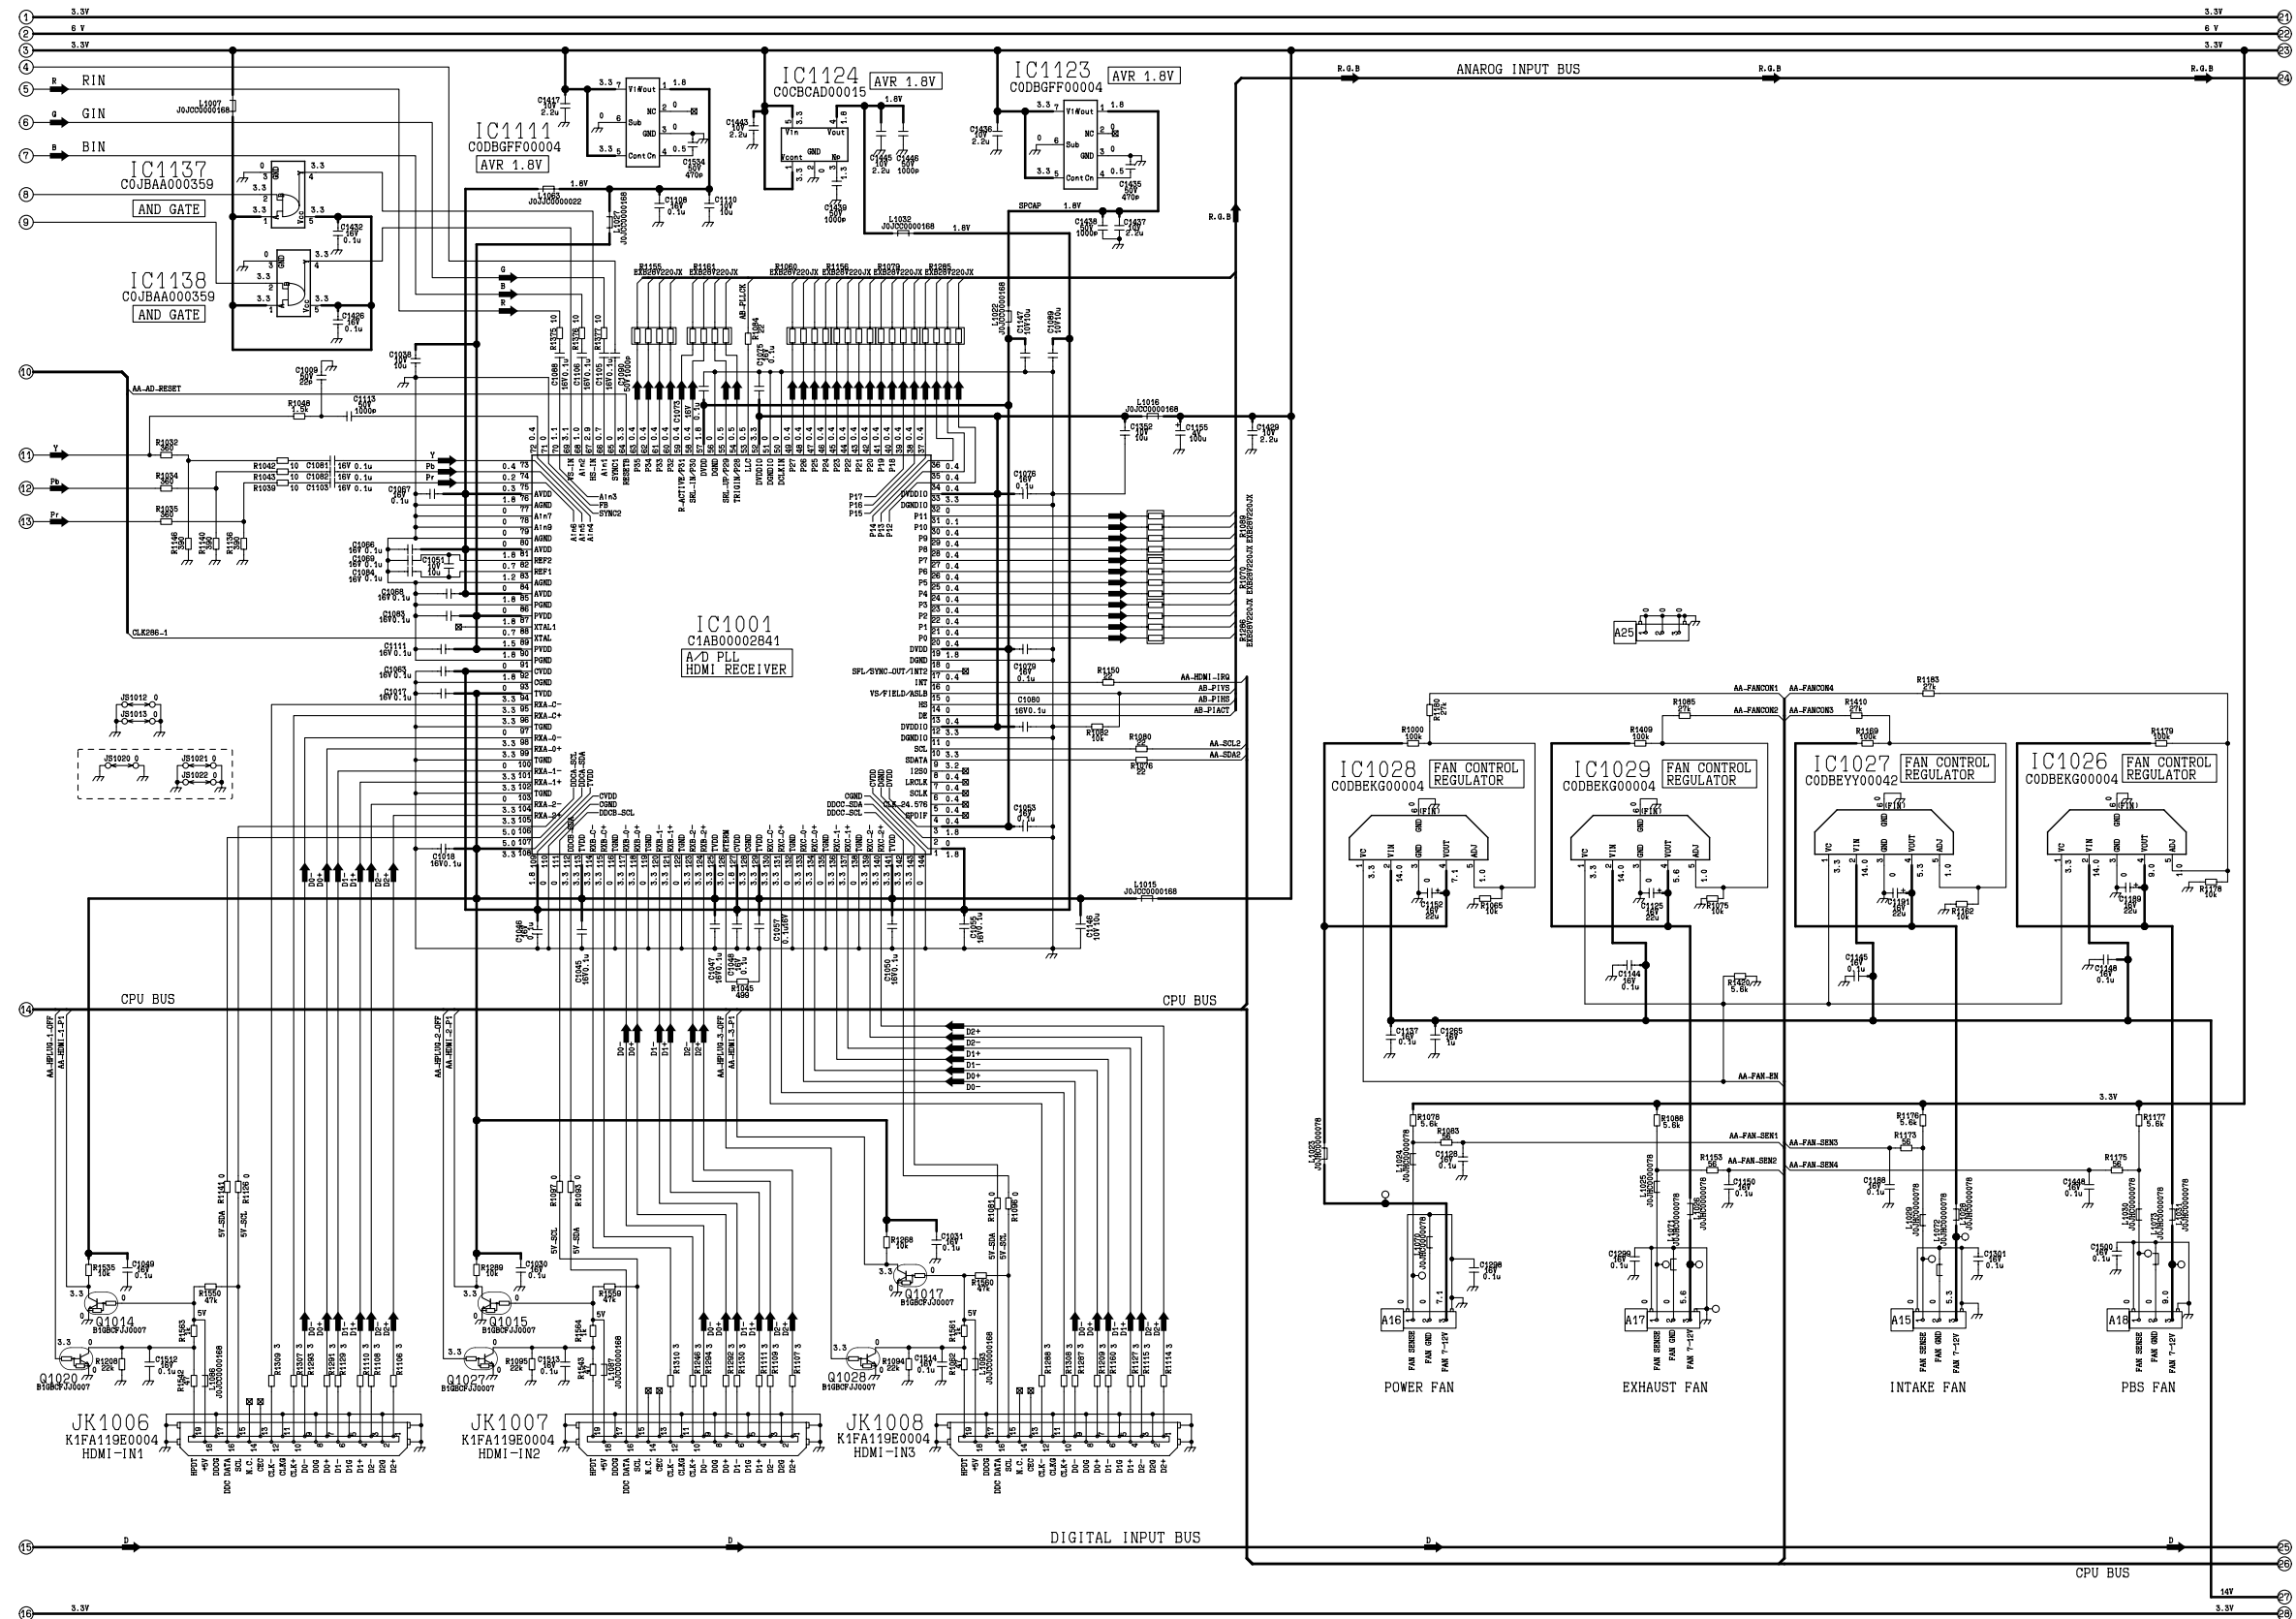

F

E

D

C


B

A



11.4. A-P.C.Board (4/8)

A-P.C.Board TXANP01VKF5 (4/8)

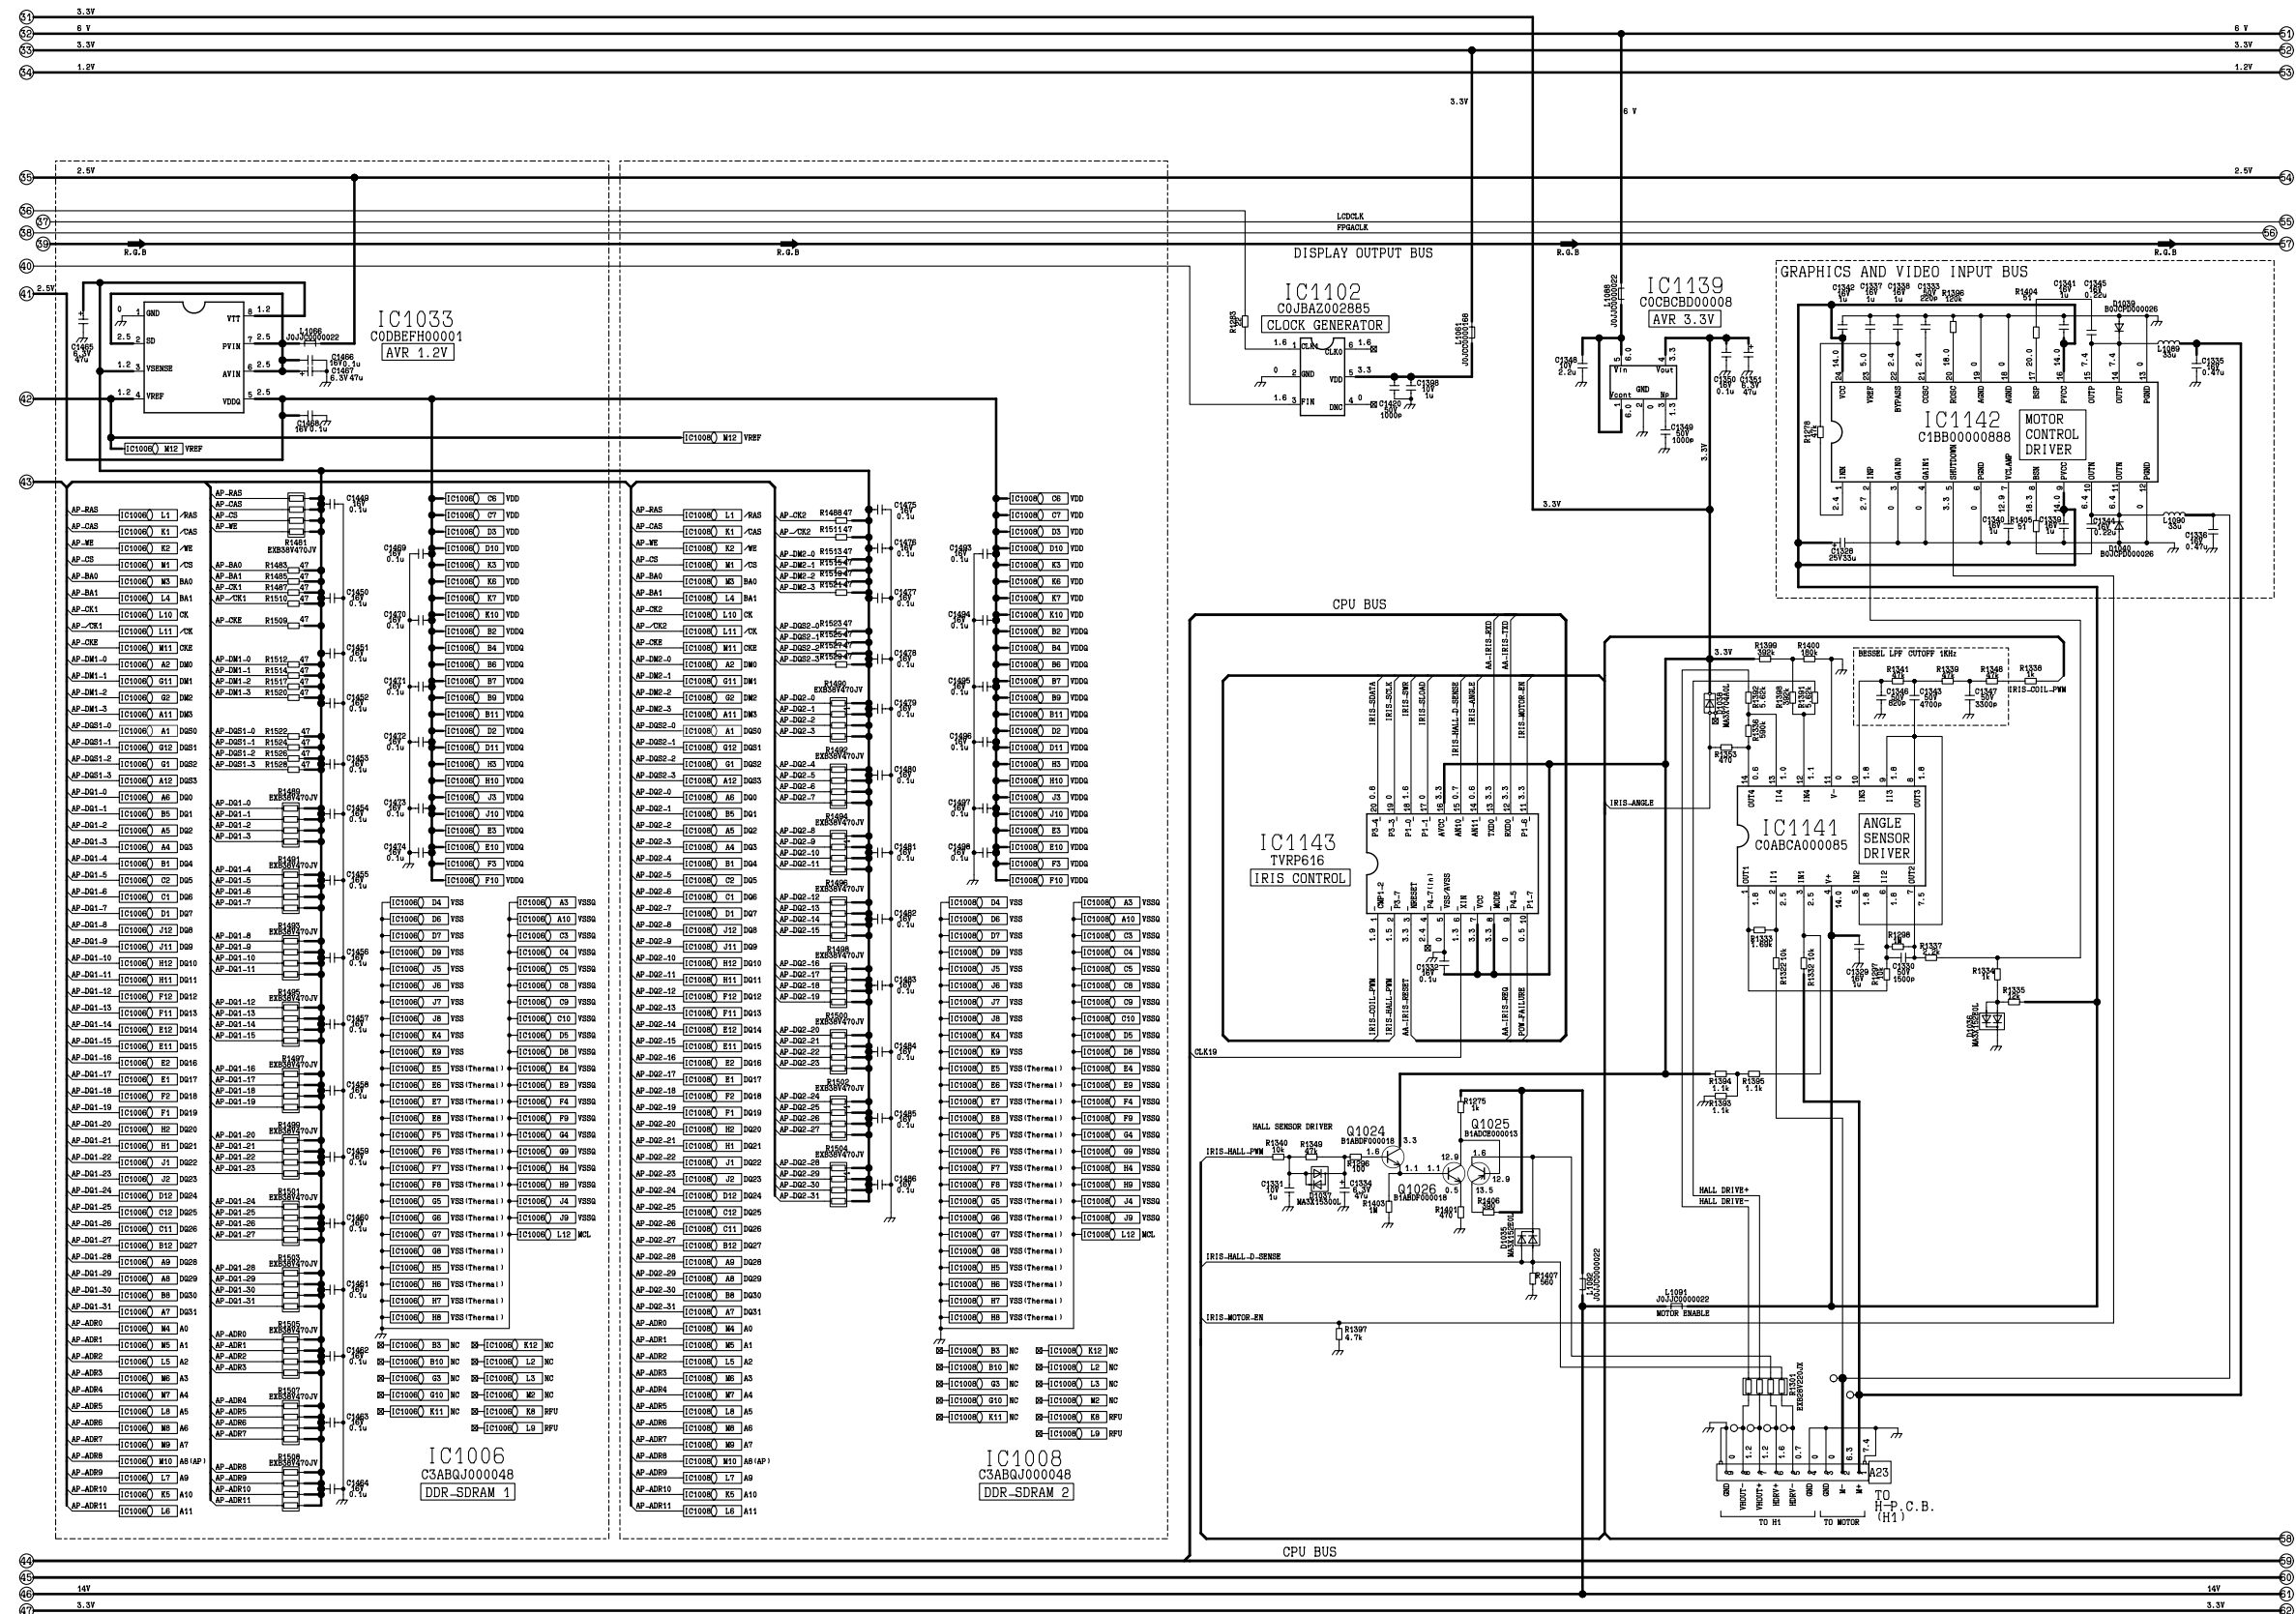



D


C

B

A

11.6. A-P.C.Board (6/8)

A-P.C.Board TXANP01VKF5 (6/8)

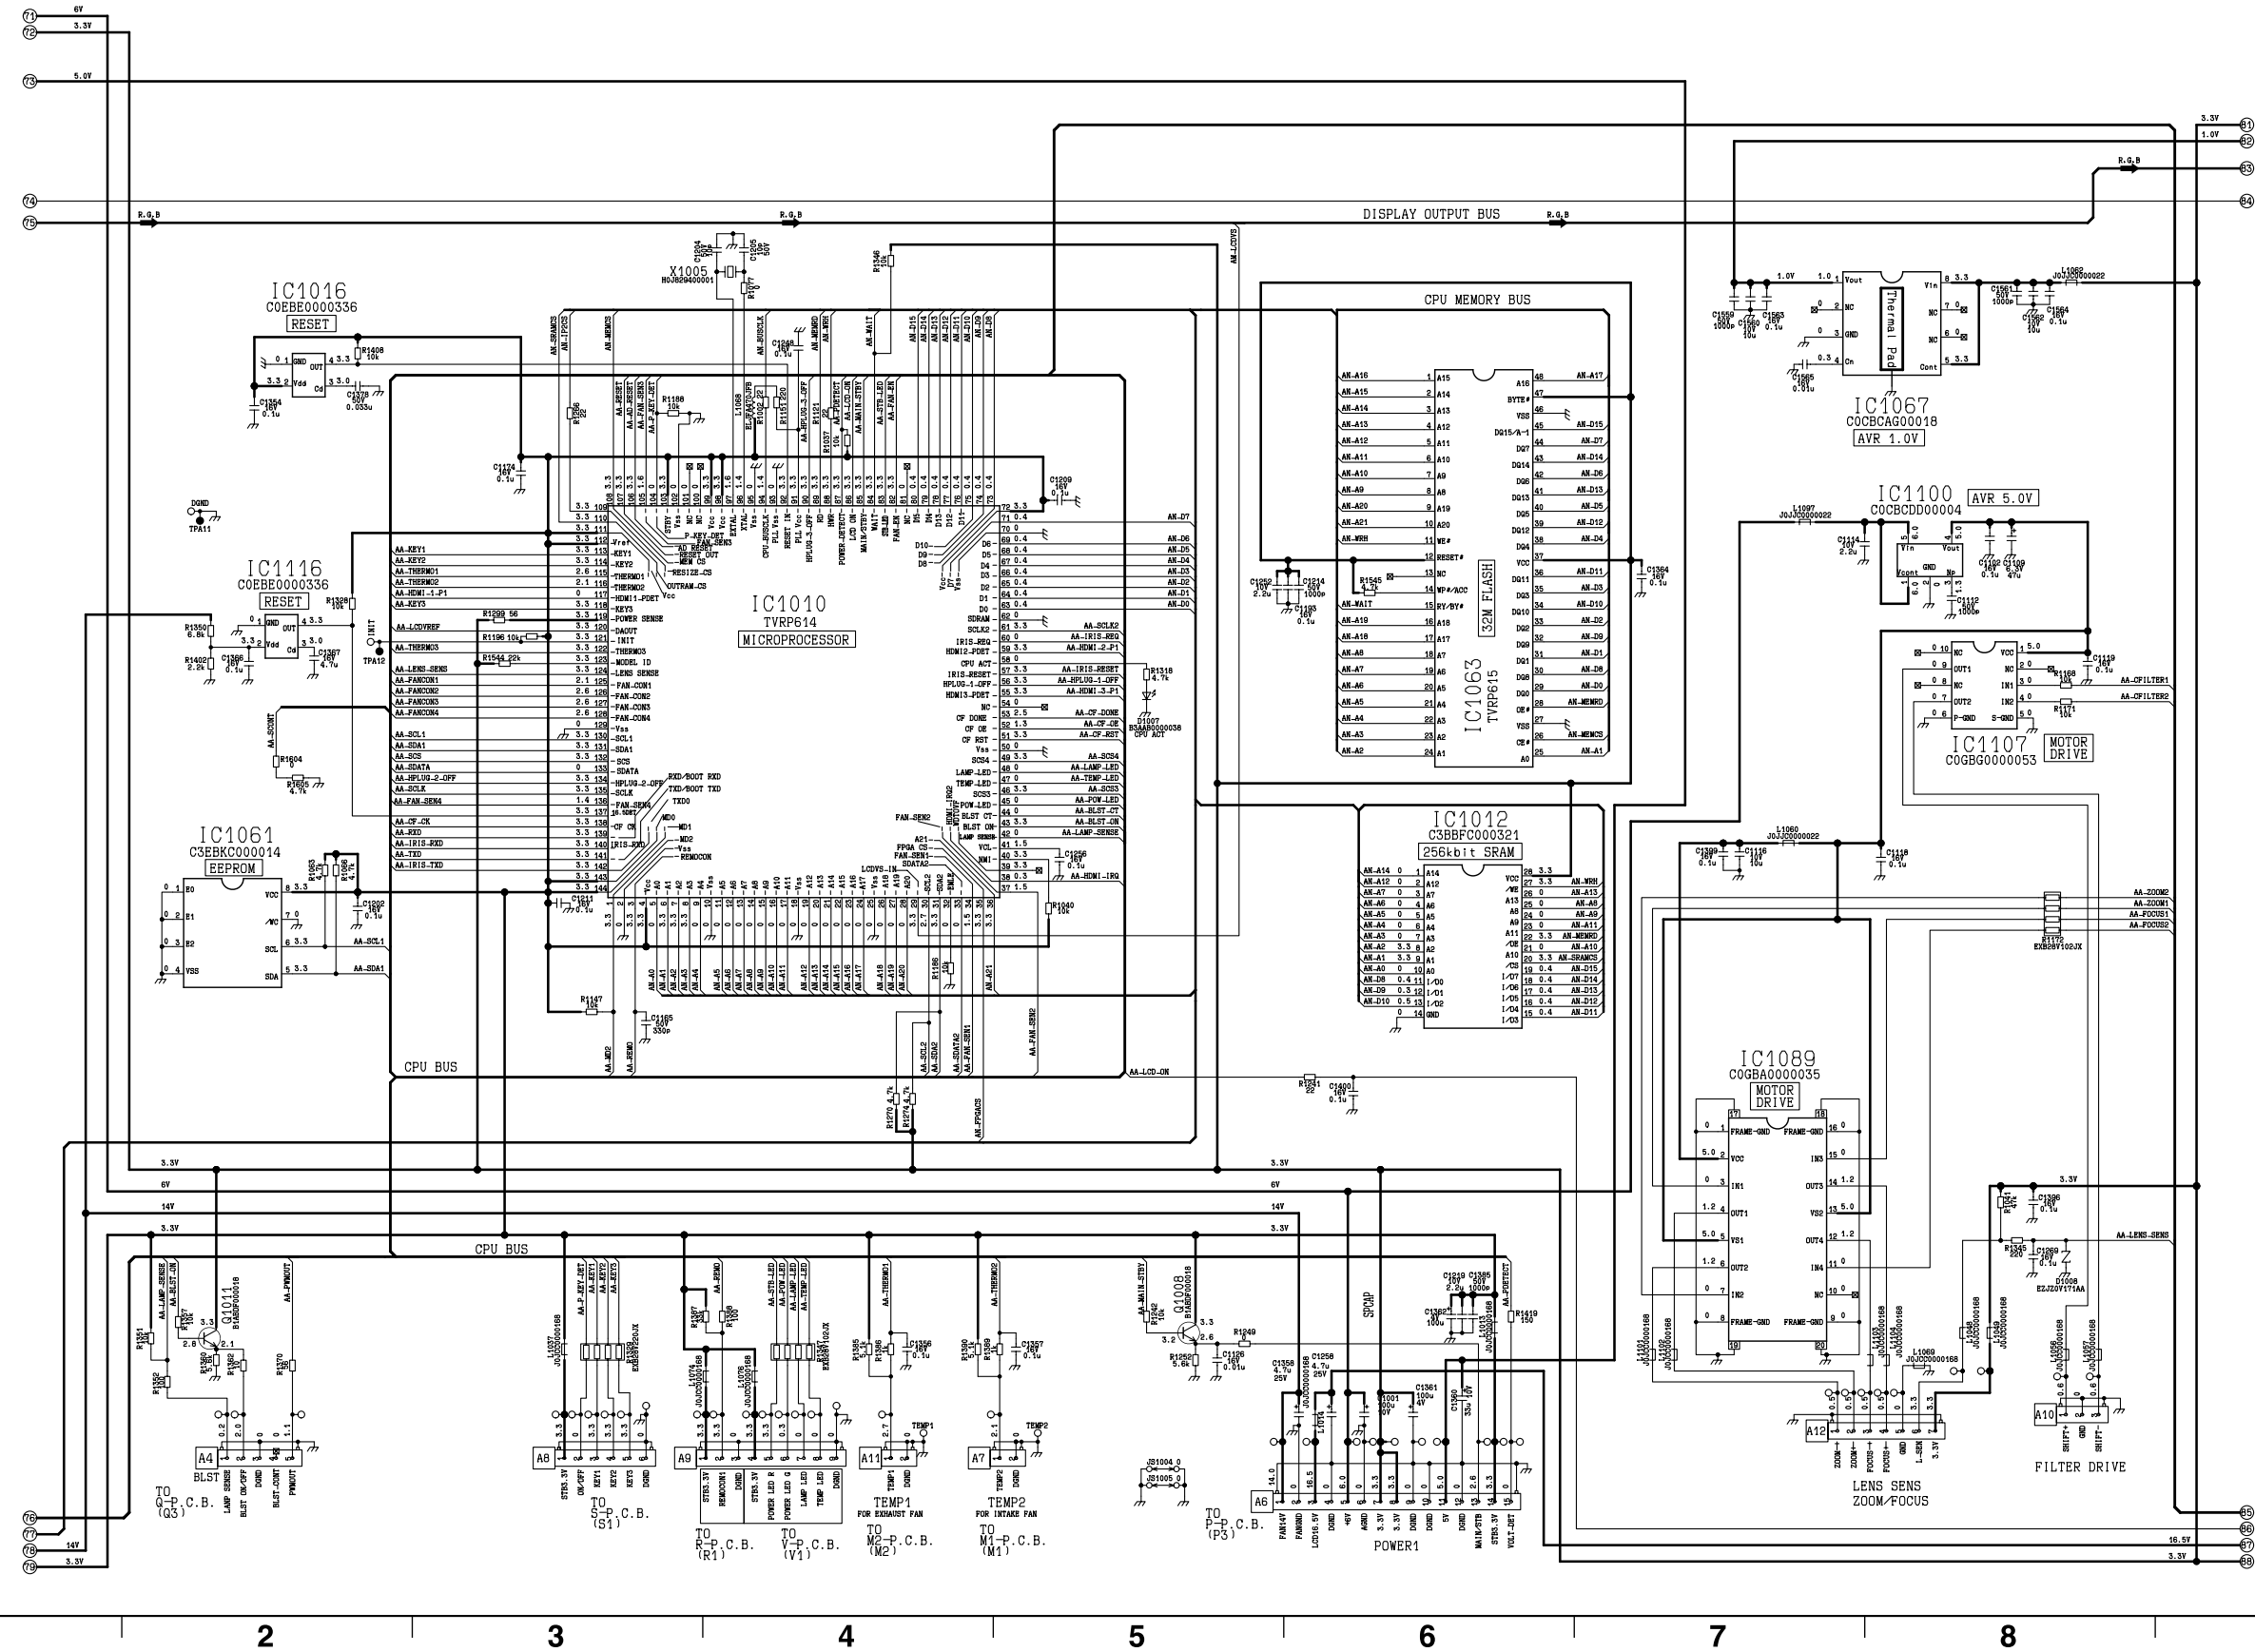

11.7. A-P.C.Board (7/8)

A-P.C.Board TXANP01VKF5 (7/8)

F


E

D

C


B

A

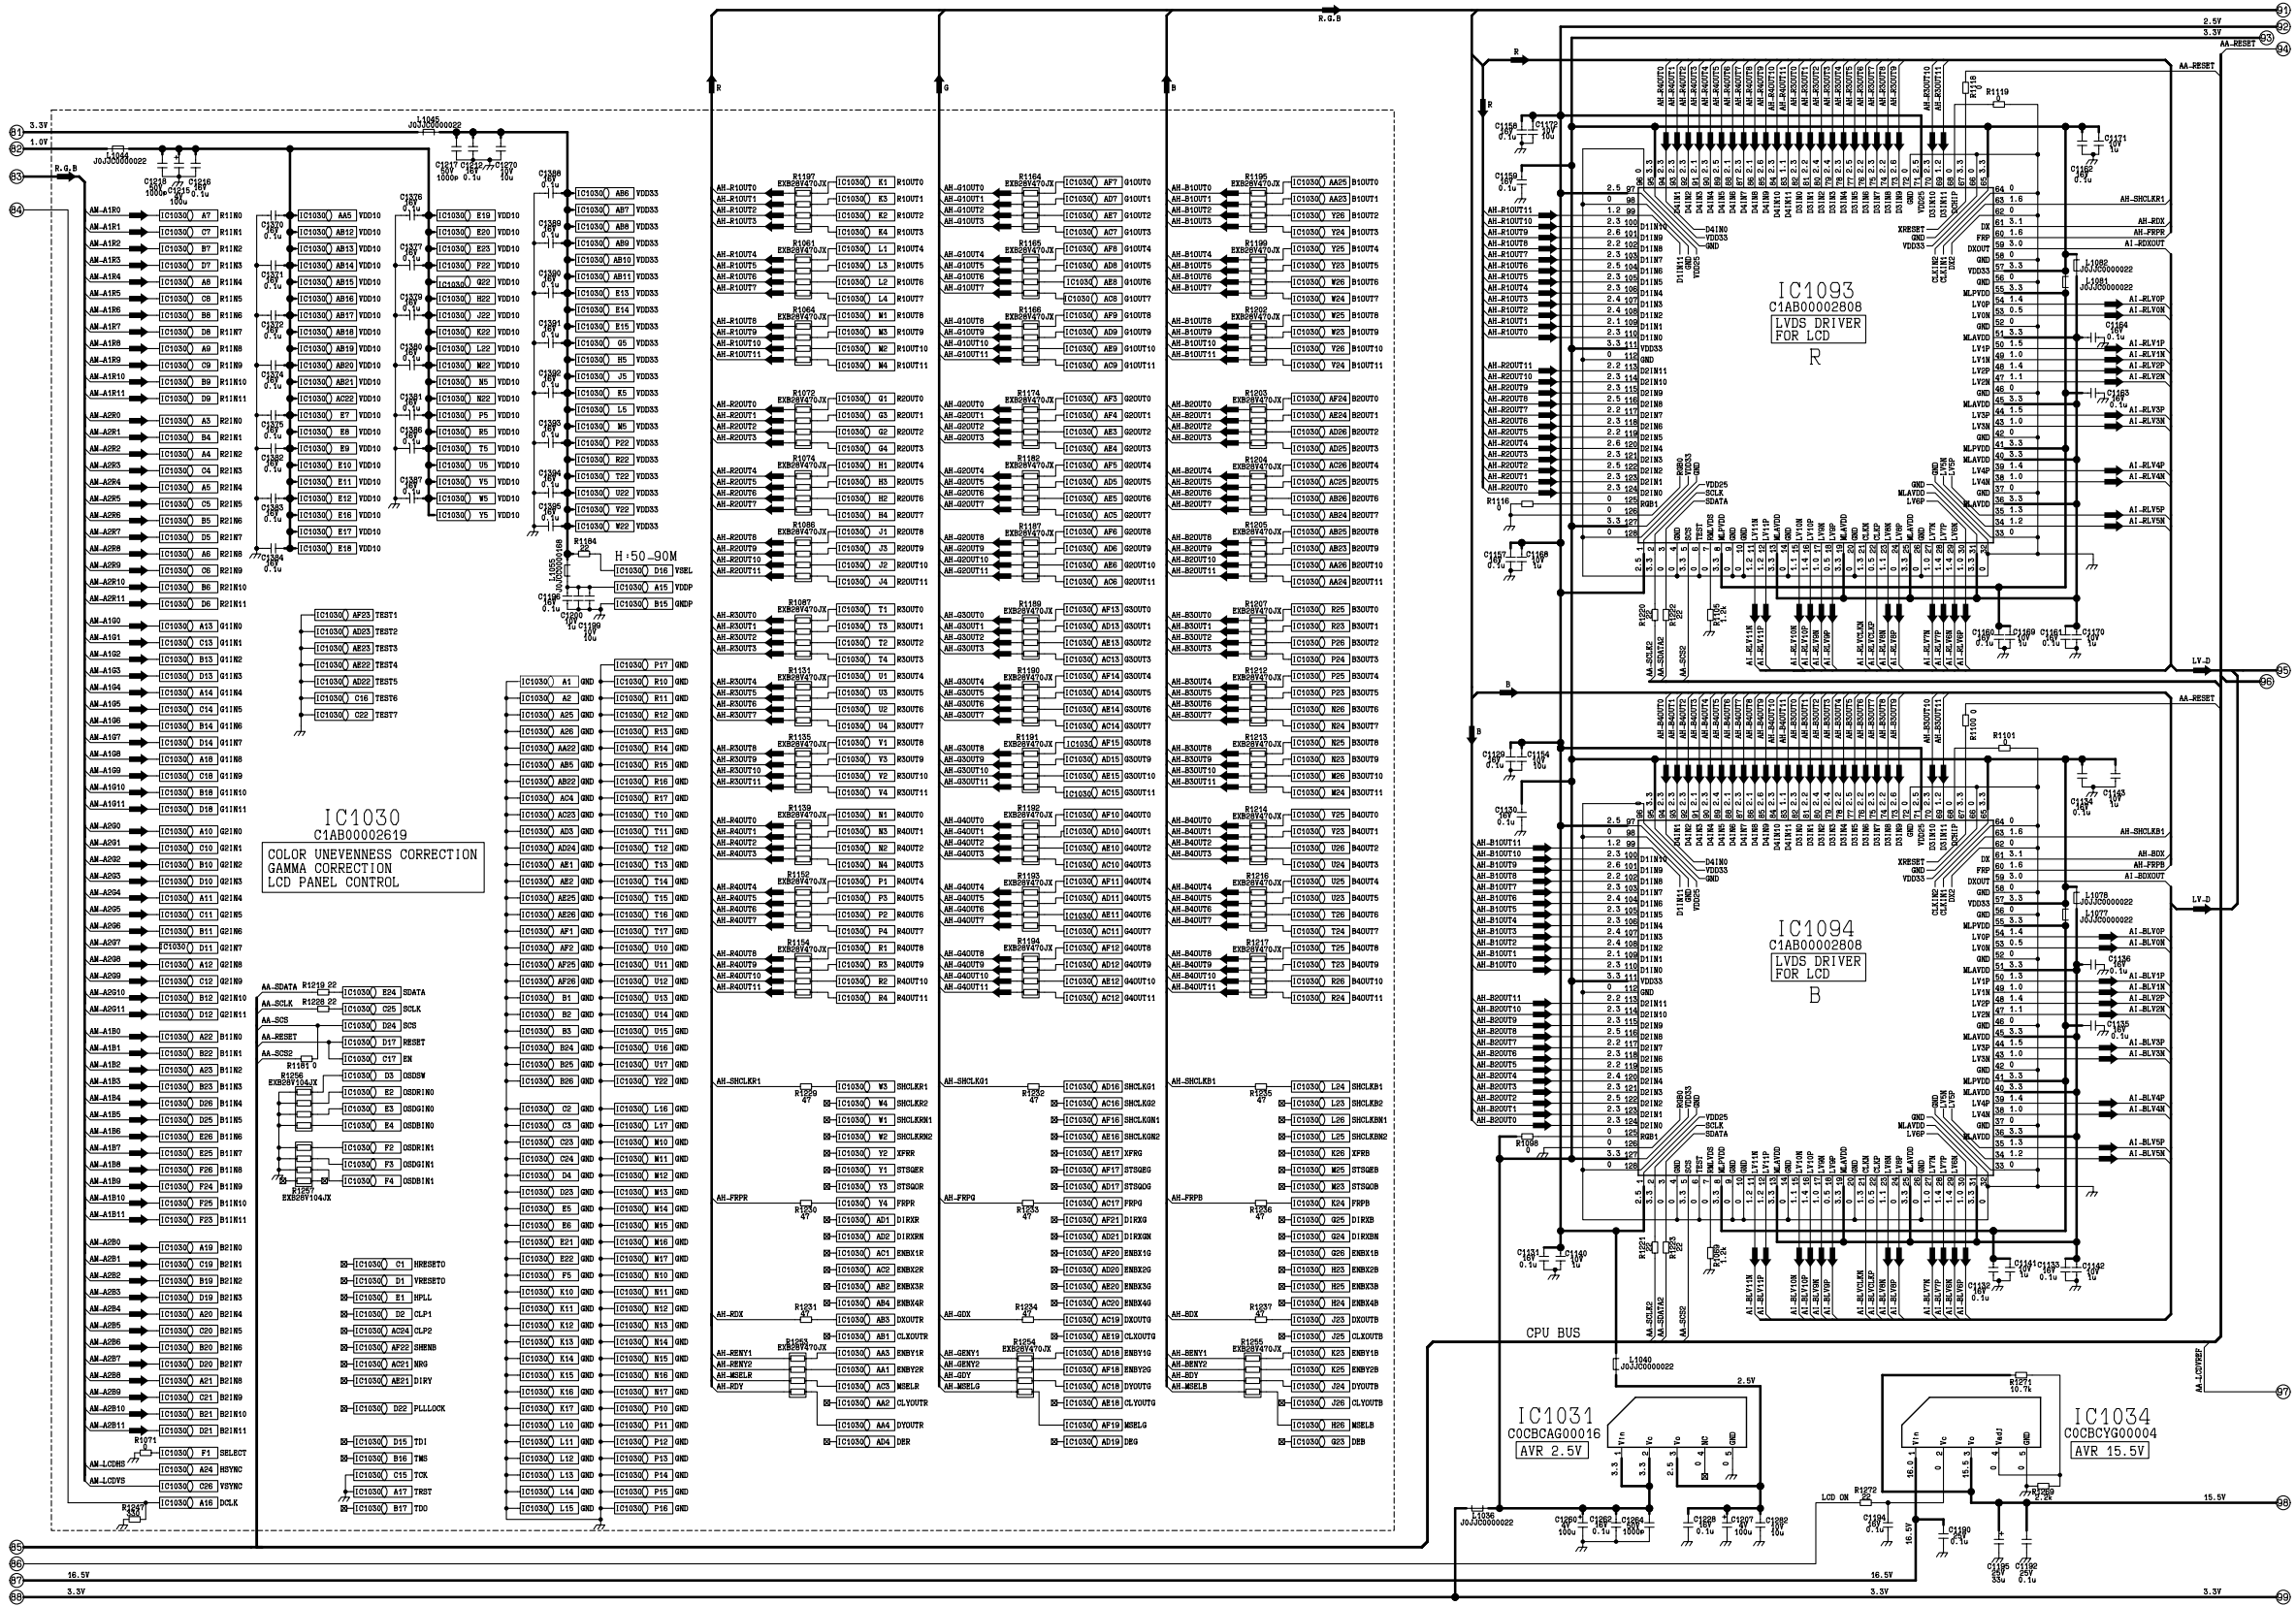


11.8. A-P.C.Board (8/8)

A-P.C.Board TXANP01VKF5 (8/8)

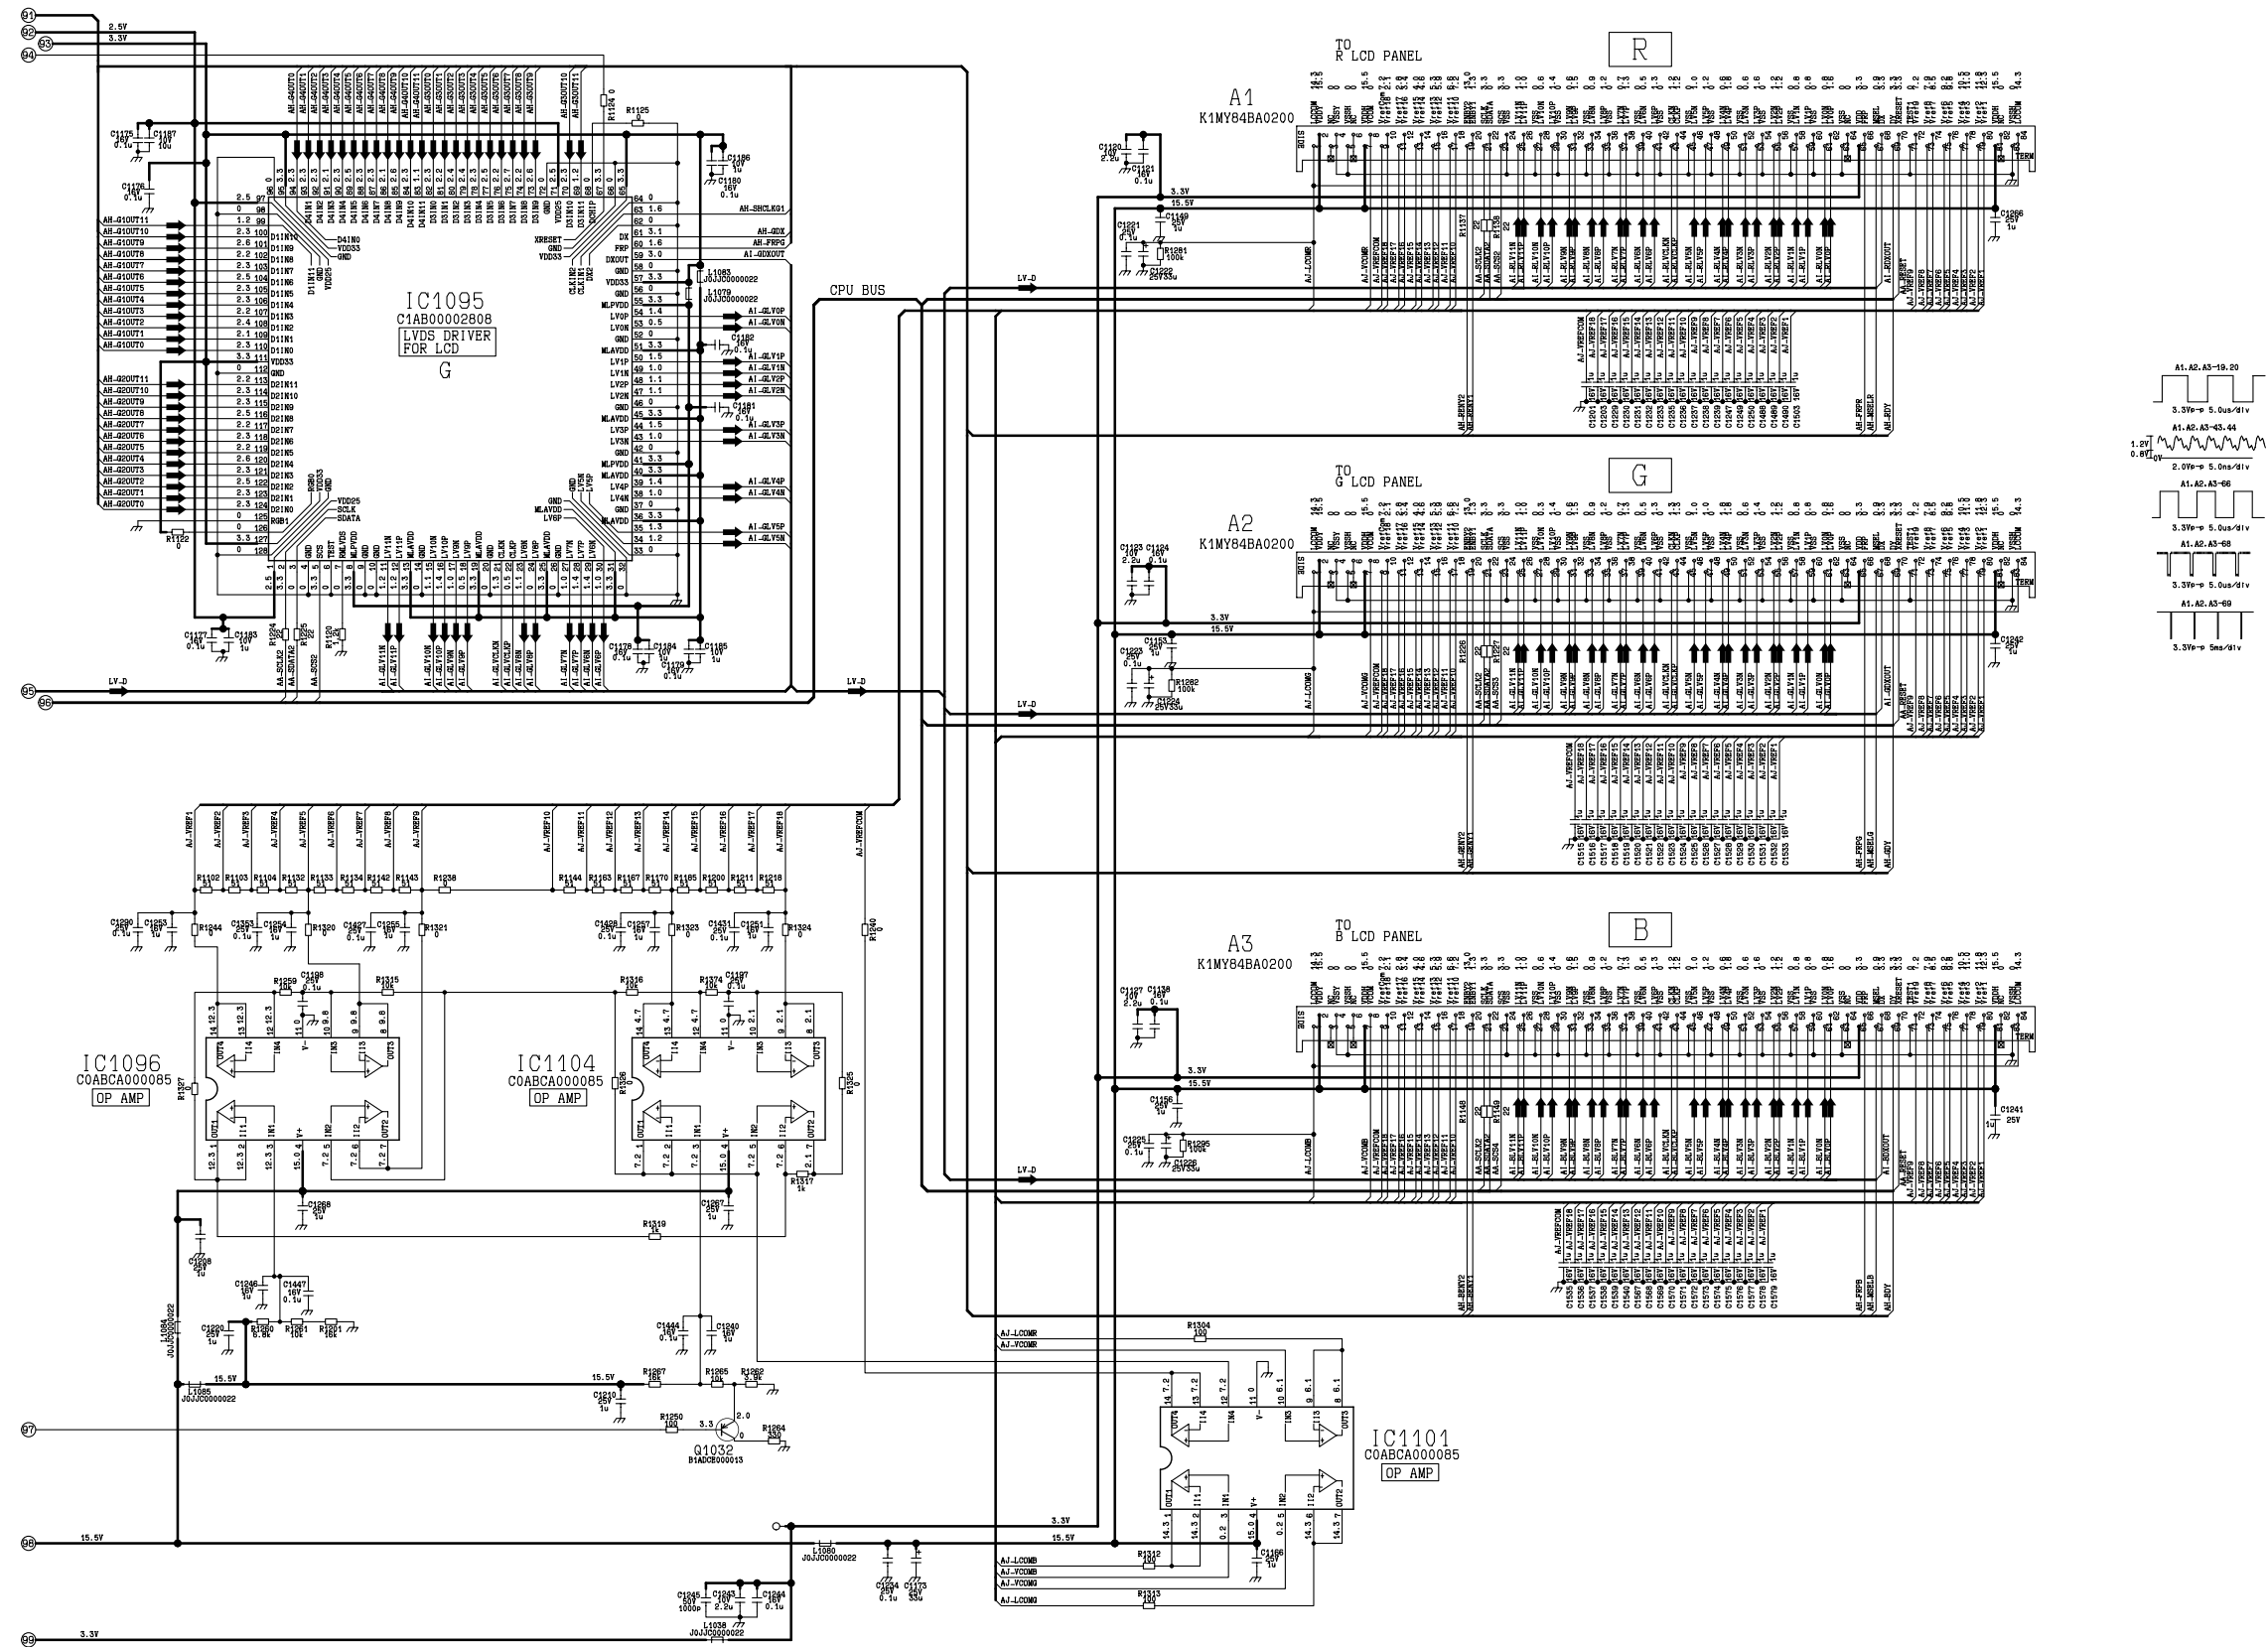

11.9. K1-P.C.Board, K2-P.C.Board

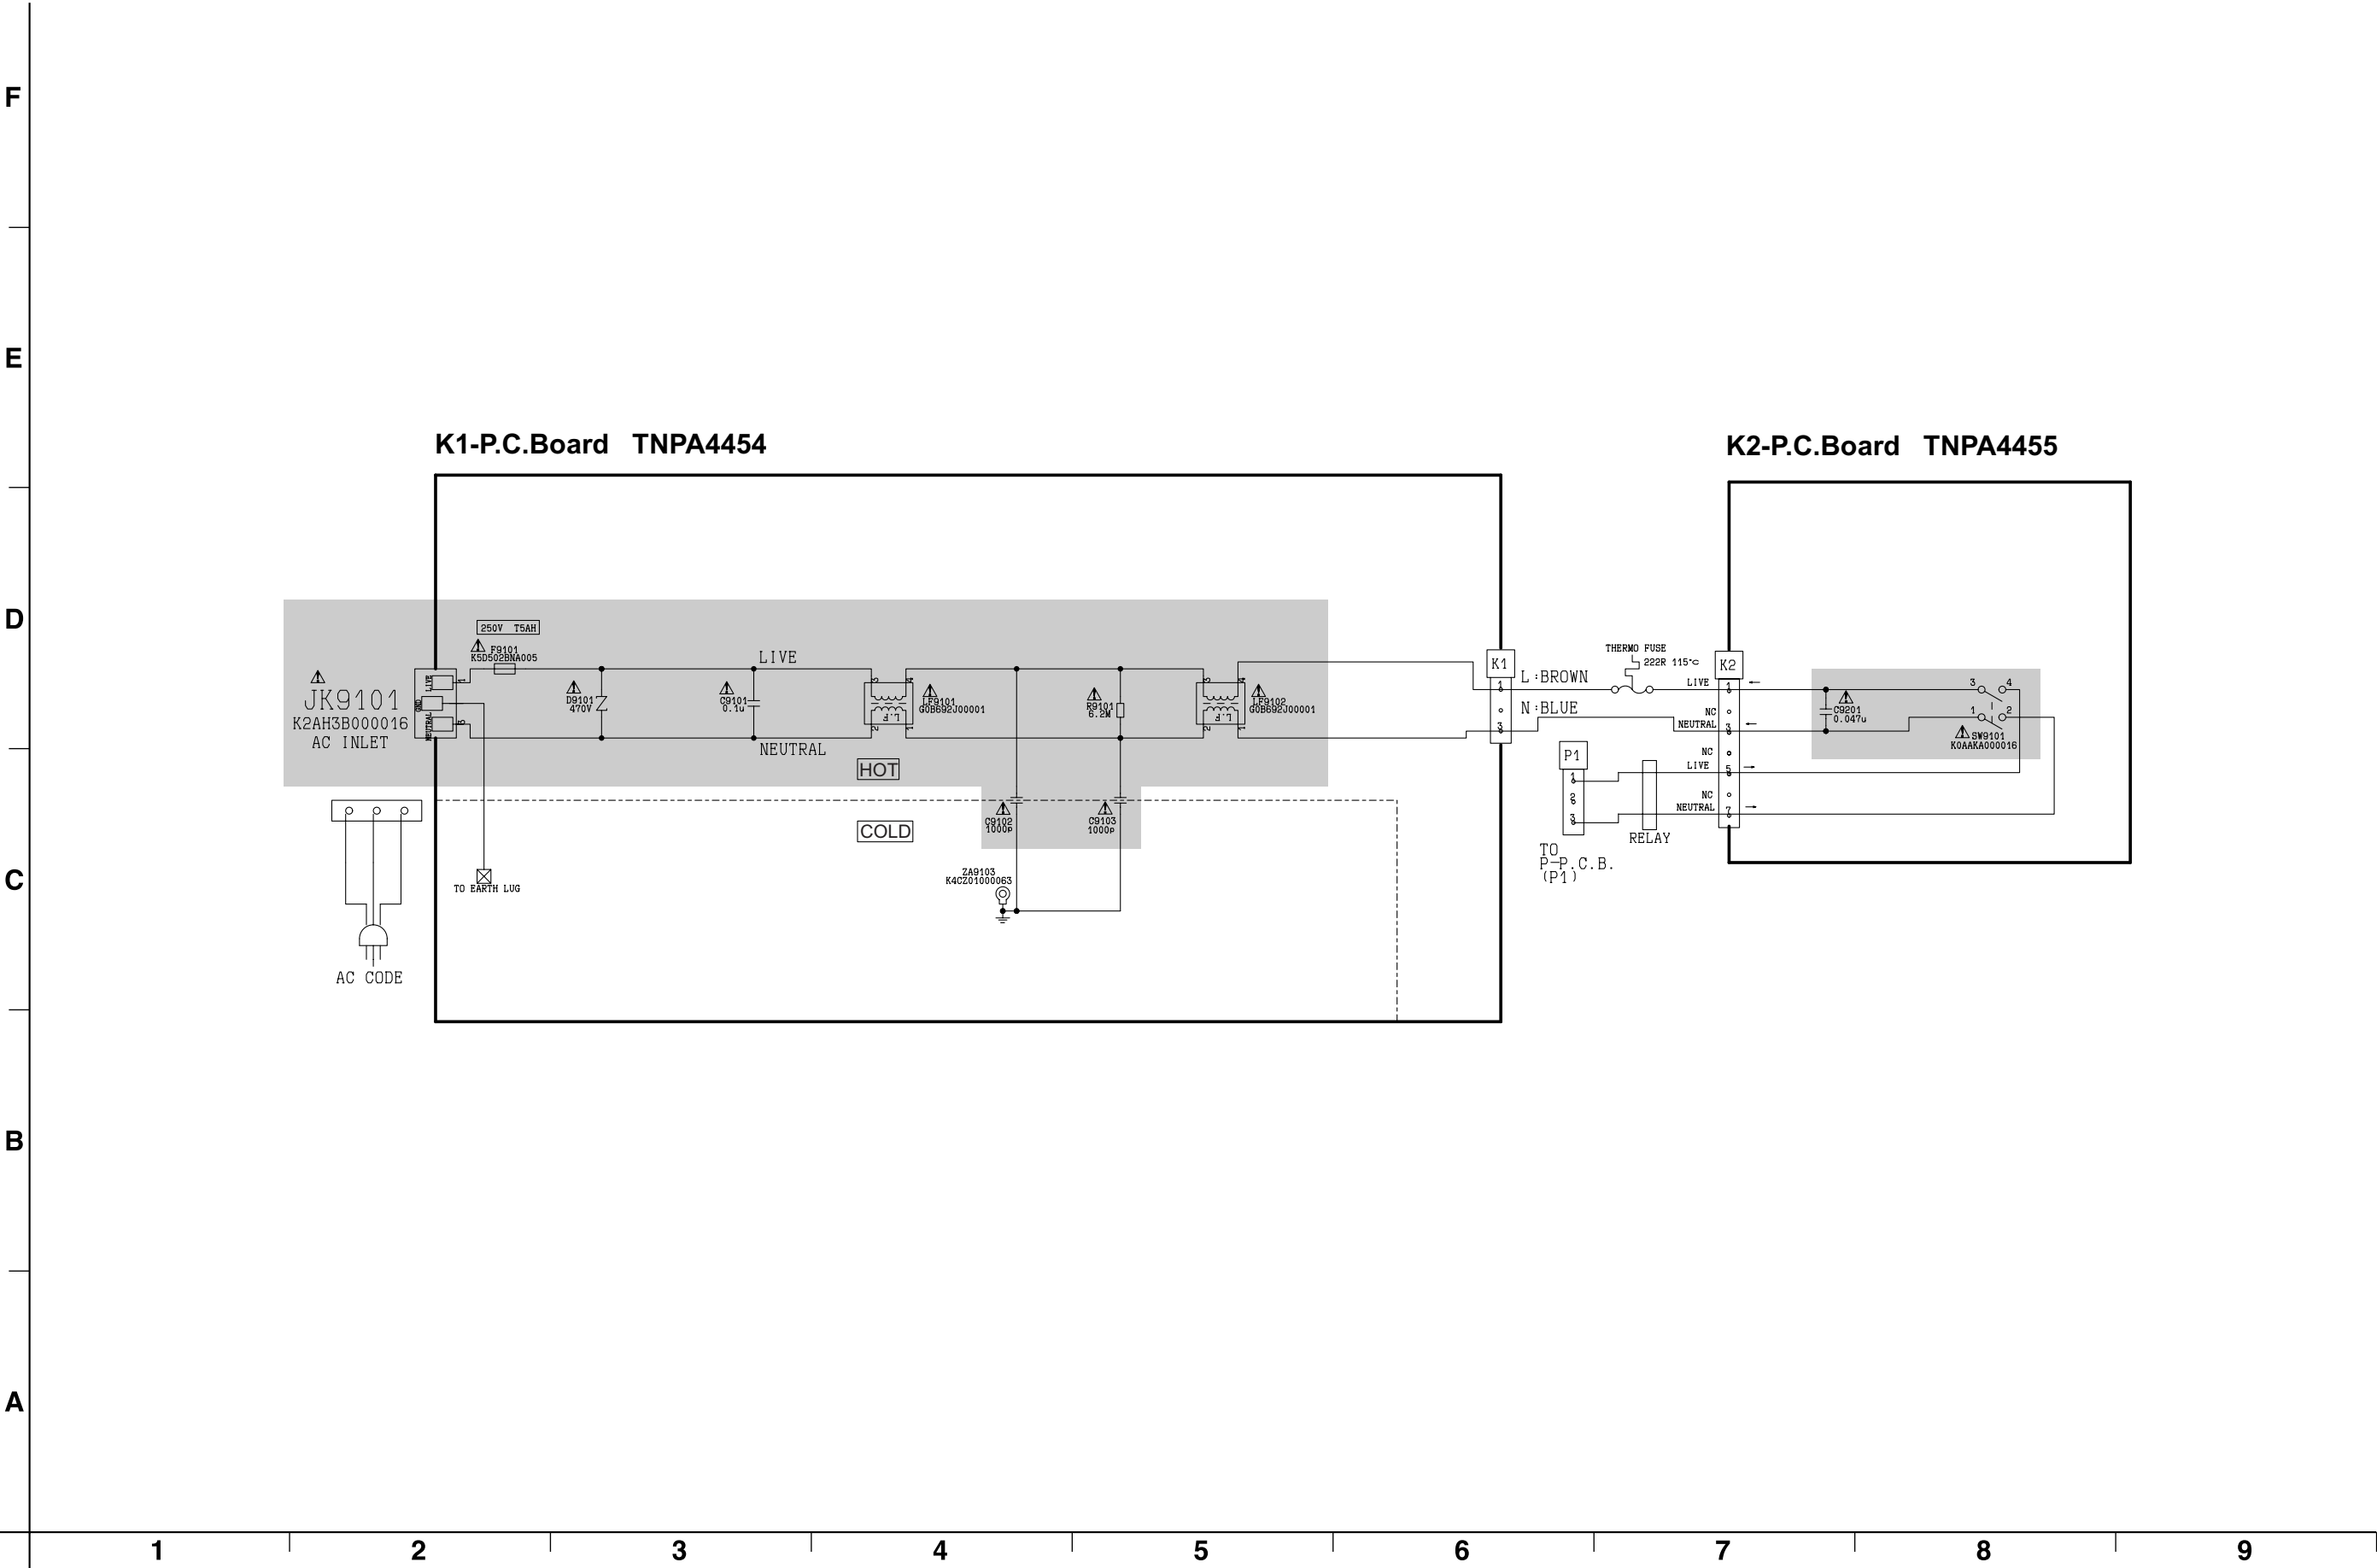

11.10. S-P.C.Board, R-P.C.Board

F



E


D

C

B

A

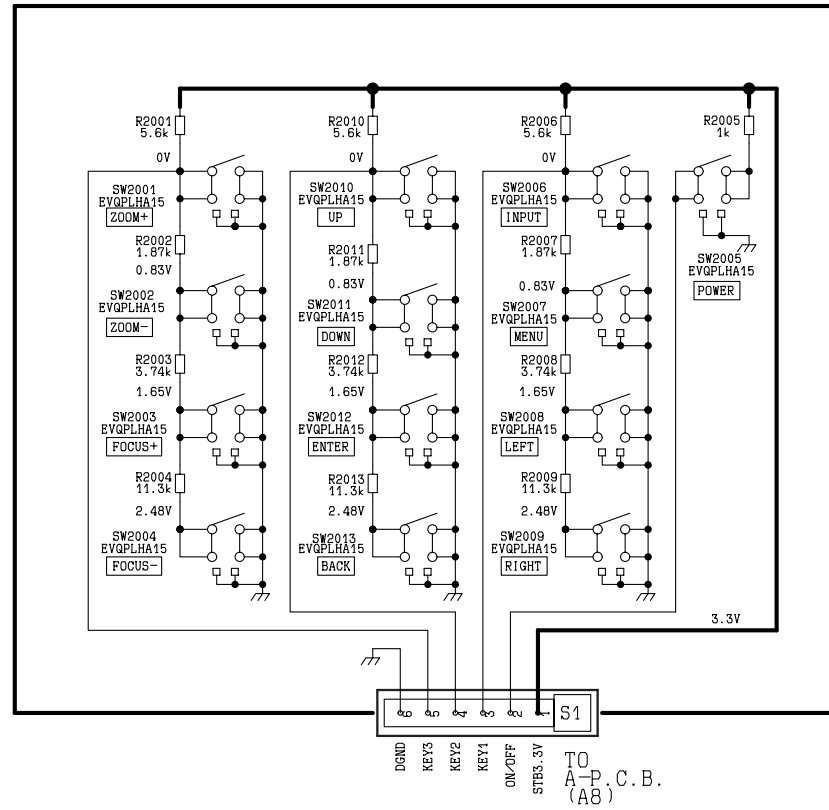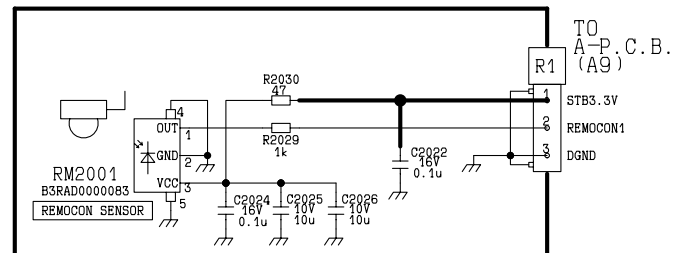
S-P.C.Board TNPA4093**R-P.C.Board TNPA4095**

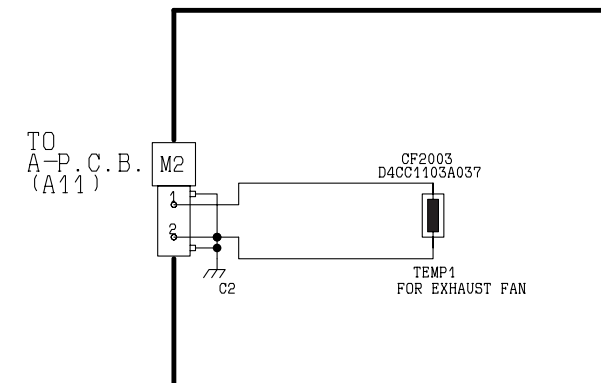

11.12. B-Module (1/2)

B-Module TXANP03VKF5 (1/2) Module Replacement


Only supplied components IC9602-03, Q9603-11, Q9614, D9601, D9604-09, D9611-12, D9616-29,
R9601, R9630-34, R9636-40, R9653, C9603, C9610, C9617-19, T9604, S9602

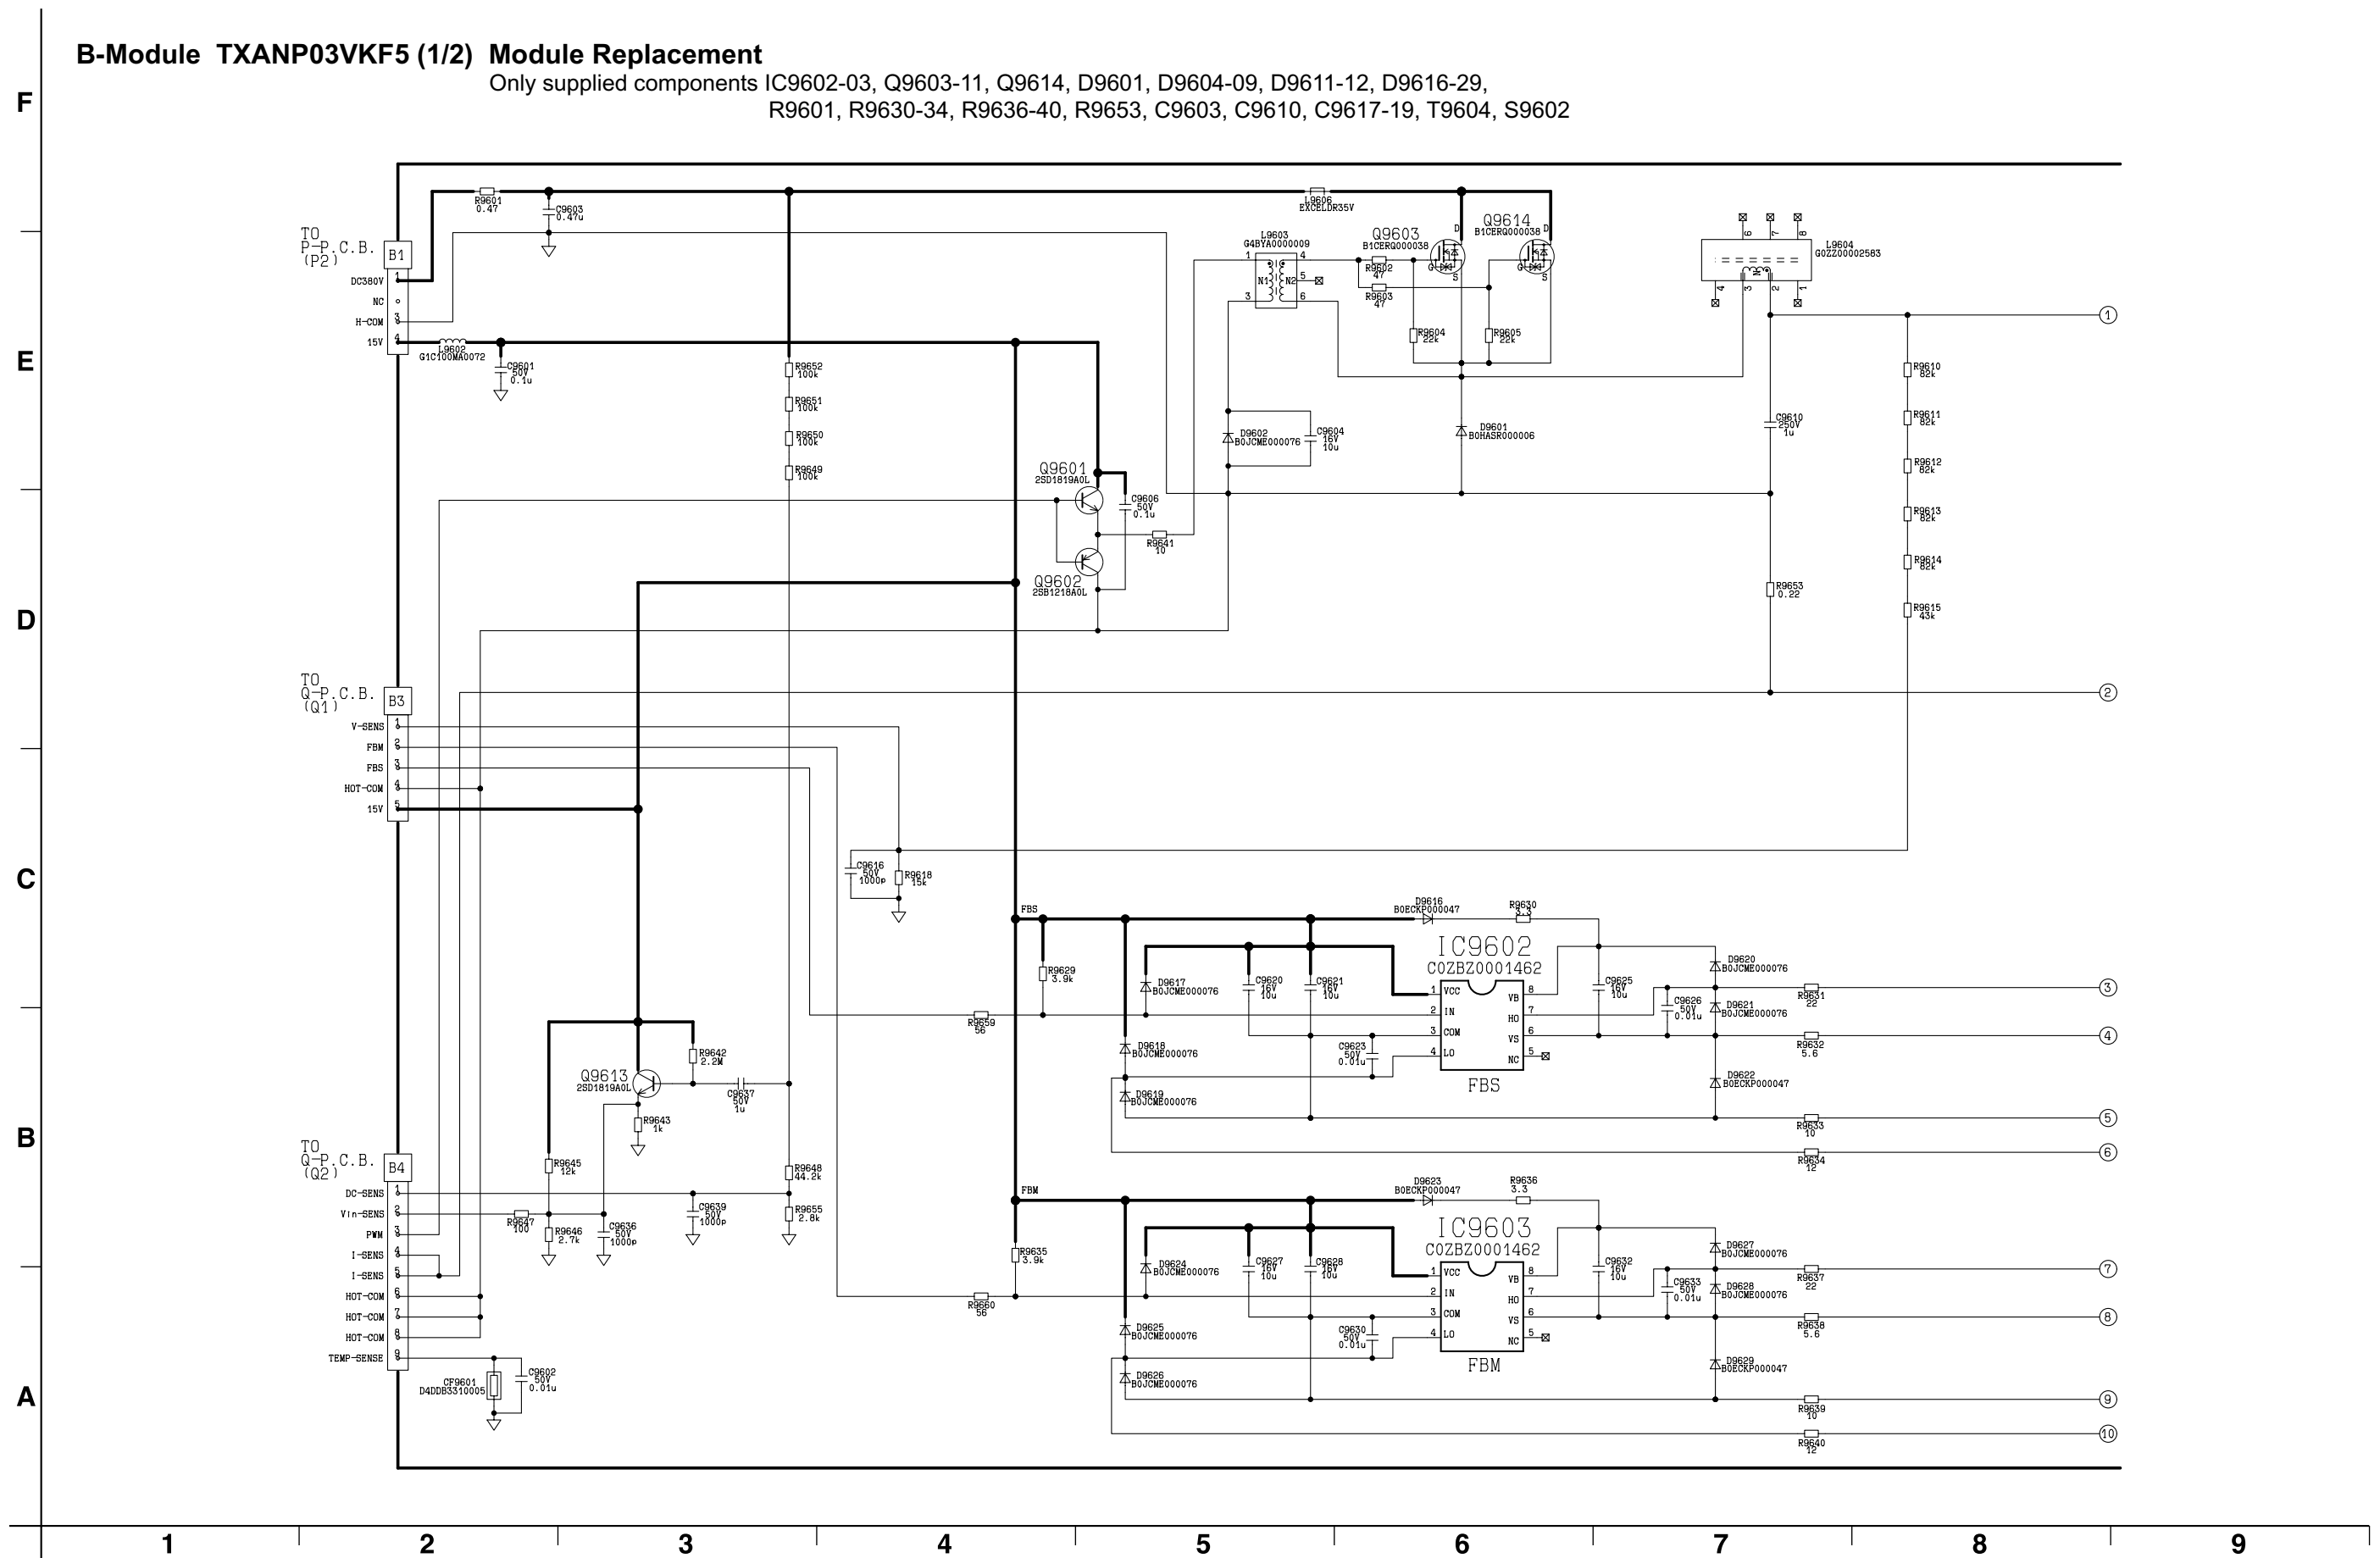

11.13. B-Module (2/2)

B-Module TXANP03VKF5 (2/2) Module Replacement

Only supplied components IC9602-03, Q9603-11, Q9614, D9601, D9604-09, D9611-12, D9616-29, R9601, R9630-34, R9636-40, R9653, C9603, C9610, C9617-19, T9604, S9602

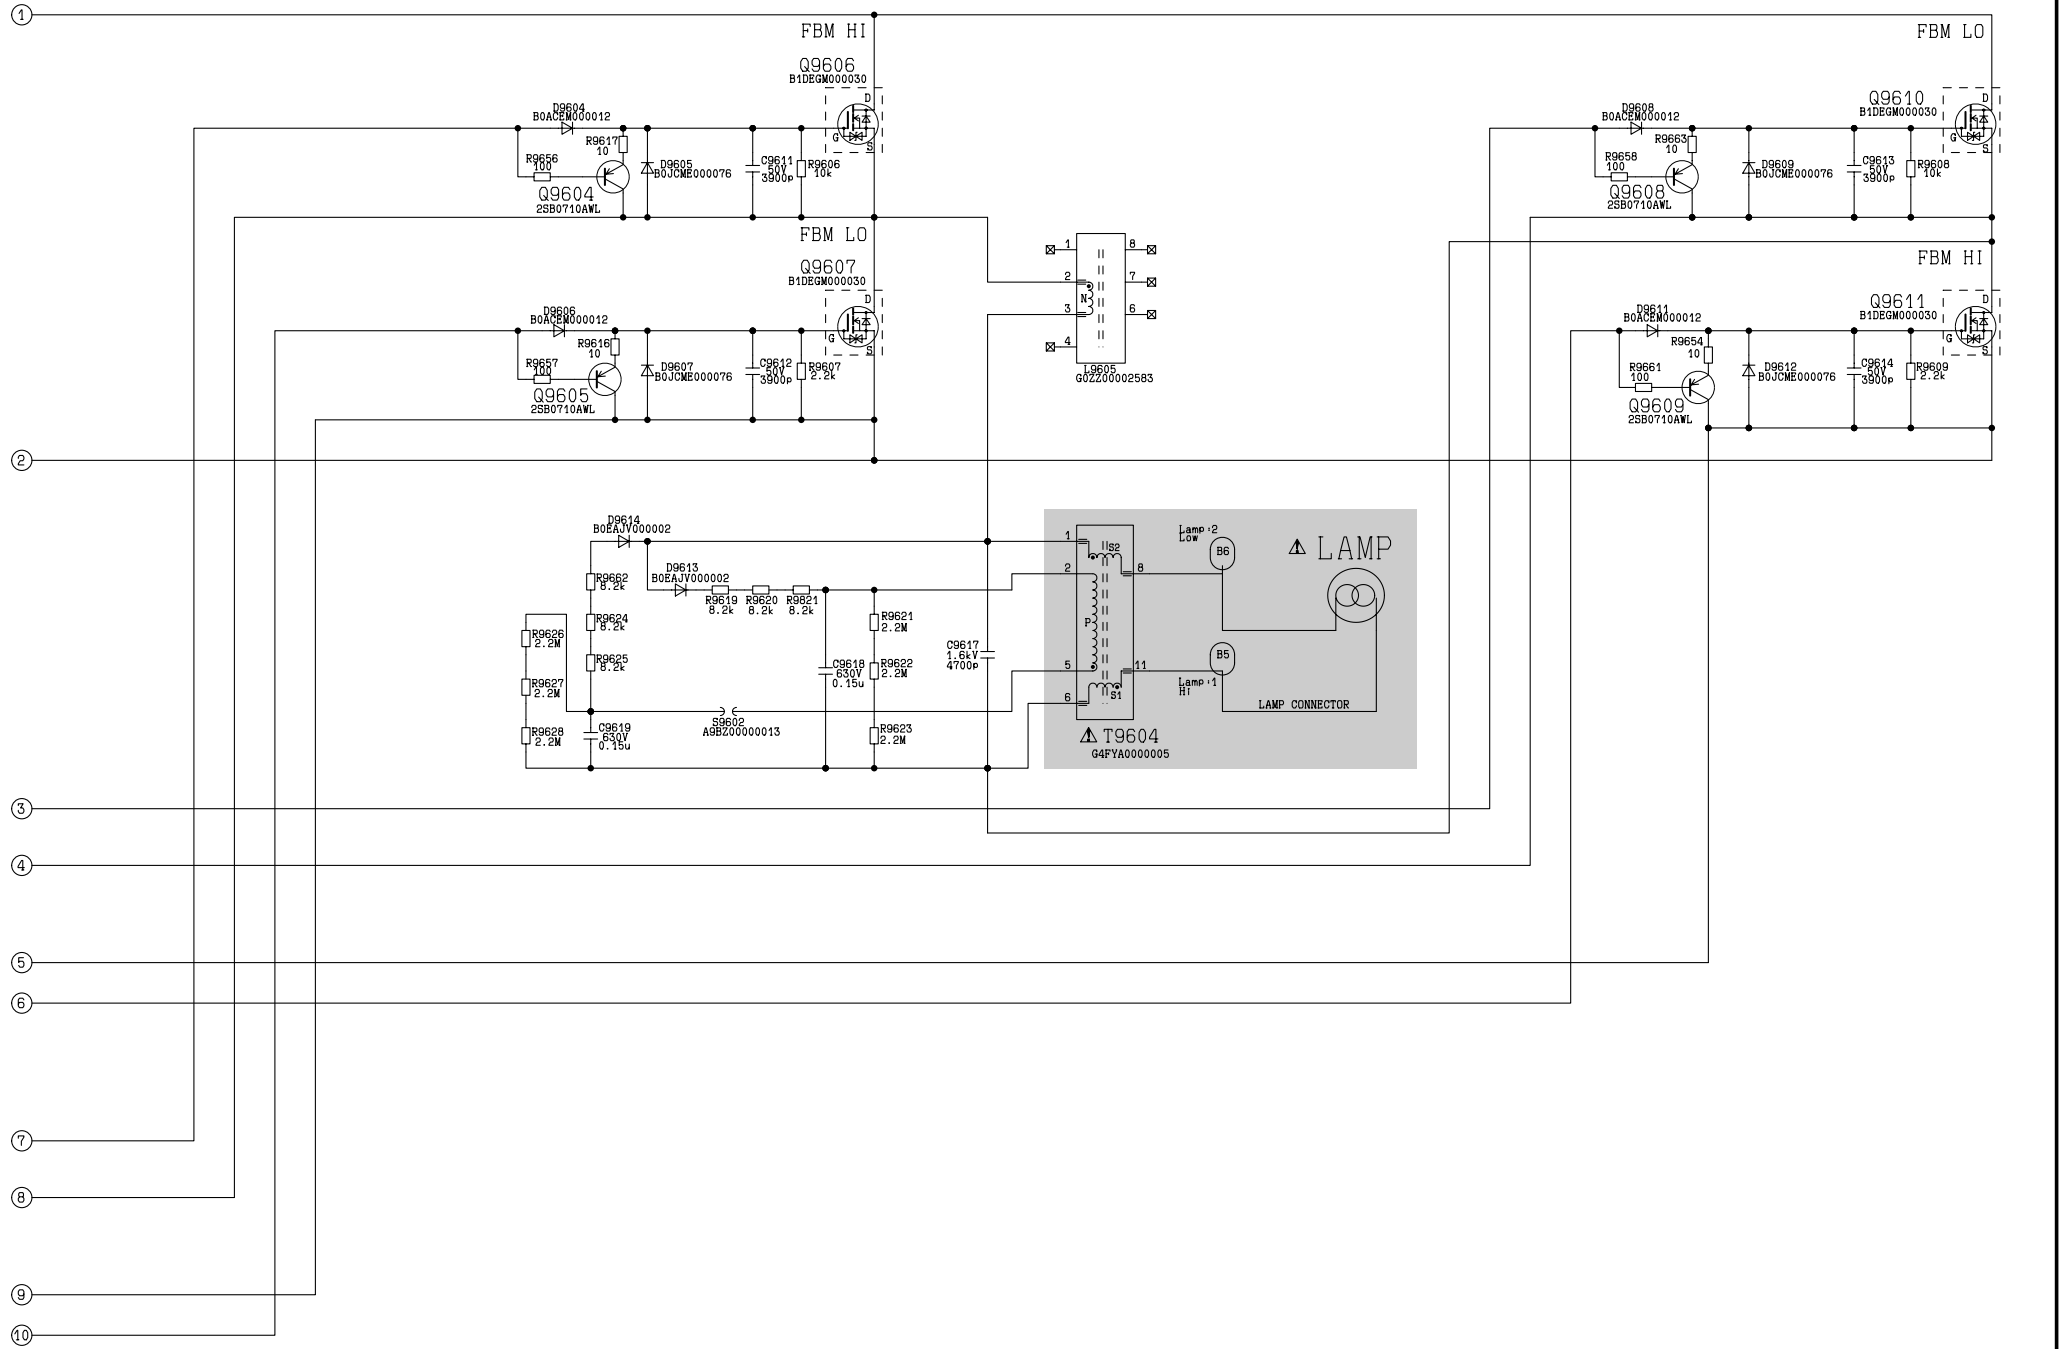


12 Circuit Boards

12.1. A-P.C.Board (Foil Side)

A-P.C.Board TXANP01VKF5
(Foil Side)

A-P.C.Board (Foil Side)											
IC				TRANSISTOR				TP			
IC1002	B-5	IC1028	C-1	IC1102	B-4	Q1015	A-3	TPA01	A-5	TPA13	A-7
IC1003	B-6	IC1031	D-7	IC1116	C-2	Q1017	A-3	TPA03	D-3	TPA14	A-7
IC1007	A-7	IC1033	C-2	IC1123	B-3	Q1020	A-4	TPA07	B-3	TPA15	A-7
IC1008	C-2	IC1061	C-2	IC1139	C-6	Q1025	D-7	TPA08	B-3		
IC1012	C-3	IC1065	C-4			Q1026	D-7	TPA09	B-4		
IC1013	C-4	IC1066	D-2			Q1027	A-3	TPA10	B-4		
IC1014	C-4	IC1093	D-4			Q1028	A-3	TPA11	D-3		
IC1027	B-1	IC1094	D-6			Q1032	D-5	TPA12	D-2		

ADDRESS INFORMATION

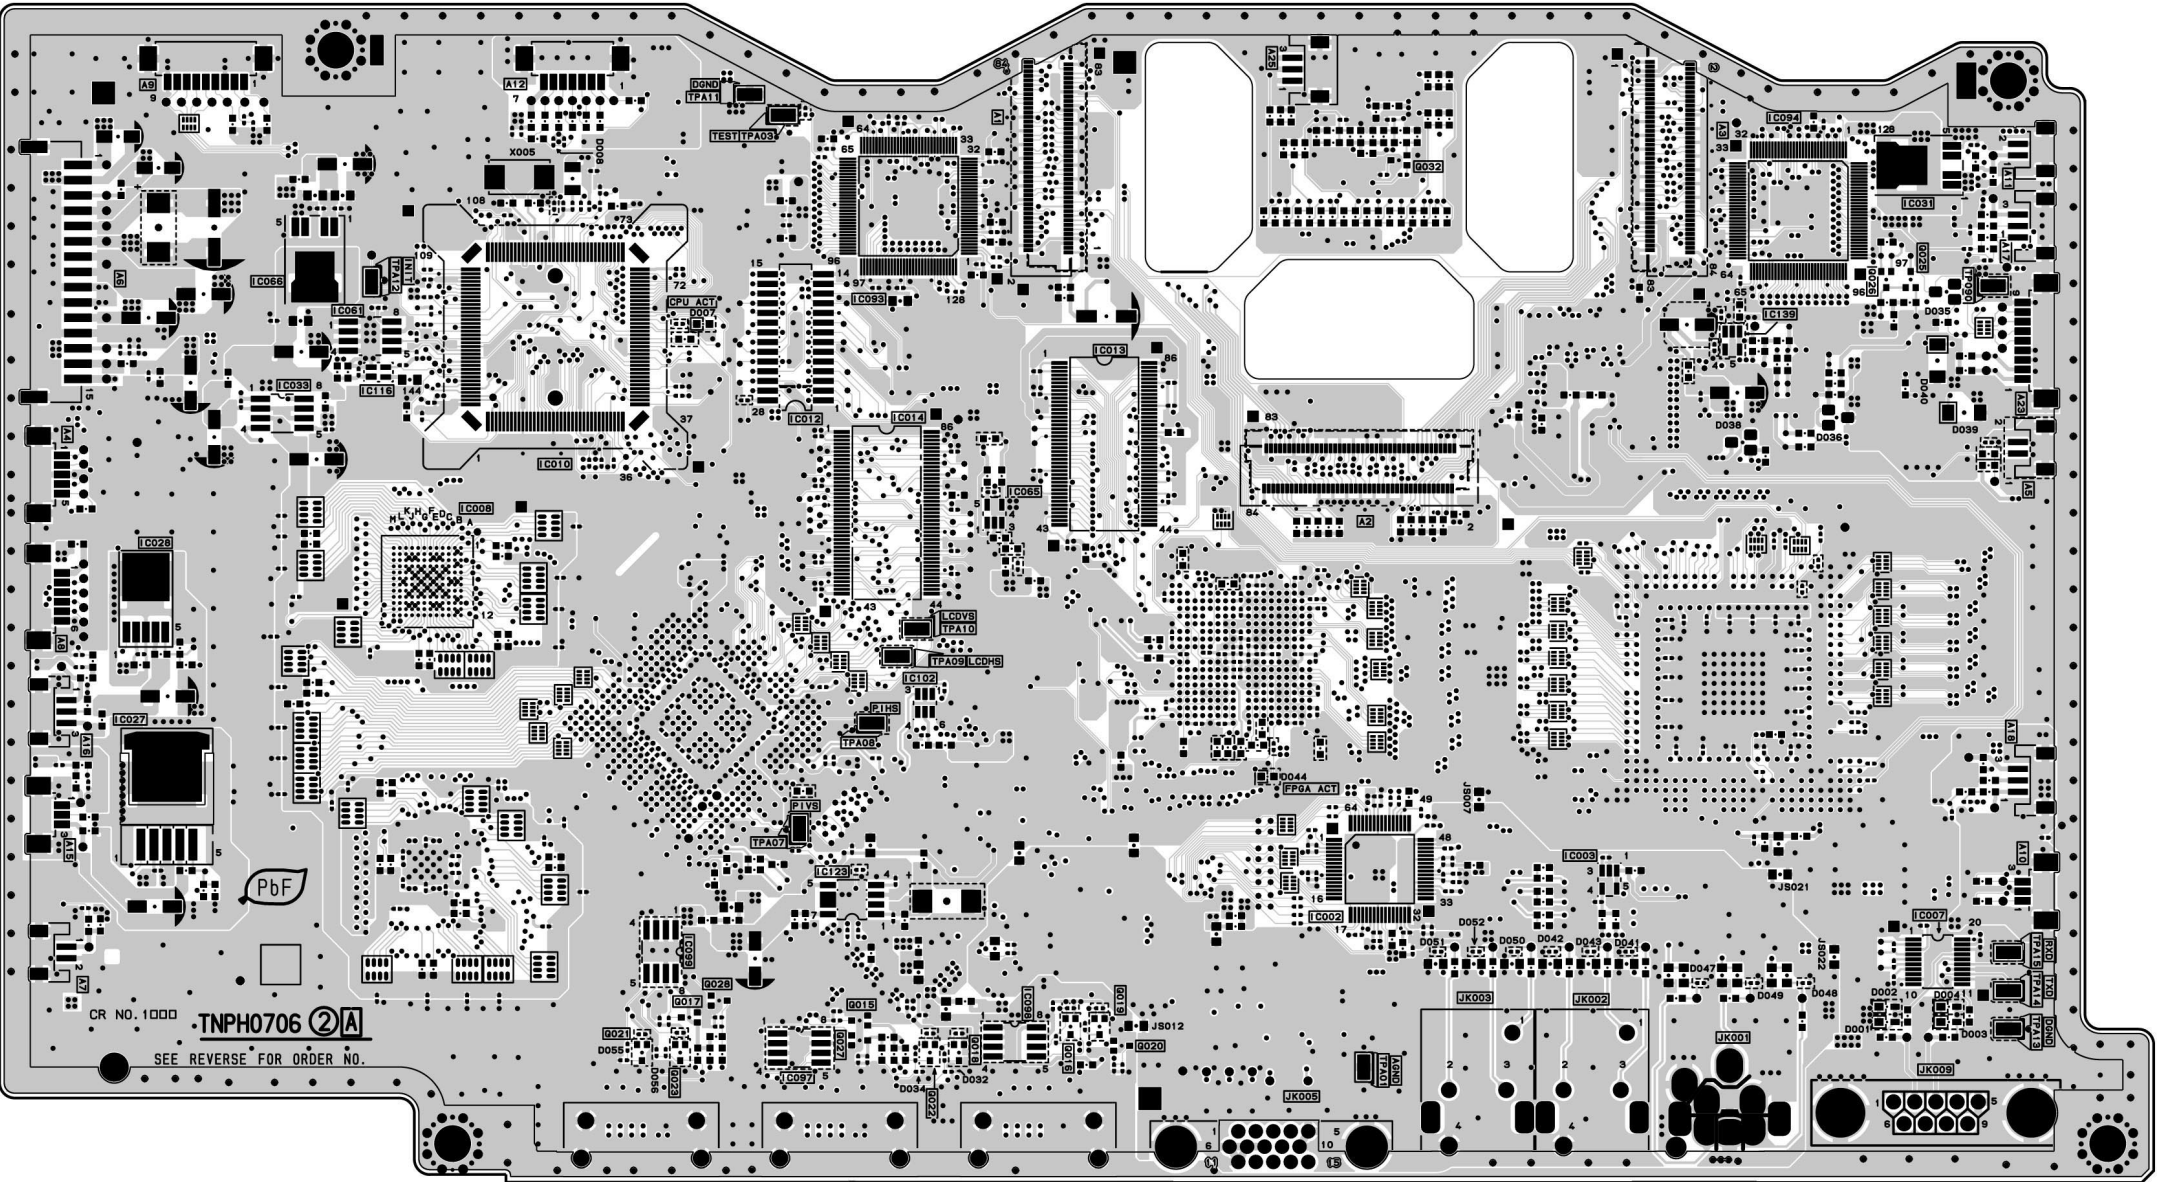


12.2. A-P.C.Board (Component Side)


A-P.C.Board TXANP01VKF5
(Component Side)

A-P.C.Board (Component Side)									
IC						TRANSISTOR			
IC1001	A-5	IC1029	D-1	IC1100	A-2	IC1142	C-1	Q1008	C-7
IC1004	B-3	IC1030	B-2	IC1101	D-3	IC1143	C-2	Q1009	C-4
IC1005	B-5	IC1032	B-3	IC1104	D-3			Q1011	C-7
IC1006	B-6	IC1034	C-4	IC1107	B-1			Q1014	A-4
IC1009	A-3	IC1063	C-5	IC1111	A-3			Q1024	D-1
IC1011	B-3	IC1067	B-3	IC1124	B-4				
IC1015	B-3	IC1089	D-6	IC1137	A-3				
IC1016	D-6	IC1095	C-2	IC1138	A-3				
IC1026	B-1	IC1096	D-3	IC1141	C-2				


















ADDRESS INFORMATION

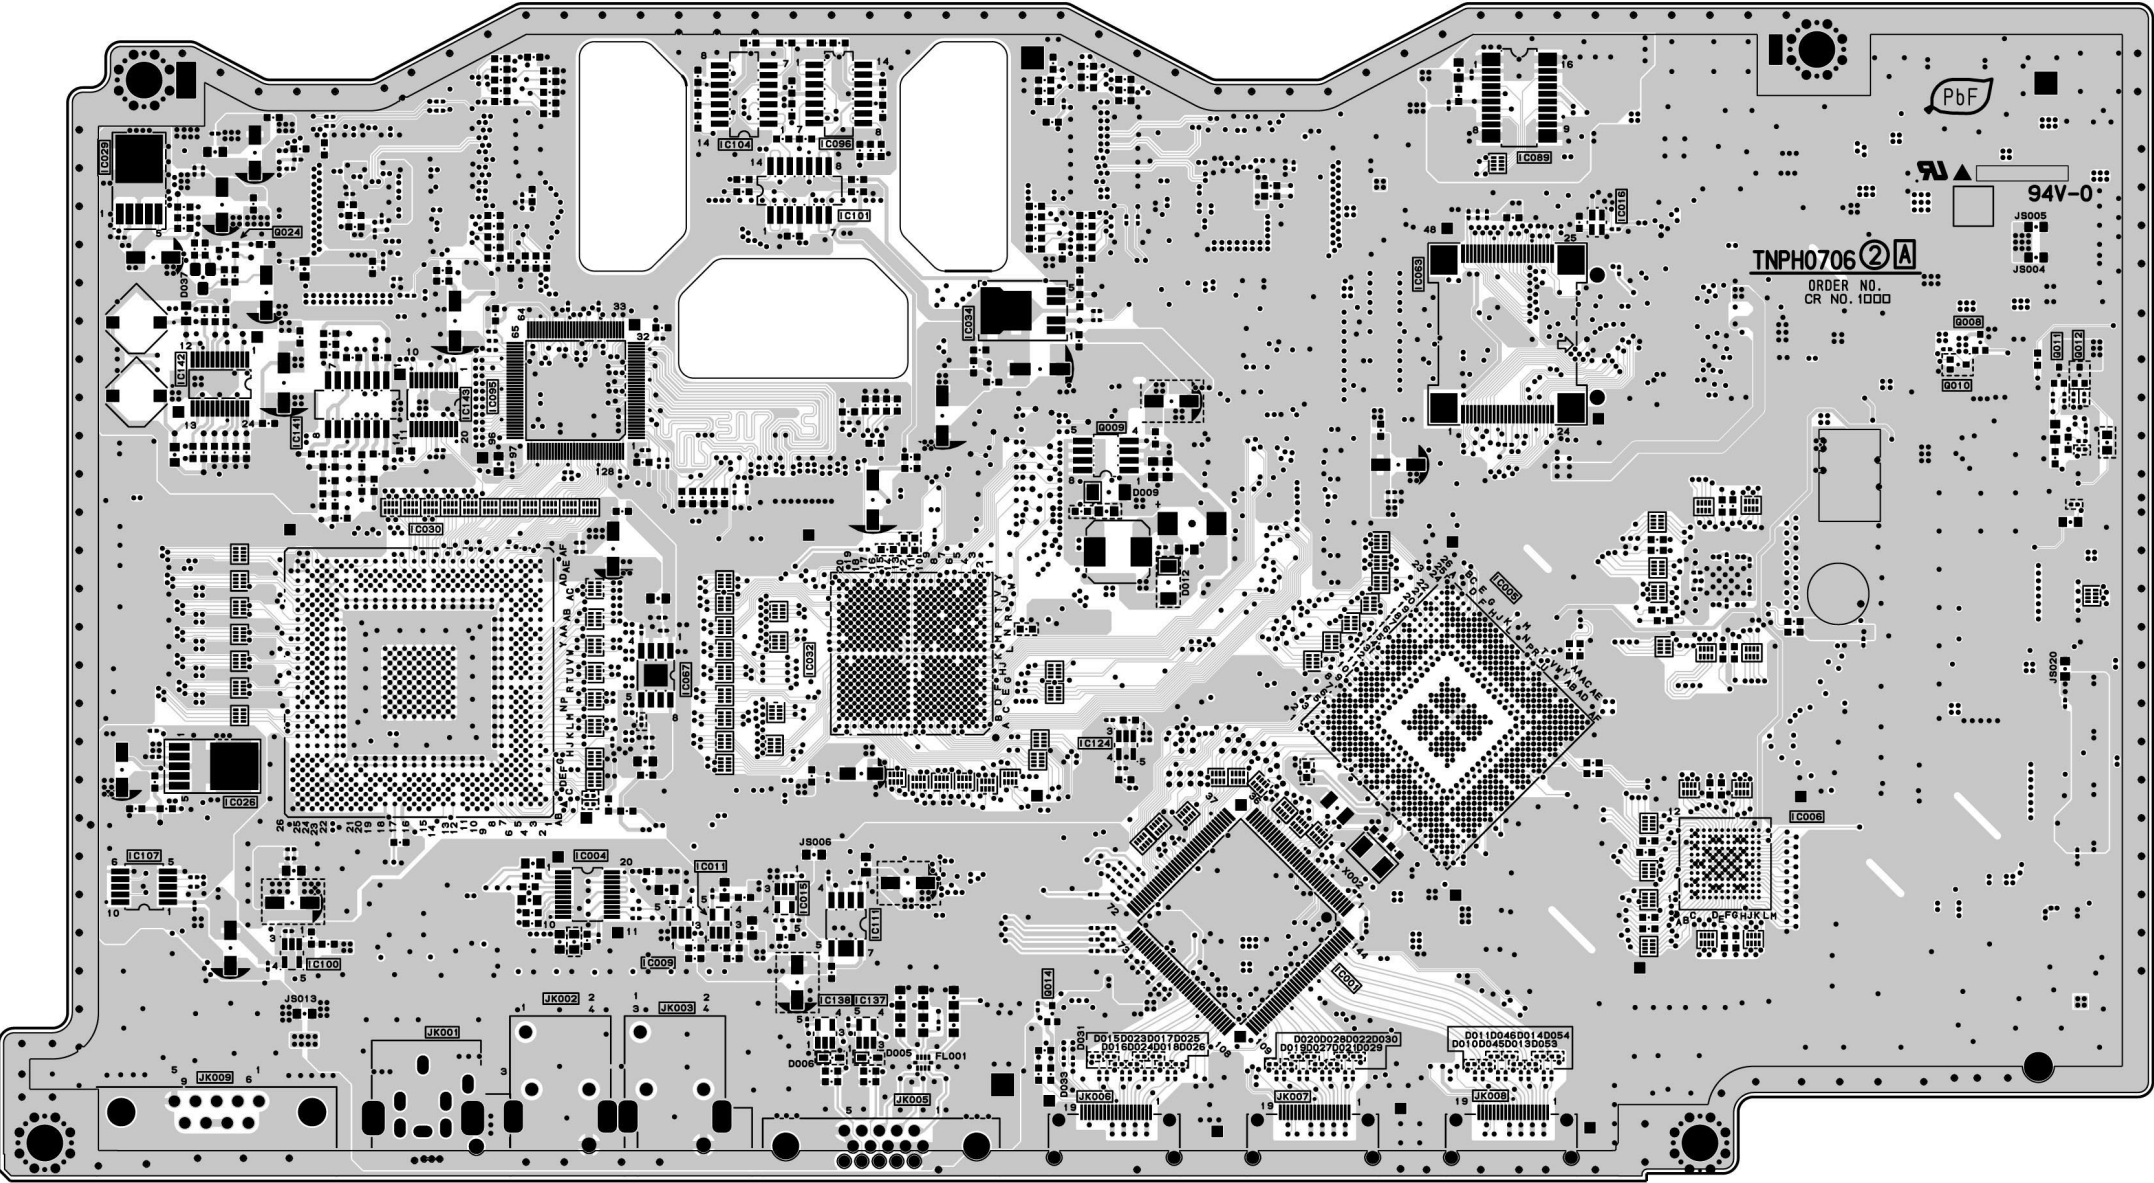

12.3. V-P.C.Board

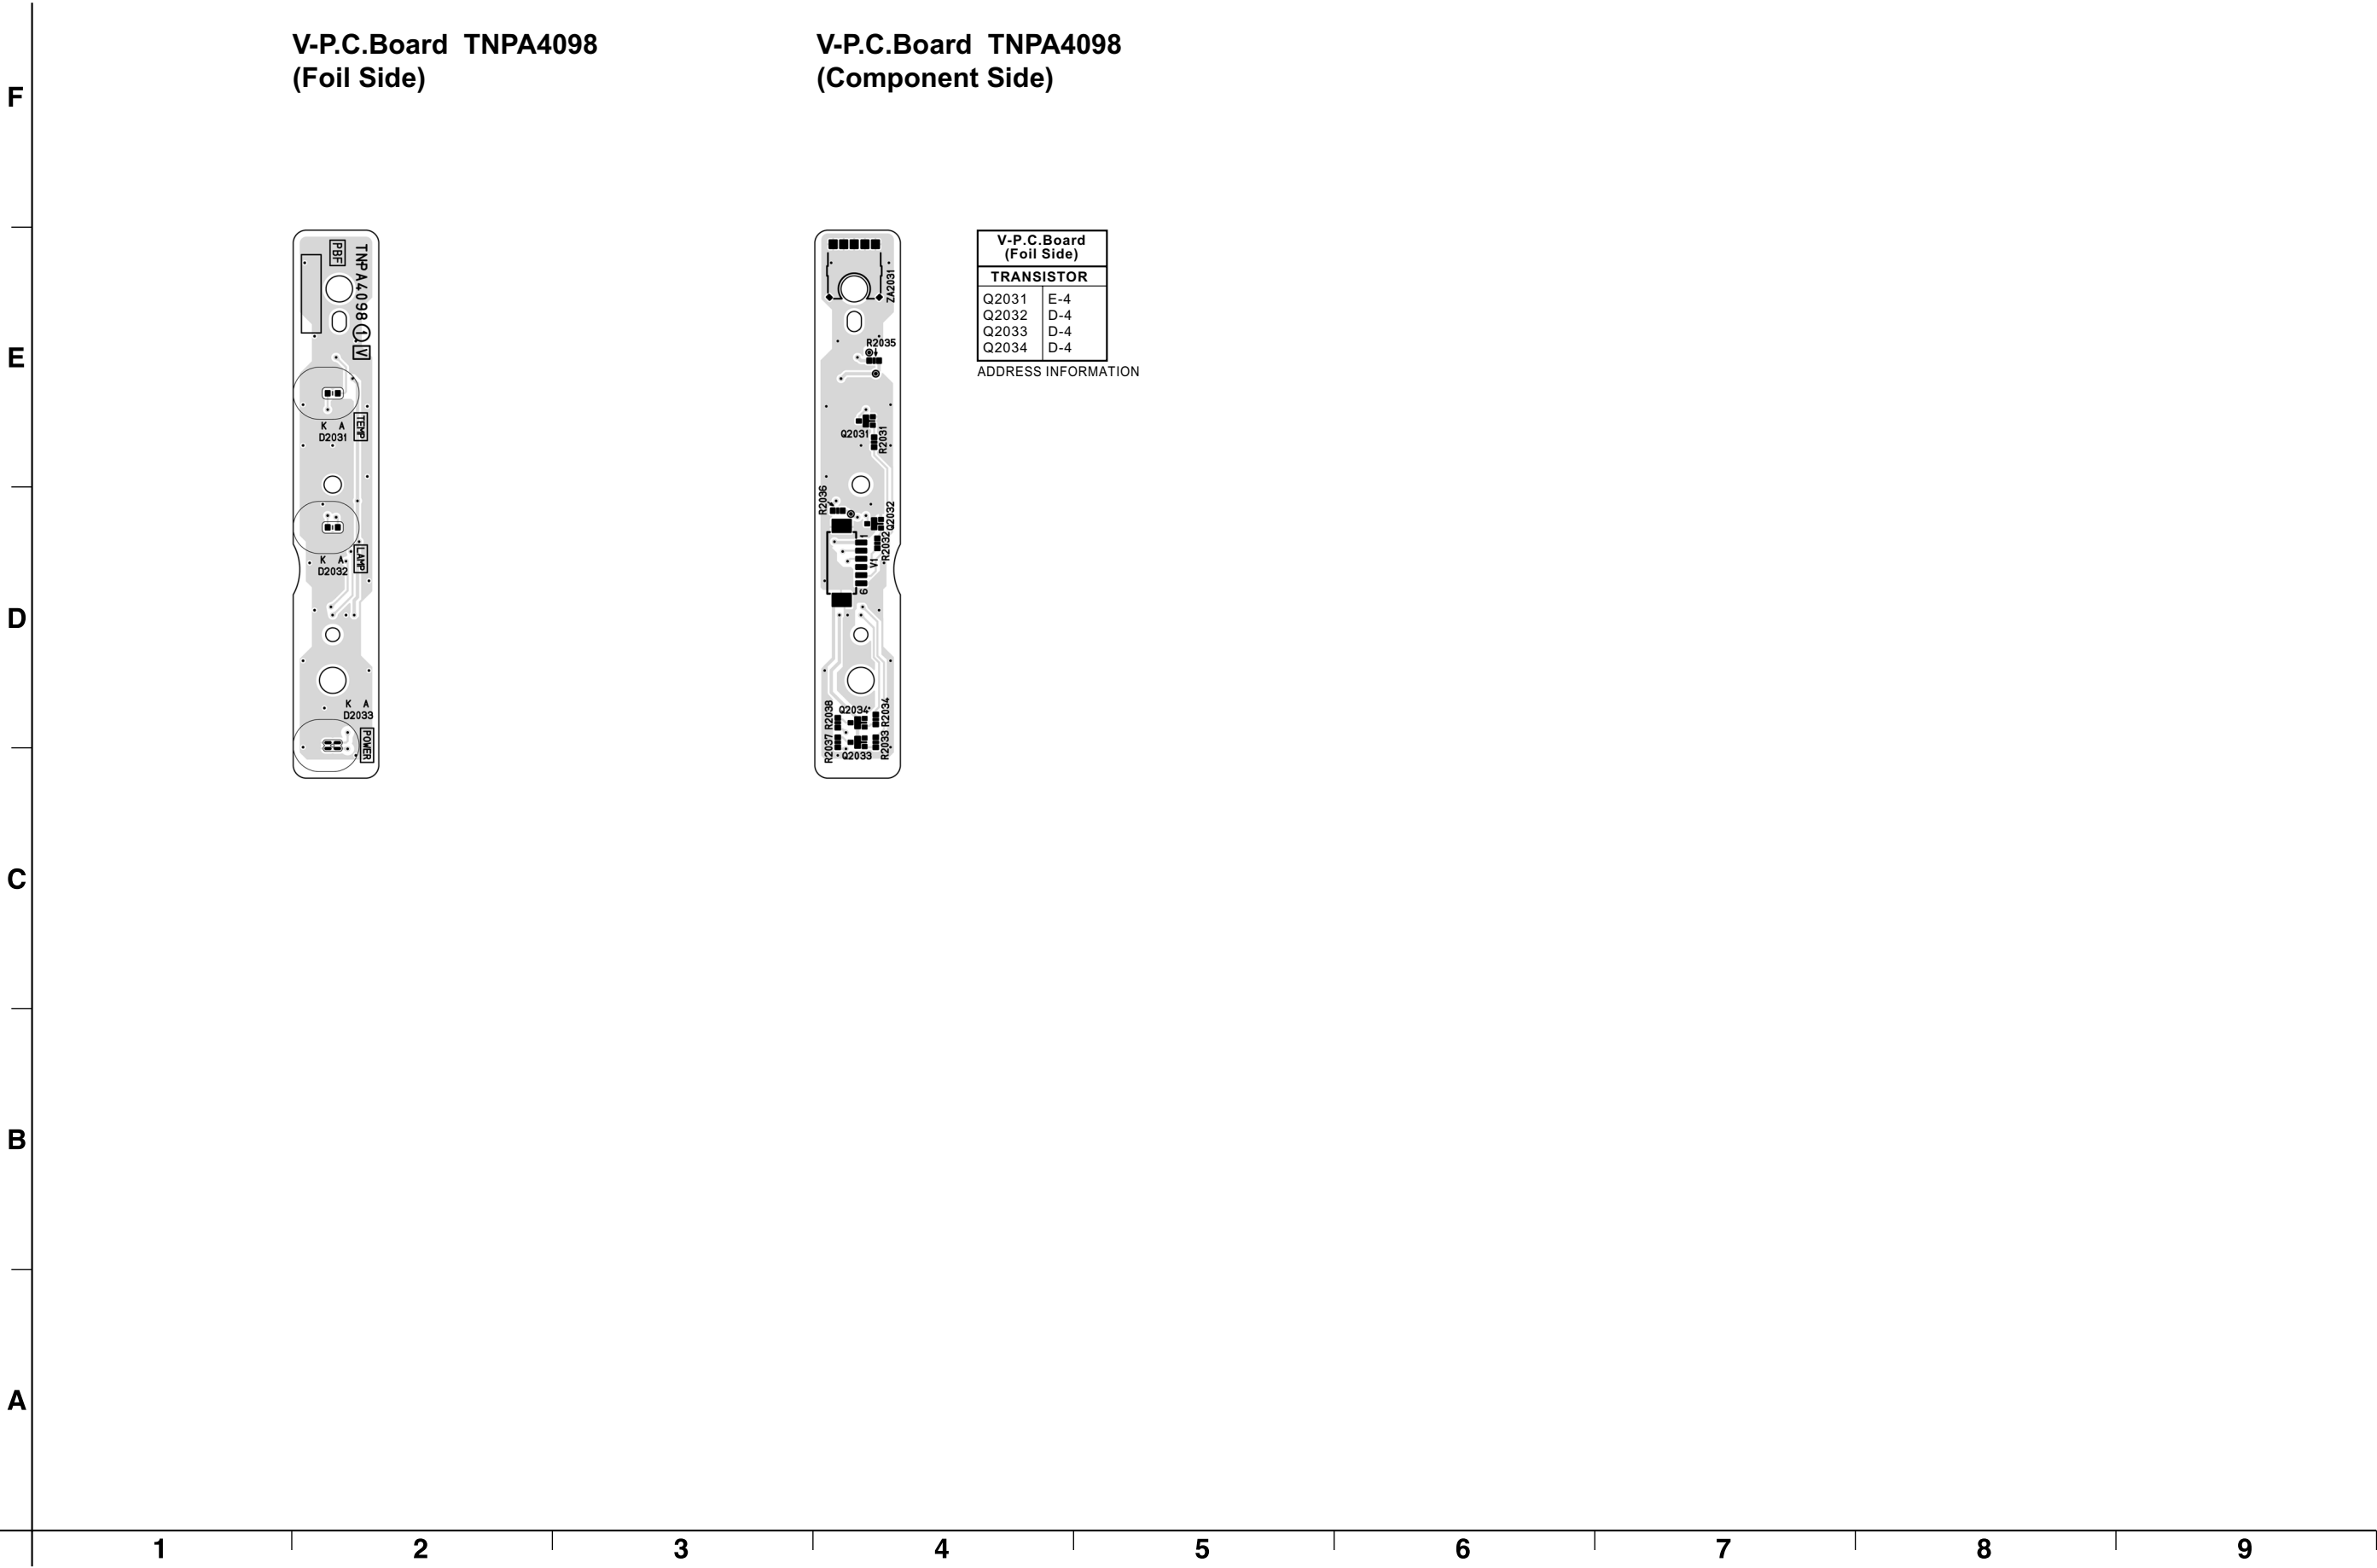


13 Terminal guide of ICs and transistors

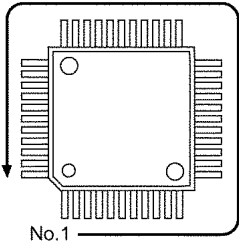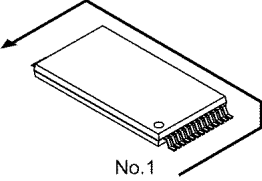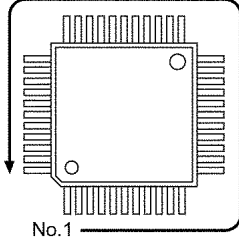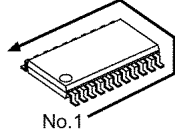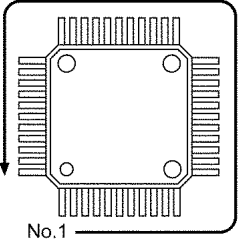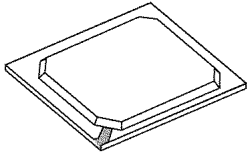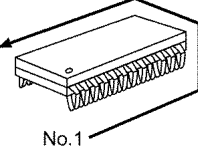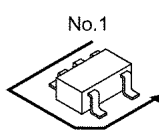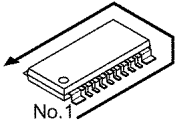
 TVRP614 144 Pin	 TVRP615 48 Pin	 C0EBE0000336 8 Pin
 C1AB00002824 64 Pin C1AB00002808 128 Pin	 TVRP616 20 Pin C0ZBZ0001361 20 Pin C3ABPJ000071 86 Pin C0GBG0000053 10 Pin C1BB00000888 24 Pin C0ABCA000085 14 Pin C1AB00002843 20 Pin	 C0JBAZ002885 6 Pin  C0CBCY000004 4 Pin C0CBCAG00016 4 Pin
 C1AB00002841 144 Pin	 C0DBEFH00001 8 Pin C0CBCAG00018 8 Pin	 C0DBEKG00004 5 Pin C0DBEYY00042 5 Pin
 C1AB00002619 C1ZBZ0003420 C1AB00002821	 C3BBFC000321 28 Pin	 C0JBAA000359 5 Pin C0CBCBD00008 5 Pin C0CBCDD00004 5 Pin C0CBCAC00192 5 Pin C0JBAZ002115 5 Pin C0JBAA000359 5 Pin C0CBCAD00015 5 Pin
 C3ABQJ000048	 C0GBA0000035 16 Pin  C0DBGFF00004 7 Pin	 2SB1218A0L 2SD1819A0L

14 Exploded Views


Parts Location (1/3)

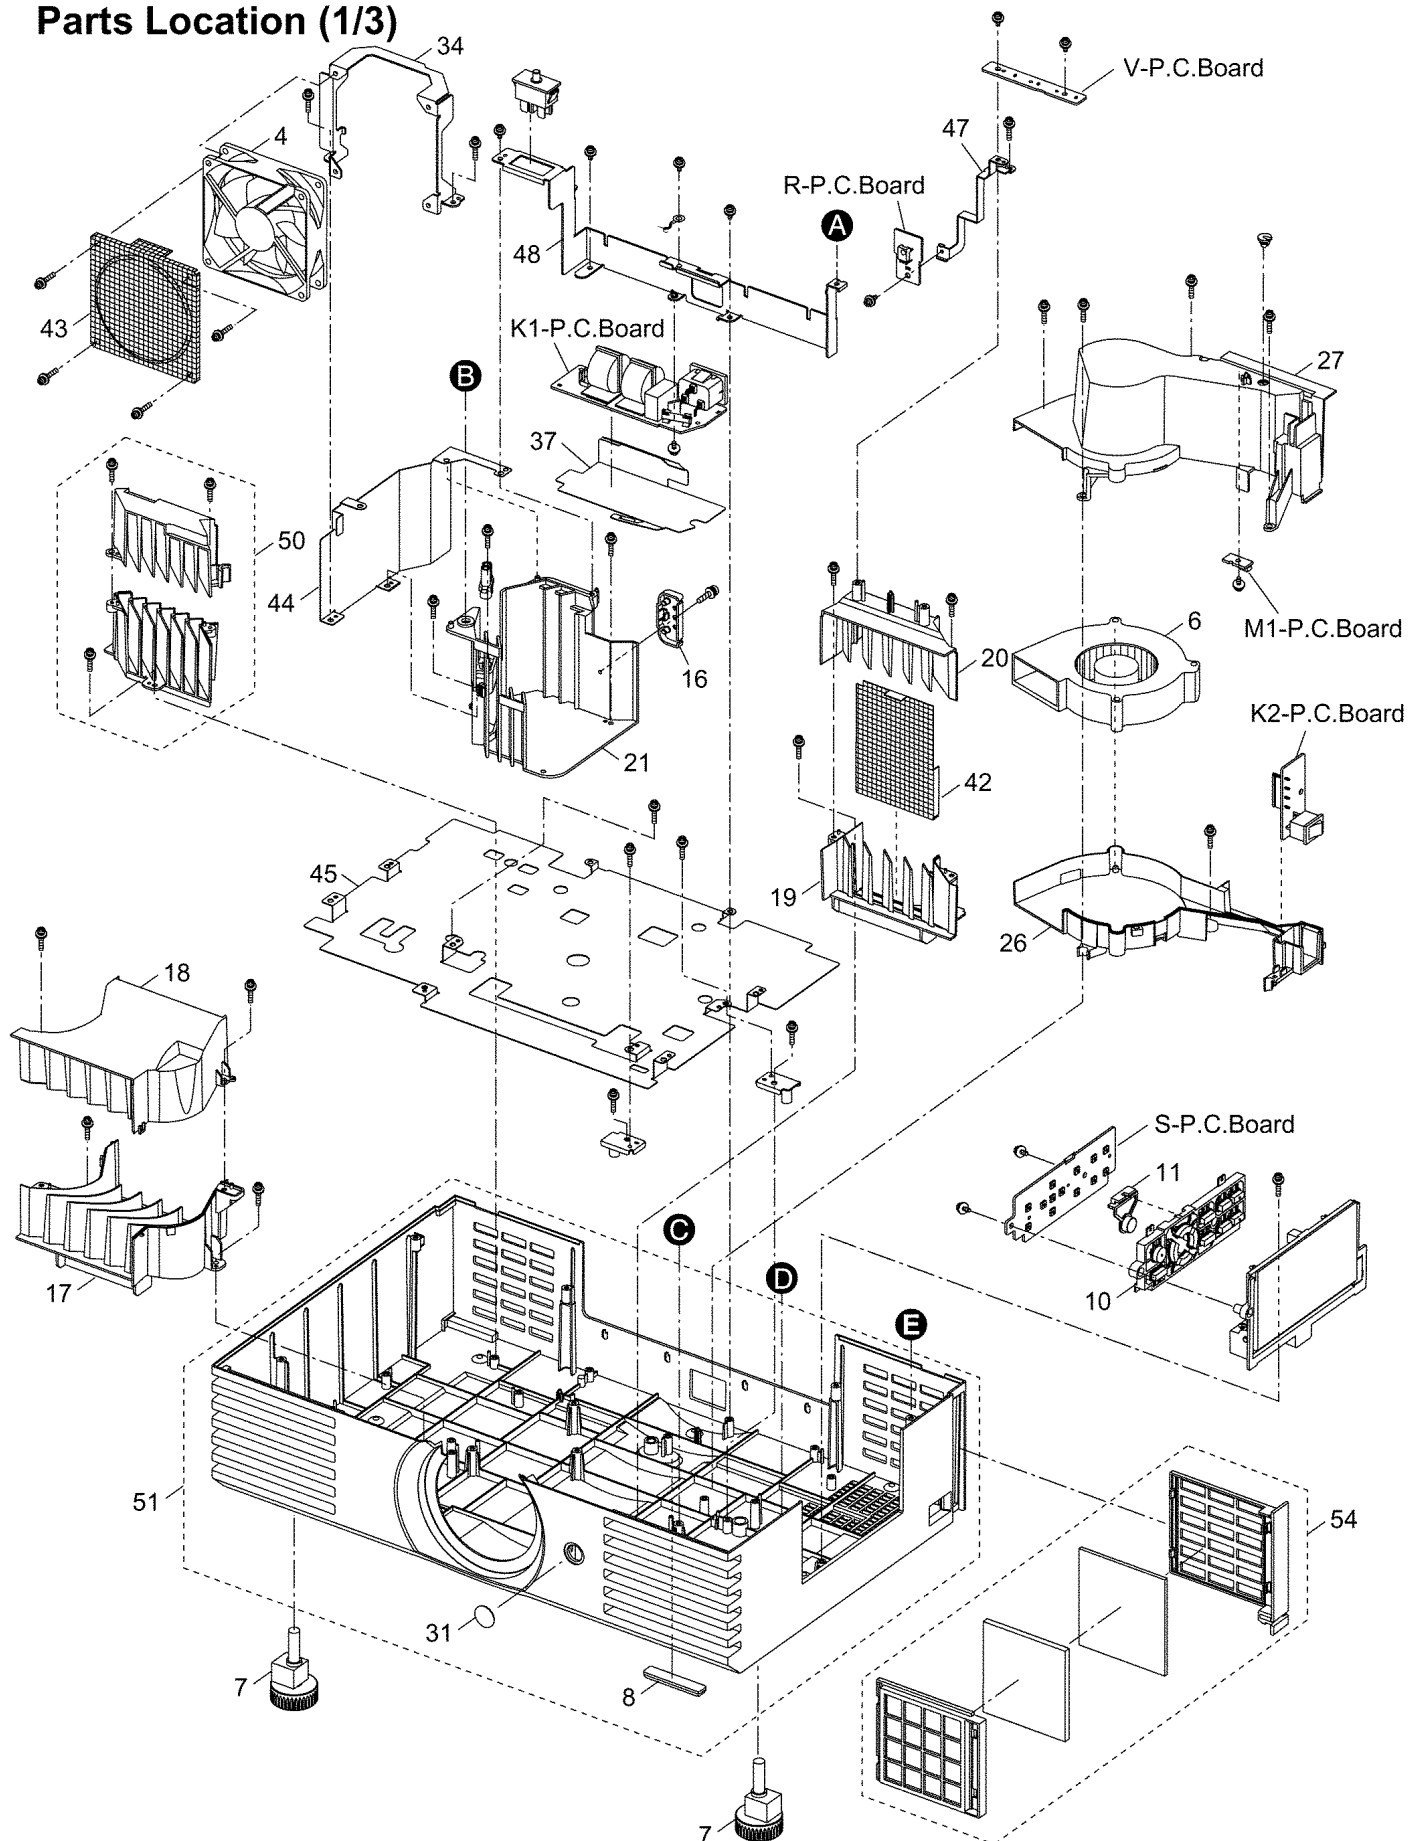


Parts Location (2/3)

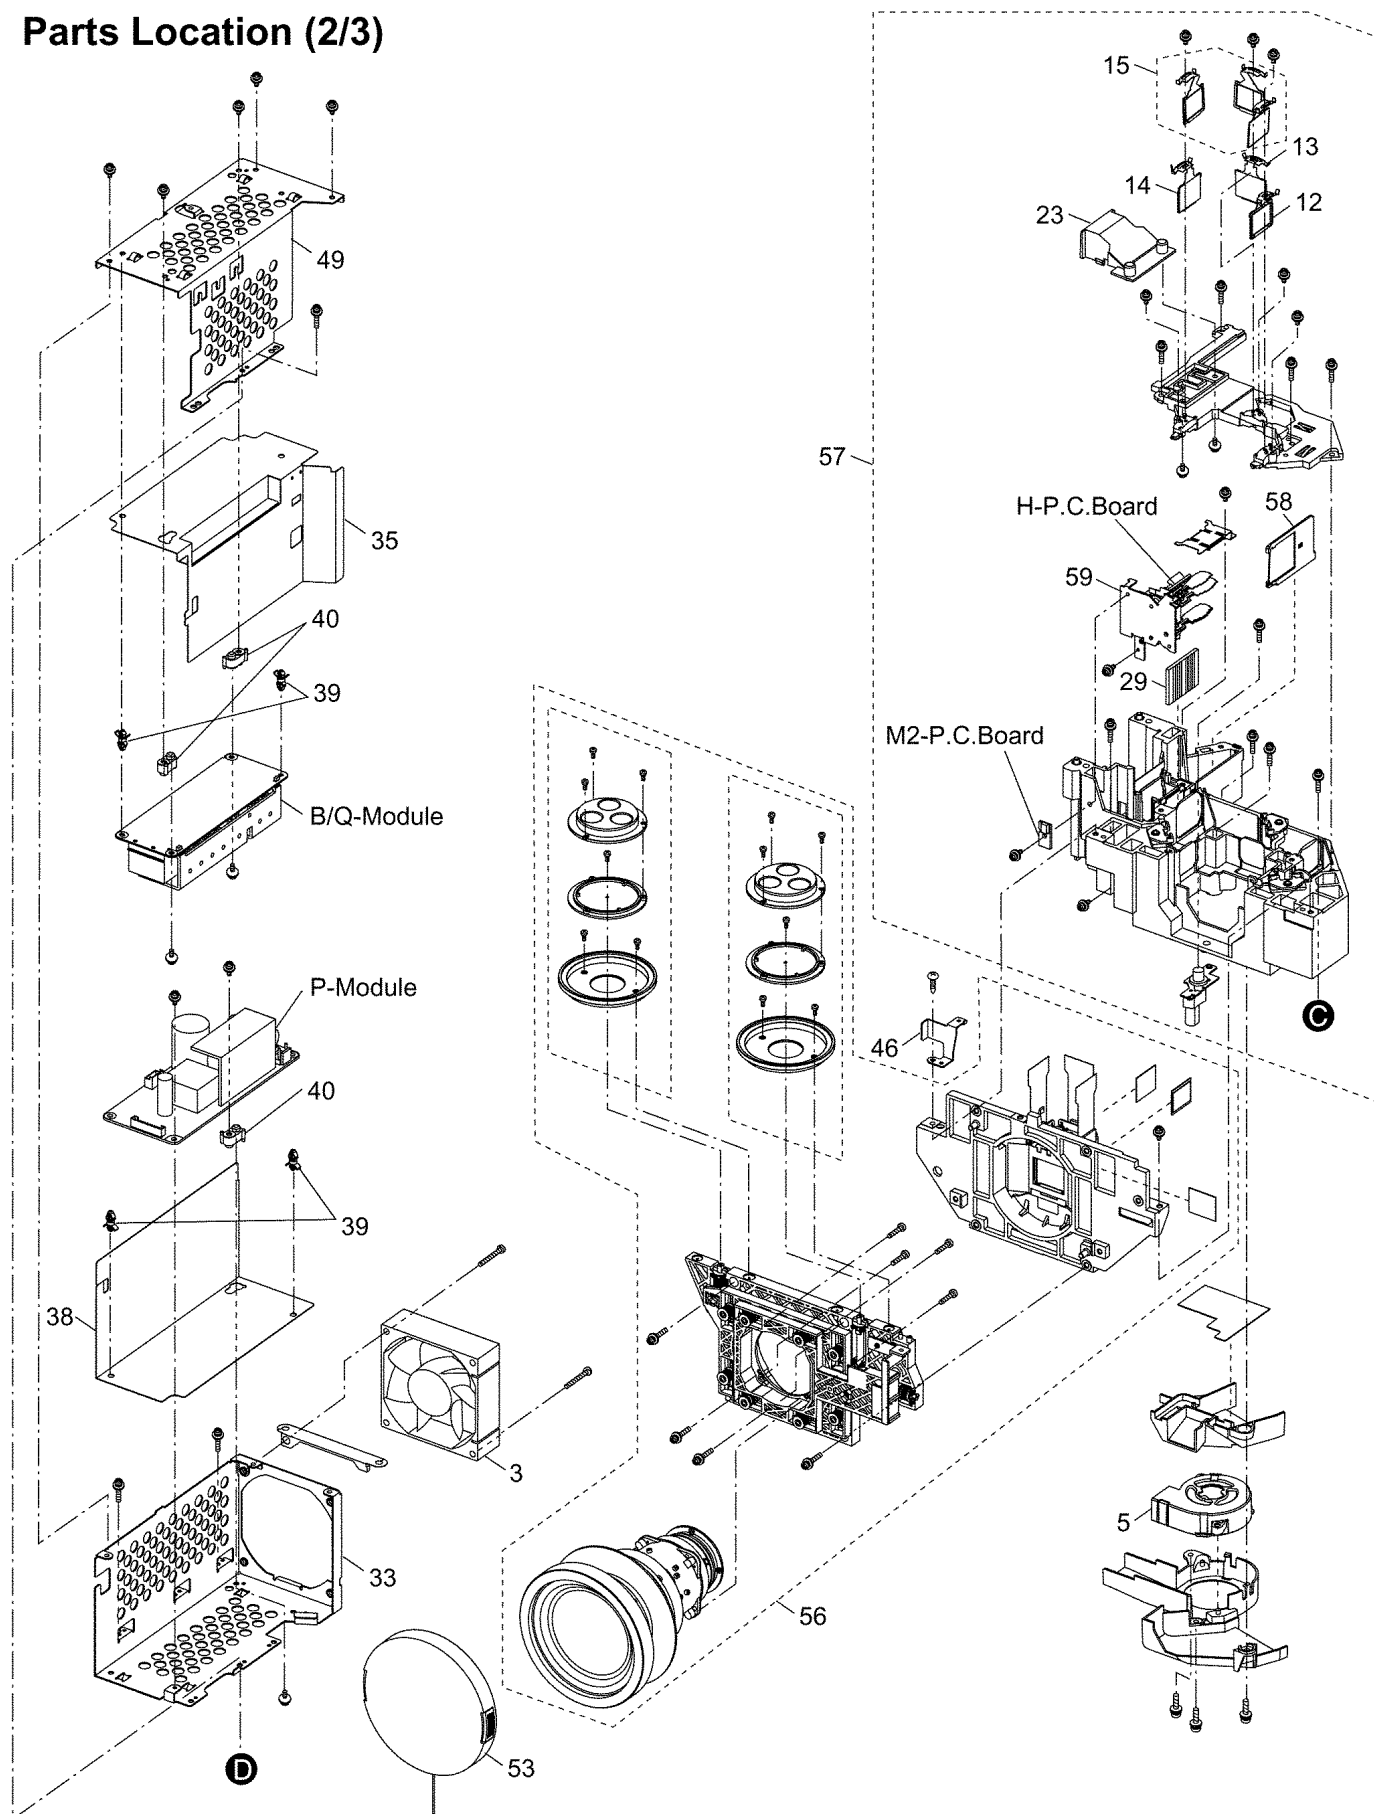

Parts Location (3/3)

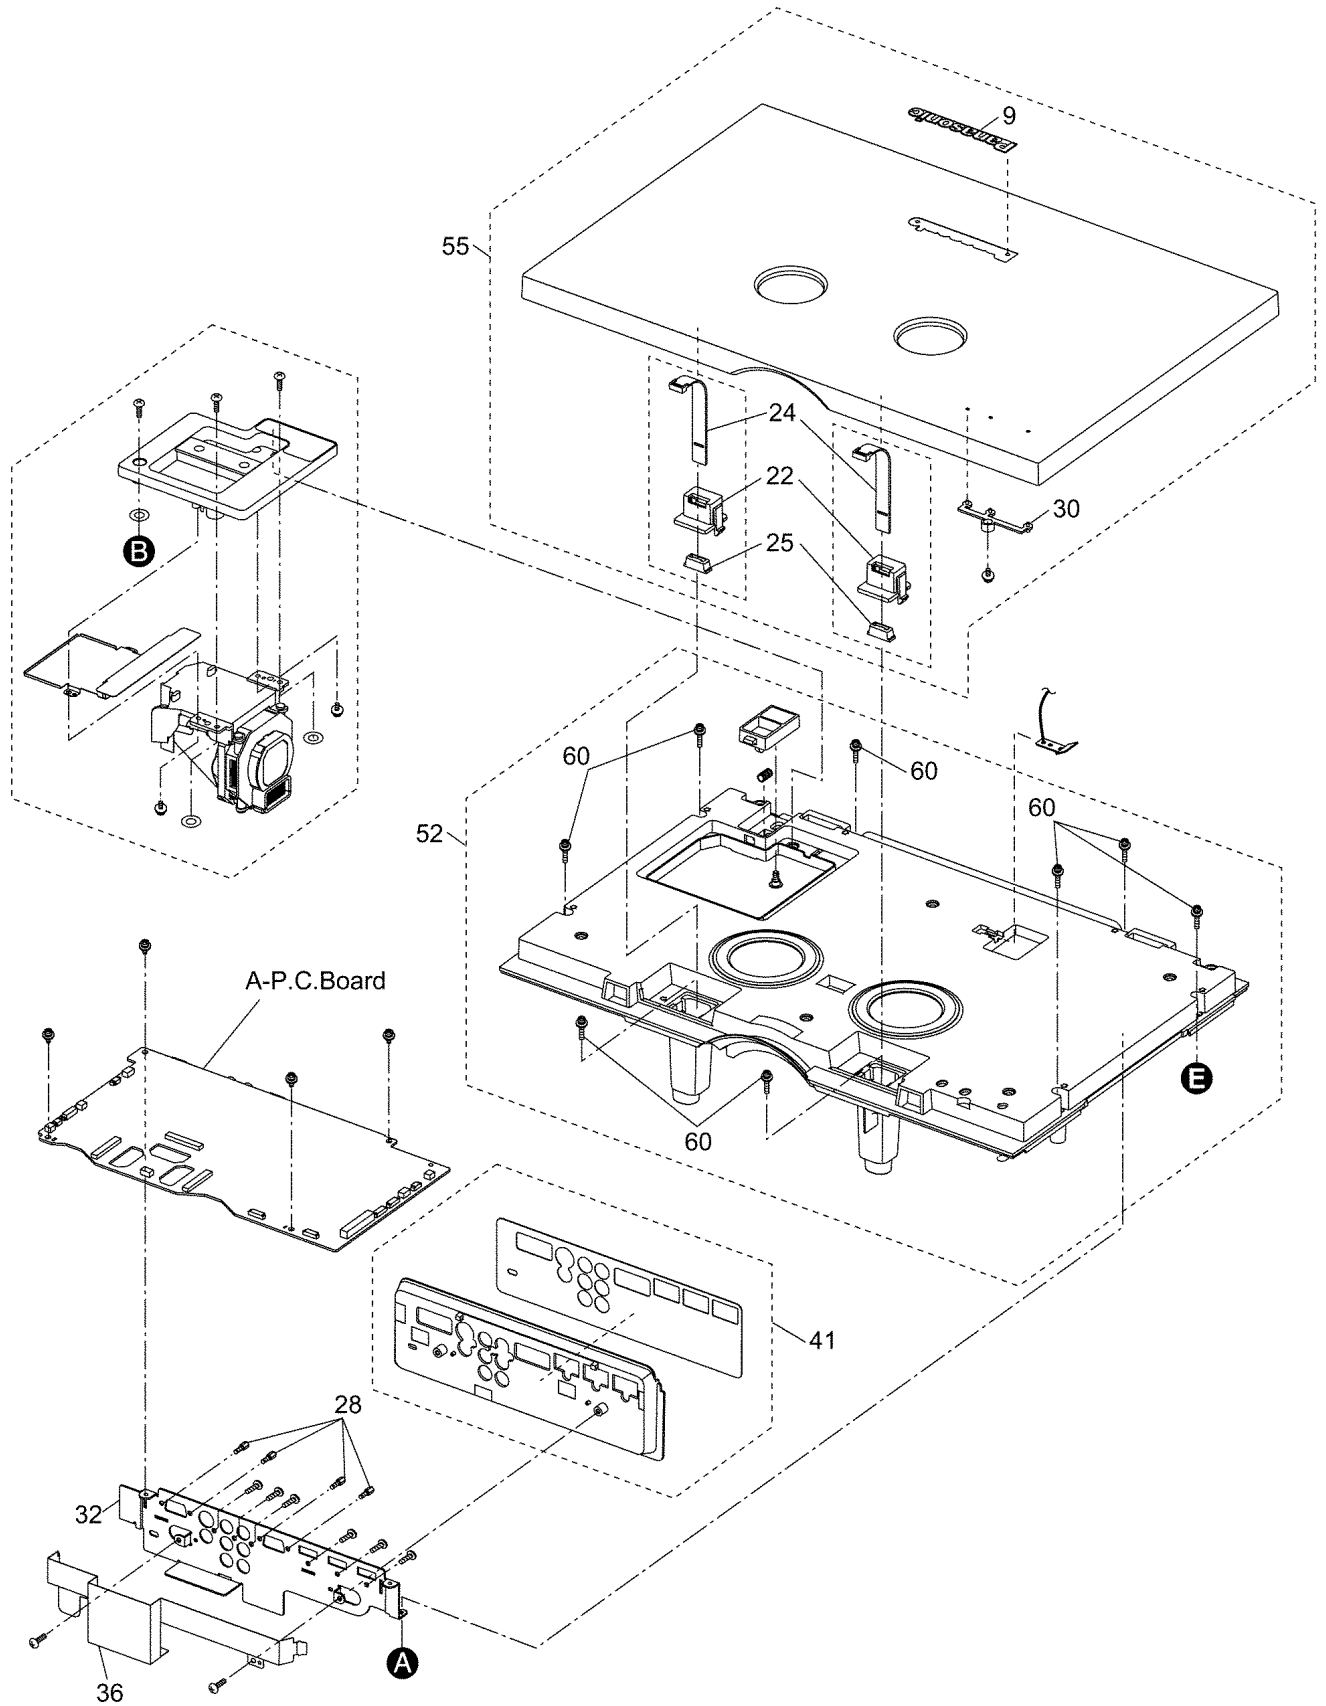

Packing Parts

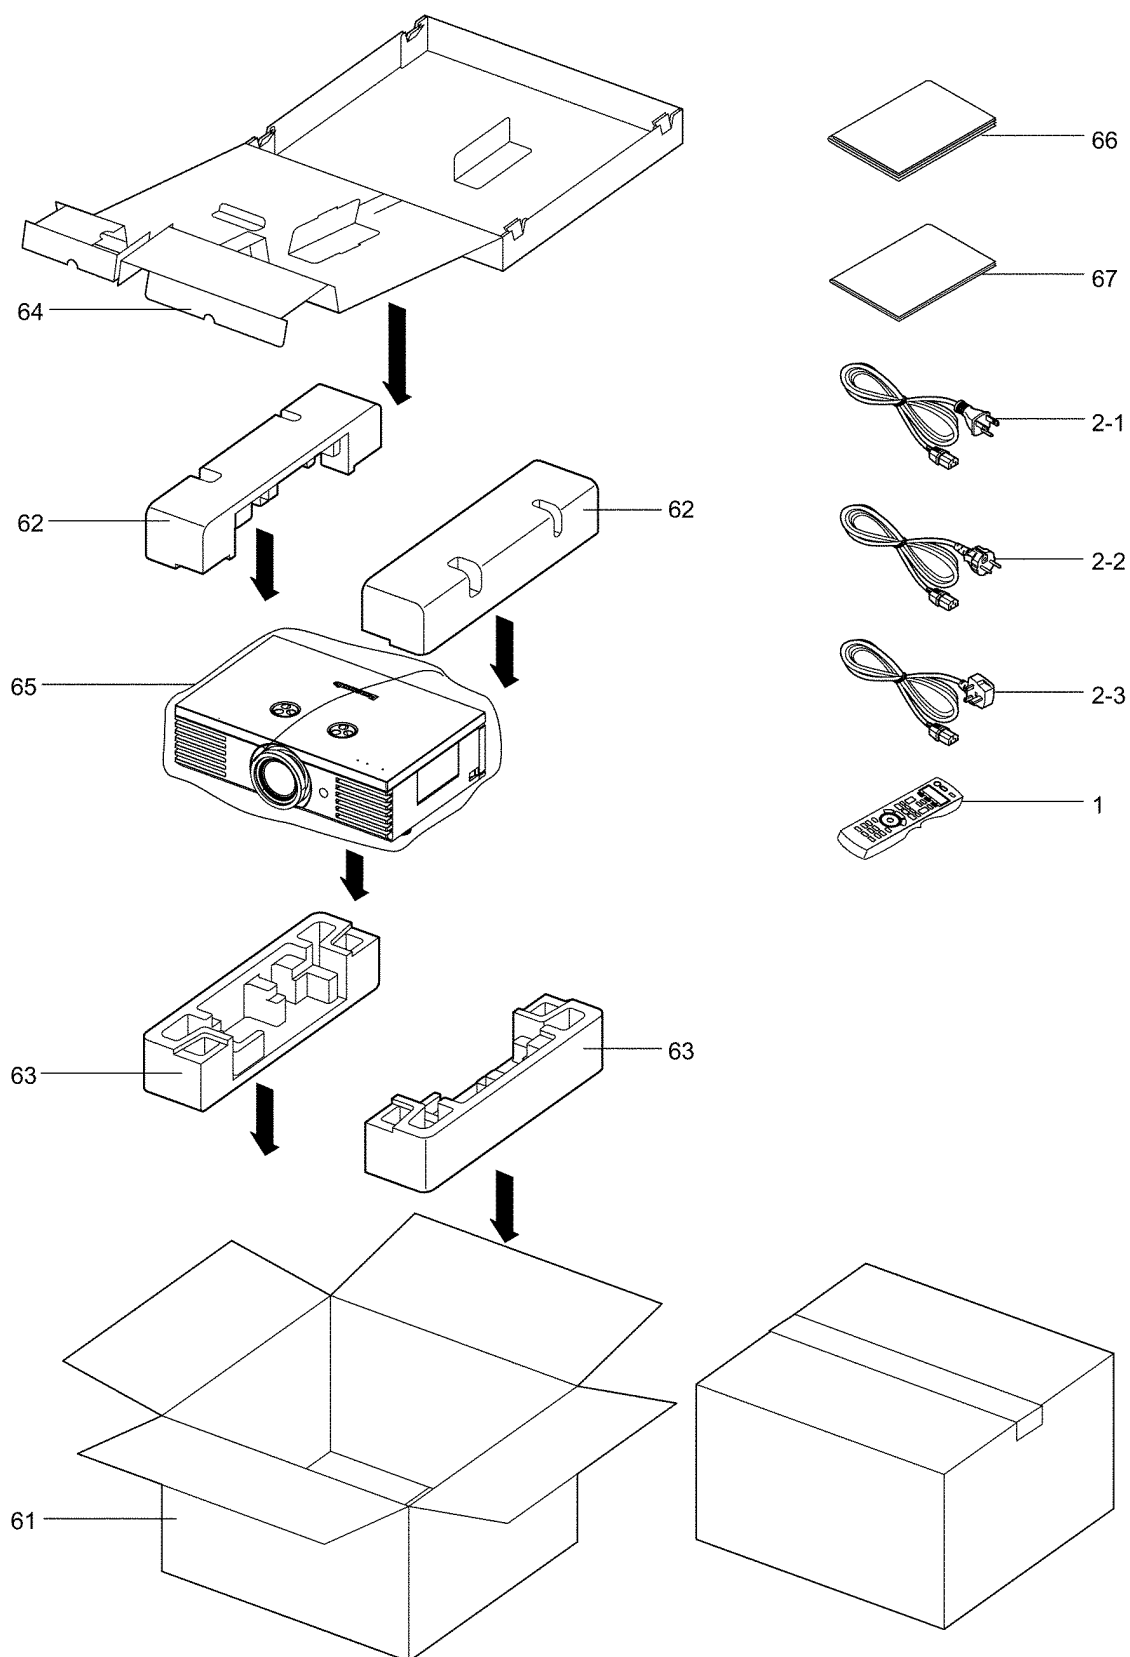

15 Replacement Parts List

Important Safety Notice

Components identified by the International symbol $\triangle$ have special characteristics important for safety.
When replacing any of these components, use only the manufacturer's specified parts.

Abbreviation of part name and description

1. Resistor

Example:

ERD25TJ104 C 100KOHM, J, 1/4W

TYPE	ALLOWANCE
C : Carbon	F : $\pm 1\%$
F : Fuse	G : $\pm 2\%$
M : Metal Oxide	J : $\pm 5\%$
Metal Film	K : $\pm 10\%$
S : Solid	M : $\pm 20\%$
W : Wire Wound	

2. Capacitor

Example:

ECKF1H103ZF C 0.01PF, Z, 50V

TYPE	ALLOWANCE
C : Ceramic	C : ± 0.25 pF
E : Electrolytic	D : ± 0.5 pF
P : Polyester	F : ± 1 pF
PP : Polypropylene	J : $\pm 5\%$
S : Polystyrol	K : $\pm 10\%$
T : Tantalum	L : $\pm 15\%$
	M : $\pm 20\%$
	P : $+100\%$, -0%
	Z : $+80\%$, -20%

Notes:

Printed circuit board assembly with mark (RTL) is no longer available after production discontinuation of the complete set.

Ref. No.	Part No.	Part Name & Description	Remarks
		[MECHANICAL PARTS]	
1	EUR7914Z60	REMOTE CONTROLLER	
	J0KG00000011	CORE	$\triangle$
	J0KG00000032	CORE	$\triangle$
	J0KG00000052	CORE	$\triangle$
	K0ADBE000002	INTERLOCK SW	$\triangle$
2-1	K2CG3FZ000008	POWER CORD	$\triangle$ AE2000U
2-2	K2CM3FZ000003	POWER CORD (EUROPE)	$\triangle$ AE2000E
2-3	K2CT3FZ000003	POWER CORD (ENG)	$\triangle$ AE2000E
3	L6FAYYYH0048	POWER FAN	$\triangle$
4	L6FAYYYH0070	VENTILATION FAN	$\triangle$
5	L6FCYYYH0012	PBS FAN	$\triangle$
6	L6FCYYYH0022	INHALATION FAN	$\triangle$
7	TBLB0063	ADJUSTER LEG	
8	TBLG3090	RUBBER LEG (REAR)	
9	TBMA253	PANASONIC BADGE	
	TBMG780	MODEL NAME PLATE	$\triangle$ AE2000U
	TBMG781	MODEL NAME PLATE	$\triangle$ AE2000E
	TBMG782	MODEL NO. LABEL	AE2000U
	TBMG783	MODEL NO. LABEL	AE2000E
	TBMU817	TERMINAL SHEET	
	TBMU820	CONTROL BUTTON SHEET	
10	TBXA50201	CONTROL BUTTON 1	
11	TBXA51002	CONTROL BUTTON 2	
12	TEEC0048	POLARIZING PLATE/IN (R)	
13	TEEC0049	POLARIZING PLATE/IN (G)	
14	TEEC0050	POLARIZING PLATE/IN (B)	
15	TEEC0059	PHASE DIFFERENCE PLATE	NORMAL
	TEEC0060	PHASE DIFFERENCE PLATE	REVERSE
16	TEEC5120	TEMP FUSE INSTALL METAL	$\triangle$
17	TEEC5266	LAMP VENTILATION DUCT 1	$\triangle$
18	TEEC5267	LAMP VENTILATION DUCT 2	$\triangle$
19	TEEC5269	POWER VENTILATION DUCT 1	$\triangle$
20	TEEC5270	POWER VENTILATION DUCT 2	$\triangle$
21	TEEC5273	LAMP HOUSE	$\triangle$
22	TEEC5280	TOP PANEL FIX METAL 1	$\triangle$
	TEEC5293-1	DIAL	
	TEEC5294-1	DIAL TRAY	$\triangle$
	TEEC5295	DIAL TRAY MASK	$\triangle$
23	TEEC5298	LIGHTING DUCT	$\triangle$

Ref. No.	Part No.	Part Name & Description	Remarks
24	TEEC5299	TOP PANEL FIX METAL 2	$\triangle$
25	TEEC5300	TOP PANEL FIX METAL 3	$\triangle$
26	TEEC5336	INHALATION DUCT 1	$\triangle$
27	TEEC5337	INHALATION DUCT 2	$\triangle$
	TEFC5034	RUBBER CAP	
	TEKX046	RATCH	
	TESD048	SPRING	
	TEWA988	SHIELD GASKET 1	
	TEWA989	SHIELD GASKET 2	
	TEWB019	SHIELD GASKET	
28	THEC084N	D-SUB FIX SCREW	
	THEC0939	SCREW (TOP PANEL FIX)	
29	TKGP5264	PBS	
30	TKKC5255	LED PLATE	
31	TKKC5273	REMOTE CONTROL RECEIVER	
	TKKL5381-1	CONTROL BUTTON DOOR	
	TKKX5106-1	INSTALL PLATE 1 (C-BUTTON)	
	TKKX5107	INSTALL PLATE 2 (C-BUTTON)	
	TKKX5109	LENS COVER STRNGS	
32	TKZF5055	TERMINAL METAL	
33	TKZJ5068	POWER FAN INSTALL METAL	
34	TKZJ5074	VENTILATION FAN METAL	
	TKZX5205	WIRE INSTALL METAL	
	TKZX5213	CEILING BOSS METAL	
	TMKA659	STRAP	
	TMKG772	SPONGE SPACER	
	TMKG785	LENS SPACER	
	TMKY143	OPTICAL DUCT COVER	
35	TMKY160	BALLAST INSULATION SHEET	$\triangle$
	TMKY230	TOP PANEL HOOK	
36	TMKY344	SHADING SHEET (A-PCB)	
37	TMKY345	INSULATION SHEET (K-PCB)	$\triangle$
	TMKY358	WIRE SHEET	
38	TMKY370	POWER INSULATION SHEET	$\triangle$
	TMME244	TIERAP	
39	TMME279	SPACER	$\triangle$
40	TMXE049	BOARD INSTALL METAL	$\triangle$
61	TPCC32402	CARTON	AE2000U
	TPCC32403	CARTON	AE2000E
62	TPDA1480	CUSHION 1	
63	TPDA1481	CUSHION 2	
64	TPDF1755	ACCESSORY CARTON	

Ref. No.	Part No.	Part Name & Description	Remarks
65	TPEH110-1	SET COVER	
66	TQBJ0233	INSTRUCTION BOOK	△ AE2000U
	TQBJ0234	INSTRUCTION BOOK	△ AE2000E
67	TQBJ0242	REMOCON OPERATING GUIDE	AE2000U
	TQBJ0243	REMOCON OPERATING GUIDE	AE2000E
	TQBJ7002-2	SUPPORT CENTER SHEET	AE2000U
	TQD1712010	SHEET	
	TQDH19022-1	CAUTION SHEET	
	TQDJ18026-4	GUARANTEE CARD (USA)	AE2000U
	TQDJ18029	GUARANTEE CARD (CANADA)	AE2000U
	TQFD907	HG LABEL	AE2000U
41	TPA0484	TERMINAL COVER ASSY	
	TTRA0141	WIRE ASSY	△
42	TUCB5061	POWER-BOX SHIELD METAL	
43	TUCB5062	FAN SHIELD METAL	
	TUCB5075	ALUMINUM SHEET 2	
44	TUCB5076-1	LAMP SHIELD METAL	
	TUCB5084	ALUMINUM SHEET 8	
45	TUCX5224-1	BASE METAL	
46	TUCX5225	INSTALL METAL (A-PCB)	
47	TUCX5227	METAL (RV-PCB)	
48	TUWC059-1	INSTALL METAL (K-PCB)	
49	TUXX406	BALLAST INSTALL METAL	
50	TXFEE02VKF5	LAMP INHALATION DUCT ASSY	
51	TXFKF01QMCZ	BOTTOM COVER	△ AE2000U
	TXFKF01QMDZ	BOTTOM COVER	△ AE2000E
52	TXFKF02QMCZ	UPPER COVER	△
53	TXFKK01VKF5	LENS COVER ASSY	
54	TXFKN01VKF5	FILTER ASSY	
55	TXFKP01QMCZ	TOP PANEL ASSY	△ AE2000U
	TXFKP01QMDZ	TOP PANEL ASSY	△ AE2000E
	TXJ/B1VKD3	LEAD WIRE (B1-P2)	△
	TXJ/E1VKD4	EARTH LEAD WIRE	△
	TXJ/E3VKD3	EARTH LEAD WIRE	△
	TXJ/E4VKD3	EARTH LEAD WIRE	△
	TXJ/H1VKD4	LEAD WIRE (H1-A23)	△
	TXJ/K1VKD4-4	LEAD WIRE (K1-PK)	△
	TXJ/M1VKD4	LEAD WIRE (M1-A7) (M2-A11)	△
	TXJ/P1VKD3	LEAD WIRE (PK-P1)	△
	TXJ/P3VKD4	LEAD WIRE (P3-A6)	△
	TXJ/Q3VKF5	LEAD WIRE (Q3-A4)	△
	TXJ/R1VKD4	LEAD WIRE (R1-A9)	△
	TXJ/S1VKD4	LEAD WIRE (S PWB-A8)	△
56	TXFEC99VKF5A	OPTICAL BLOCK A	△
	TXFEC99VKF5B	OPTICAL BLOCK B	△
57	TXFEC98VKF5A	ANALYSIS BLOCK A	△
	TXFEC98VKF5B	ANALYSIS BLOCK B	△
58	TXZEC03VKF5	CINEMA FILTER ASSY	△
59	TXZEN01VKF5	IRIS UNIT ASSY	△
	TXZEN02VKF5	MOTOR ASSY	△
	XQN17+CU4FJK	SCREW	OPTICAL BLOCK
	XQN2+CU6FJ	SCREW	OPTICAL BLOCK
	XSN3+8FJK	SCREW	
	XSS2+6FJK	SCREW	OPTICAL BLOCK
60	XTB3+12GFJK	SCREW	
	XTBT969FJK	SCREW	
	XTN3+6GFJ	SCREW	
	XTW3+8PFJ	SCREW	
	XYC3+FG10FJK	SCREW	
	XYN2+F6FJ	SCREW	
	XYN2+J4FJ	SCREW	
	XYN3+F14FJ	SCREW	POWER FAN
	XYN3+F8FJ	SCREW	
	XYN3+J10FJ	SCREW	ANALYSIS BLOCK
	XYN3+J12FJ	SCREW	
	XYN3+J8FJ	SCREW	
	XYN4+E8FJ	SCREW	
	XYN4+F32FJ	SCREW	
	XYN4+J12FJ	SCREW	

Ref. No.	Part No.	Part Name & Description	Remarks
	XZB15X32C05	POLY BAG	
	XZBT6506	POLY BAG	
[INTEGRATED CIRCUIT]			
IC1001	C1AB00002841	I.C	
IC1002	C1AB00002842	I.C	
IC1003	C0CBCBD00008	I.C	
IC1004	C1AB00002843	I.C	
IC1005	C1AB00002821	I.C	
IC1006	C3ABQJ000048	I.C	
IC1007	C0ZBZ0001361	I.C	
IC1008	C3ABQJ000048	I.C	
IC1009	C0CBCAC00192	I.C	
IC1010	TVRP614	I.C	
IC1011	C0CBCAC00192	I.C	
IC1012	C3BBFC000321	I.C	
IC1013	C3ABPJ000071	I.C	
IC1014	C3ABPJ000071	I.C	
IC1015	C0JBAZ002115	I.C	
IC1026	C0DBEKG00004	I.C	
IC1027	C0DBEYY00042	I.C	
IC1028	C0DBEKG00004	I.C	
IC1029	C0DBEKG00004	I.C	
IC1030	C1AB00002619	I.C	
IC1031	C0CBCAG00016	I.C	
IC1032	C1ZBZ0003420	I.C	
IC1033	C0DBEFH00001	I.C	
IC1034	C0CBCYG00004	I.C	
IC1061	C3EBJC000055	I.C	
IC1063	TVRP615	I.C	
IC1065	C0DBAFB00030	I.C	
IC1066	C0CBCAG00016	I.C	
IC1067	C0CBCAG00018	I.C	
IC1089	C0GBA0000035	I.C	
IC1093	C1AB00002808	I.C	
IC1094	C1AB00002808	I.C	
IC1095	C1AB00002808	I.C	
IC1096	C0ABCA000085	I.C	
IC1097	C3EBDC000067	I.C	
IC1098	C3EBDC000067	I.C	
IC1099	C3EBDC000067	I.C	
IC1100	C0CBCDD00004	I.C	
IC1101	C0ABCA000085	I.C	
IC1102	C0JBAZ002885	I.C	
IC1104	C0ABCA000085	I.C	
IC1107	C0GBG0000053	I.C	
IC1111	C0DBGFF00004	I.C	
IC1116	C0EBE0000336	I.C	
IC1123	C0DBGFF00004	I.C	
IC1124	C0CBCAD00015	I.C	
IC1137	C0JBAA000359	I.C	
IC1138	C0JBAA000359	I.C	
IC1141	C0ABCA000085	I.C	
IC1142	C1BB00000888	I.C	
IC1143	TVRP616	I.C	
IC9602	C0ZBZ0001462	I.C (B-PCB)	
IC9603	C0ZBZ0001462	I.C (B-PCB)	
[TRANSISTORS]			
Q1008	B1ABDF000018	TRANSISTOR	
Q1009	B1CHQD000004	TRANSISTOR	
Q1011	B1ABDF000018	TRANSISTOR	
Q1014	B1GBCFJJ0007	TRANSISTOR	
Q1015	B1GBCFJJ0007	TRANSISTOR	
Q1017	B1GBCFJJ0007	TRANSISTOR	
Q1020	B1GBCFJJ0007	TRANSISTOR	
Q1024	B1ABDF000018	TRANSISTOR	
Q1025	B1ADCE000013	TRANSISTOR	
Q1026	B1ABDF000018	TRANSISTOR	
Q1027	B1GBCFJJ0007	TRANSISTOR	
Q1028	B1GBCFJJ0007	TRANSISTOR	

Ref. No.	Part No.	Part Name & Description	Remarks
Q1032	B1ADCE000013	TRANSISTOR	
Q2031	B1GBCFJJ0007	TRANSISTOR	
Q2032	B1GBCFJJ0007	TRANSISTOR	
Q2033	B1GDCFJJ0008	TRANSISTOR	
Q2034	B1GDCFJJ0008	TRANSISTOR	
Q9603	B1CERQ000038	TRANSISTOR (B-PCB)	
Q9604	2SB0710AWL	TRANSISTOR (B-PCB)	
Q9605	2SB0710AWL	TRANSISTOR (B-PCB)	
Q9606	B1DEGM000030	TRANSISTOR (B-PCB)	
Q9607	B1DEGM000030	TRANSISTOR (B-PCB)	
Q9608	2SB0710AWL	TRANSISTOR (B-PCB)	
Q9609	2SB0710AWL	TRANSISTOR (B-PCB)	
Q9610	B1DEGM000030	TRANSISTOR (B-PCB)	
Q9611	B1DEGM000030	TRANSISTOR (B-PCB)	
Q9614	B1CERQ000038	TRANSISTOR (B-PCB)	
		[DIODES]	
D1008	EZJZ0V171AA	VARISTOR	
D1009	B0JCPD000026	DIODE	
D1031	EZJZ0V80008B	VARISTOR	
D1032	EZJZ0V80008B	VARISTOR	
D1033	EZJZ0V80008B	VARISTOR	
D1034	EZJZ0V80008B	VARISTOR	
D1035	MA152WK	DIODE	
D1036	MA152WK	DIODE	
D1037	MA3X15300L	DIODE	
D1038	MA704A	DIODE	
D1039	B0JCPD000026	DIODE	
D1040	B0JCPD000026	DIODE	
D1055	EZJZ0V80008B	VARISTOR	
D1056	EZJZ0V80008B	VARISTOR	
D2031	B3AAB0000038	DIODE	
D2032	B3AAB0000038	DIODE	
D2033	B3AGB0000044	DIODE	
D9101	D4EAY4710001	DIODE	△
D9601	B0HASR000006	DIODE	
D9602	B0JCME000076	DIODE	
D9604	B0ACEM000012	DIODE (B-PCB)	
D9605	B0JCME000076	DIODE (B-PCB)	
D9606	B0ACEM000012	DIODE (B-PCB)	
D9607	B0JCME000076	DIODE (B-PCB)	
D9608	B0ACEM000012	DIODE (B-PCB)	
D9609	B0JCME000076	DIODE (B-PCB)	
D9611	B0ACEM000012	DIODE (B-PCB)	
D9612	B0JCME000076	DIODE (B-PCB)	
D9616	B0ECKP000047	DIODE (B-PCB)	
D9617	B0JCME000076	DIODE (B-PCB)	
D9618	B0JCME000076	DIODE (B-PCB)	
D9619	B0JCME000076	DIODE (B-PCB)	
D9620	B0JCME000076	DIODE (B-PCB)	
D9621	B0JCME000076	DIODE (B-PCB)	
D9622	B0ECKP000047	DIODE (B-PCB)	
D9623	B0ECKP000047	DIODE (B-PCB)	
D9624	B0JCME000076	DIODE (B-PCB)	
D9625	B0JCME000076	DIODE (B-PCB)	
D9626	B0JCME000076	DIODE (B-PCB)	
D9627	B0JCME000076	DIODE (B-PCB)	
D9628	B0JCME000076	DIODE (B-PCB)	
D9629	B0ECKP000047	DIODE (B-PCB)	
		[COILS]	
L1001	J0JJC0000022	EMI FILTER	
L1003	J0JCC0000168	FILTER	
L1004	J0JCC0000168	FILTER	
L1005	J0JCC0000168	FILTER	
L1006	J0JCC0000168	FILTER	
L1007	J0JCC0000168	FILTER	
L1008	J0JCC0000168	FILTER	
L1009	J0JJC0000022	EMI FILTER	
L1010	J0JCC0000168	FILTER	
L1013	J0JCC0000168	FILTER	

Ref. No.	Part No.	Part Name & Description	Remarks
L1014	J0JCC0000168	FILTER	
L1015	J0JCC0000168	FILTER	
L1016	J0JCC0000168	FILTER	
L1017	J0JCC0000168	FILTER	
L1018	J0JCC0000168	FILTER	
L1019	J0JCC0000168	FILTER	
L1020	J0JCC0000168	FILTER	
L1021	J0JCC0000168	FILTER	
L1022	J0JCC0000168	FILTER	
L1023	J0JHC0000078	EMI FILTER	
L1024	J0JHC0000078	EMI FILTER	
L1025	J0JHC0000078	EMI FILTER	
L1026	J0JHC0000078	EMI FILTER	
L1027	J0JCC0000168	FILTER	
L1028	J0JHC0000078	EMI FILTER	
L1029	J0JHC0000078	EMI FILTER	
L1030	J0JHC0000078	EMI FILTER	
L1031	J0JHC0000078	EMI FILTER	
L1032	J0JCC0000168	FILTER	
L1033	J0JJC0000022	EMI FILTER	
L1034	ELJFA470JFB	COIL	
L1035	J0JJC0000022	EMI FILTER	
L1036	J0JJC0000022	EMI FILTER	
L1037	J0JCC0000168	FILTER	
L1038	J0JJC0000022	EMI FILTER	
L1039	J0JJC0000022	EMI FILTER	
L1040	J0JJC0000022	EMI FILTER	
L1041	G1C4R7MA0106	COIL	
L1043	J0JCC0000168	FILTER	
L1044	J0JJC0000022	EMI FILTER	
L1045	J0JJC0000022	EMI FILTER	
L1046	J0JJC0000022	EMI FILTER	
L1047	J0JJC0000022	EMI FILTER	
L1048	J0JCC0000168	FILTER	
L1049	J0JCC0000168	FILTER	
L1055	J0JCC0000168	FILTER	
L1056	J0JCC0000168	FILTER	
L1057	J0JCC0000168	FILTER	
L1060	J0JJC0000022	EMI FILTER	
L1061	J0JCC0000168	FILTER	
L1062	J0JJC0000022	EMI FILTER	
L1063	J0JJC0000022	EMI FILTER	
L1065	J0JJC0000022	EMI FILTER	
L1066	J0JJC0000022	EMI FILTER	
L1067	J0JJC0000022	EMI FILTER	
L1068	ELJFA470JFB	COIL	
L1069	J0JCC0000168	FILTER	
L1070	J0JHC0000078	EMI FILTER	
L1071	J0JHC0000078	EMI FILTER	
L1072	J0JHC0000078	EMI FILTER	
L1073	J0JHC0000078	EMI FILTER	
L1074	J0JCC0000168	FILTER	
L1075	ERJ3GEYJ220	M 22 OHM, J, 1/16W	
L1076	J0JCC0000168	FILTER	
L1077	J0JJC0000022	EMI FILTER	
L1078	J0JJC0000022	EMI FILTER	
L1079	J0JJC0000022	EMI FILTER	
L1080	J0JJC0000022	EMI FILTER	
L1081	J0JJC0000022	EMI FILTER	
L1082	J0JJC0000022	EMI FILTER	
L1083	J0JJC0000022	EMI FILTER	
L1084	J0JJC0000022	EMI FILTER	
L1085	J0JJC0000022	EMI FILTER	
L1086	J0JCC0000168	FILTER	
L1087	J0JCC0000168	FILTER	
L1089	G1C330MA0218	COIL	
L1090	G1C330MA0218	COIL	
L1091	J0JJC0000022	EMI FILTER	
L1092	J0JJC0000022	EMI FILTER	
L1093	J0JCC0000168	FILTER	
L1094	J0JJC0000022	EMI FILTER	
L1096	J0JJC0000022	EMI FILTER	
L1097	J0JJC0000022	EMI FILTER	

Ref. No.	Part No.	Part Name & Description	Remarks
L1098	J0JGC0000059	FILTER	
L1099	J0JGC0000059	FILTER	
L1100	J0JGC0000059	FILTER	
L1101	J0JCC0000168	FILTER	
L1102	J0JCC0000168	FILTER	
L1103	J0JCC0000168	FILTER	
L1104	J0JCC0000168	FILTER	
FL1001	J0HAYY000046	EMI FILTER	
[RESISTORS]			
R1000	ERJ3GEYJ104	M 100KOHM, J, 1/16W	
R1002	ERJ2GEJ220	M 22 OHM, 0.063W	
R1003	ERJ6ENF75R0	M 75 OHM, 1/10W	
R1004	ERJ6ENF75R0	M 75 OHM, 1/10W	
R1005	ERJ6ENF75R0	M 75 OHM, 1/10W	
R1006	ERJ6ENF75R0	M 75 OHM, 1/10W	
R1007	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	
R1008	ERJ6ENF75R0	M 75 OHM, 1/10W	
R1009	ERJ6ENF75R0	M 75 OHM, 1/10W	
R1010	ERJ6ENF36R0	RESISTOR	
R1011	ERJ6ENF36R0	RESISTOR	
R1012	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	
R1013	ERJ6ENF36R0	RESISTOR	
R1014	ERJ2GEJ220	M 22 OHM, 0.063W	
R1015	ERJ2GEJ220	M 22 OHM, 0.063W	
R1016	ERJ2GEJ220	M 22 OHM, 0.063W	
R1017	ERJ3GEYJ101	M 100 OHM, J, 1/16W	
R1018	ERJ3GEYJ101	M 100 OHM, J, 1/16W	
R1019	ERJ2GEJ220	M 22 OHM, 0.063W	
R1020	ERJ2GEJ220	M 22 OHM, 0.063W	
R1021	ERJ2GEJ220	M 22 OHM, 0.063W	
R1022	ERJ2GEJ220	M 22 OHM, 0.063W	
R1023	ERJ2GEJ220	M 22 OHM, 0.063W	
R1024	ERJ2GEJ220	M 22 OHM, 0.063W	
R1025	ERJ6ENF39R0	M 39 OHM, 1/10W	
R1026	ERJ3GEYJ392	M 3.9KOHM, J, 1/16W	
R1027	ERJ2GEJ220	M 22 OHM, 0.063W	
R1028	ERJ2GEJ220	M 22 OHM, 0.063W	
R1029	ERJ3EKF1691	M 1.69KOHM, 1/16W	
R1030	ERJ3GEYJ332	M 3.3KOHM, J, 1/16W	
R1031	ERJ2GE0R00	M 0 OHM, 0.063W	
R1032	ERJ3GEYJ680	M 68 OHM, J, 1/16W	
R1034	ERJ3GEYJ680	M 68 OHM, J, 1/16W	
R1035	ERJ3GEYJ680	M 68 OHM, J, 1/16W	
R1036	ERJ6ENF39R0	M 39 OHM, 1/10W	
R1037	ERJ2GEJ103	M 10K OHM, 0.063W	
R1038	ERJ6ENF39R0	M 39 OHM, 1/10W	
R1039	ERJ2GEJ100	M 10 OHM, 0.063W	
R1040	ERJ2GEJ103	M 10K OHM, 0.063W	
R1041	ERJ2GEJ473	M 47K OHM, 0.063W	
R1042	ERJ2GEJ100	M 10 OHM, 0.063W	
R1043	ERJ2GEJ100	M 10 OHM, 0.063W	
R1044	ERJ6ENF39R0	M 39 OHM, 1/10W	
R1045	ERJ3EKF4990	RESISTOR	
R1046	ERJ6ENF39R0	M 39 OHM, 1/10W	
R1047	ERJ6ENF39R0	M 39 OHM, 1/10W	
R1048	ERJ2GE0R00	M 0 OHM, 0.063W	
R1049	ERJ3GEY0R00	M 0 OHM, 1/16W	
R1050	ERJ3GEY0R00	M 0 OHM, 1/16W	
R1051	ERJ3GEY0R00	M 0 OHM, 1/16W	
R1052	ERJ3GEY0R00	M 0 OHM, 1/16W	
R1053	ERJ3GEY0R00	M 0 OHM, 1/16W	
R1054	ERJ3GEY0R00	M 0 OHM, 1/16W	
R1055	ERJ3GEYJ101	M 100 OHM, J, 1/16W	
R1056	ERJ6ENF36R0	RESISTOR	
R1057	ERJ6ENF36R0	RESISTOR	
R1058	ERJ6ENF36R0	RESISTOR	
R1059	ERJ3GEYJ101	M 100 OHM, J, 1/16W	
R1060	EXB28V220J	RESISTOR ARRAY	
R1061	EXB28V470J	RESISTOR ARRAY	
R1062	ERJ3GEYJ470	M 47 OHM, J, 1/16W	
R1063	ERJ2GEJ472	M 4.7KOHM, 0.063W	

Ref. No.	Part No.	Part Name & Description	Remarks
R1064	EXB28V470J	RESISTOR ARRAY	
R1065	ERJ3GEYJ103	M 10K OHM, J, 1/16W	
R1066	ERJ2GEJ472	M 4.7KOHM, 0.063W	
R1067	ERJ2GEJ220	M 22 OHM, 0.063W	
R1068	ERJ2GEJ220	M 22 OHM, 0.063W	
R1069	ERJ3GEYJ123	M 12K OHM, J, 1/16W	
R1070	EXB28V220J	RESISTOR ARRAY	
R1071	ERJ2GE0R00	M 0 OHM, 0.063W	ERJ2GE0R00X
R1072	EXB28V470J	RESISTOR ARRAY	EXB28V470JX
R1074	EXB28V470J	RESISTOR ARRAY	EXB28V470JX
R1075	ERJ3GEYJ103	M 10K OHM, J, 1/16W	
R1076	ERJ2GEJ220	M 22 OHM, 0.063W	
R1078	ERJ2GEJ562	M 5.6KOHM, 0.063W	
R1079	EXB28V220J	RESISTOR ARRAY	
R1080	ERJ2GEJ220	M 22 OHM, 0.063W	
R1081	ERJ2GE0R00	M 0 OHM, 0.063W	
R1082	ERJ2GEJ103	M 10K OHM, 0.063W	
R1083	ERJ3GEYJ560	M 56 OHM, J, 1/16W	
R1084	ERJ2GEJ220	M 22 OHM, 0.063W	
R1085	ERJ3GEYJ273	M 27KOHM, J, 1/16W	
R1086	EXB28V470J	RESISTOR ARRAY	
R1087	EXB28V470J	RESISTOR ARRAY	
R1088	ERJ2GEJ562	M 5.6KOHM, 0.063W	
R1089	EXB28V220J	RESISTOR ARRAY	
R1093	ERJ2GE0R00	M 0 OHM, 0.063W	
R1094	ERJ2GEJ223	RESISTOR	
R1095	ERJ2GEJ223	RESISTOR	
R1096	ERJ2GE0R00	M 0 OHM, 0.063W	
R1097	ERJ2GE0R00	M 0 OHM, 0.063W	
R1098	ERJ2GE0R00	M 0 OHM, 0.063W	
R1100	ERJ2GE0R00	M 0 OHM, 0.063W	
R1101	ERJ2GE0R00	M 0 OHM, 0.063W	
R1102	ERJ3EKF51R0	RESISTOR	
R1103	ERJ3EKF51R0	RESISTOR	
R1104	ERJ3EKF51R0	RESISTOR	
R1105	ERJ3GEYJ123	M 12K OHM, J, 1/16W	
R1106	ERJ2GEJ3R0	RESISTOR	
R1107	ERJ2GEJ3R0	RESISTOR	
R1108	ERJ2GEJ3R0	RESISTOR	
R1109	ERJ2GEJ3R0	RESISTOR	
R1110	ERJ2GEJ3R0	RESISTOR	
R1111	ERJ2GEJ3R0	RESISTOR	
R1114	ERJ2GEJ3R0	RESISTOR	
R1115	ERJ2GEJ3R0	RESISTOR	
R1116	ERJ2GE0R00	M 0 OHM, 0.063W	
R1118	ERJ2GE0R00	M 0 OHM, 0.063W	
R1119	ERJ2GE0R00	M 0 OHM, 0.063W	
R1120	ERJ3GEYJ123	M 12K OHM, J, 1/16W	
R1121	ERJ2GEJ220	M 22 OHM, 0.063W	
R1122	ERJ2GE0R00	M 0 OHM, 0.063W	
R1124	ERJ2GE0R00	M 0 OHM, 0.063W	
R1125	ERJ2GE0R00	M 0 OHM, 0.063W	
R1126	ERJ2GE0R00	M 0 OHM, 0.063W	
R1127	ERJ2GEJ3R0	RESISTOR	
R1129	ERJ2GEJ3R0	RESISTOR	
R1130	ERJ2GEJ3R0	RESISTOR	
R1131	EXB28V470J	RESISTOR ARRAY	
R1132	ERJ3EKF51R0	RESISTOR	
R1133	ERJ3EKF51R0	RESISTOR	
R1134	ERJ3EKF51R0	RESISTOR	
R1135	EXB28V470J	RESISTOR ARRAY	
R1136	ERJ3GEYJ820	METAL OXIDE RESISTOR	
R1137	ERJ2GEJ220	M 22 OHM, 0.063W	
R1138	ERJ2GEJ220	M 22 OHM, 0.063W	
R1139	EXB28V470J	RESISTOR ARRAY	
R1140	ERJ3GEYJ820	METAL OXIDE RESISTOR	
R1141	ERJ2GE0R00	M 0 OHM, 0.063W	
R1142	ERJ3EKF51R0	RESISTOR	
R1143	ERJ3EKF51R0	RESISTOR	
R1144	ERJ3EKF51R0	RESISTOR	
R1146	ERJ3GEYJ820	METAL OXIDE RESISTOR	
R1147	ERJ2GEJ103	M 10K OHM, 0.063W	
R1148	ERJ2GEJ220	M 22 OHM, 0.063W	

Ref. No.	Part No.	Part Name & Description	Remarks
R1149	ERJ2GEJ220	M 22 OHM, 0.063W	
R1150	ERJ2GEJ220	M 22 OHM, 0.063W	
R1151	ERJ2GEJ221	M 220 OHM, 0.063W	
R1152	EXB28V470J	RESISTOR ARRAY	
R1153	ERJ3GEYJ560	M 56 OHM, J, 1/16W	
R1154	EXB28V470J	RESISTOR ARRAY	
R1155	EXB28V220J	RESISTOR ARRAY	
R1156	EXB28V220J	RESISTOR ARRAY	
R1157	EXB28V220J	RESISTOR ARRAY	
R1158	EXB28V220J	RESISTOR ARRAY	
R1159	EXB28V220J	RESISTOR ARRAY	
R1160	ERJ2GEJ3R0	RESISTOR	
R1161	EXB28V220J	RESISTOR ARRAY	
R1162	ERJ3GEYJ103	M 10K OHM, J, 1/16W	
R1163	ERJ3EKF51R0	RESISTOR	
R1164	EXB28V470J	RESISTOR ARRAY	
R1165	EXB28V470J	RESISTOR ARRAY	
R1166	EXB28V470J	RESISTOR ARRAY	
R1167	ERJ3EKF51R0	RESISTOR	
R1168	ERJ2GEJ103	M 10K OHM, 0.063W	
R1169	ERJ3GEYJ104	M 100KOHM, J, 1/16W	
R1170	ERJ3EKF51R0	RESISTOR	
R1171	ERJ2GEJ103	M 10K OHM, 0.063W	
R1172	EXB28V102J	RESISTOR ARRAY	
R1173	ERJ3GEYJ560	M 56 OHM, J, 1/16W	
R1174	EXB28V470J	RESISTOR ARRAY	
R1175	ERJ3GEYJ560	M 56 OHM, J, 1/16W	
R1176	ERJ2GEJ562	M 5.6KOHM, 0.063W	
R1177	ERJ2GEJ562	M 5.6KOHM, 0.063W	
R1178	ERJ3GEYJ103	M 10K OHM, J, 1/16W	
R1179	ERJ3GEYJ104	M 100KOHM, J, 1/16W	
R1180	ERJ3GEYJ273	M 27KOHM, J, 1/16W	
R1181	ERJ3GEY0R00	M 0 OHM, 1/16W	
R1182	EXB28V470J	RESISTOR ARRAY	
R1183	ERJ3GEYJ273	M 27KOHM, J, 1/16W	
R1184	ERJ2GEJ220	M 22 OHM, 0.063W	
R1185	ERJ3EKF51R0	RESISTOR	
R1186	ERJ2GEJ103	M 10K OHM, 0.063W	
R1187	EXB28V470J	RESISTOR ARRAY	
R1188	ERJ2GEJ103	M 10K OHM, 0.063W	
R1189	EXB28V470J	RESISTOR ARRAY	
R1190	EXB28V470J	RESISTOR ARRAY	
R1191	EXB28V470J	RESISTOR ARRAY	
R1192	EXB28V470J	RESISTOR ARRAY	
R1193	EXB28V470J	RESISTOR ARRAY	
R1194	EXB28V470J	RESISTOR ARRAY	
R1195	EXB28V470J	RESISTOR ARRAY	
R1196	ERJ2GEJ103	M 10K OHM, 0.063W	
R1197	EXB28V470J	RESISTOR ARRAY	
R1199	EXB28V470J	RESISTOR ARRAY	
R1200	ERJ3EKF51R0	RESISTOR	
R1201	ERJ3EKF1602	RESISTOR	
R1202	EXB28V470J	RESISTOR ARRAY	
R1203	EXB28V470J	RESISTOR ARRAY	
R1204	EXB28V470J	RESISTOR ARRAY	
R1205	EXB28V470J	RESISTOR ARRAY	
R1207	EXB28V470J	RESISTOR ARRAY	
R1208	ERJ2GEJ223	RESISTOR	
R1209	ERJ2GEJ3R0	RESISTOR	
R1211	ERJ3EKF51R0	RESISTOR	
R1212	EXB28V470J	RESISTOR ARRAY	
R1213	EXB28V470J	RESISTOR ARRAY	
R1214	EXB28V470J	RESISTOR ARRAY	
R1216	EXB28V470J	RESISTOR ARRAY	
R1217	EXB28V470J	RESISTOR ARRAY	
R1218	ERJ3EKF51R0	RESISTOR	
R1219	ERJ2GEJ220	M 22 OHM, 0.063W	
R1220	ERJ2GEJ220	M 22 OHM, 0.063W	
R1221	ERJ2GEJ220	M 22 OHM, 0.063W	
R1222	ERJ2GEJ220	M 22 OHM, 0.063W	
R1223	ERJ2GEJ220	M 22 OHM, 0.063W	
R1224	ERJ2GEJ220	M 22 OHM, 0.063W	
R1225	ERJ2GEJ220	M 22 OHM, 0.063W	

Ref. No.	Part No.	Part Name & Description	Remarks
R1226	ERJ2GEJ220	M 22 OHM, 0.063W	
R1227	ERJ2GEJ220	M 22 OHM, 0.063W	
R1228	ERJ2GEJ220	M 22 OHM, 0.063W	
R1229	ERJ2GEJ470	RESISTOR	
R1230	ERJ2GEJ470	RESISTOR	
R1231	ERJ2GEJ470	RESISTOR	
R1232	ERJ2GEJ470	RESISTOR	
R1233	ERJ2GEJ470	RESISTOR	
R1234	ERJ2GEJ470	RESISTOR	
R1235	ERJ2GEJ470	RESISTOR	
R1236	ERJ2GEJ470	RESISTOR	
R1237	ERJ2GEJ470	RESISTOR	
R1238	ERJ3GEY0R00	M 0 OHM, 1/16W	
R1240	ERJ3GEY0R00	M 0 OHM, 1/16W	
R1241	ERJ2GEJ220	M 22 OHM, 0.063W	
R1242	ERJ2GEJ103	M 10K OHM, 0.063W	
R1244	ERJ3GEY0R00	M 0 OHM, 1/16W	
R1246	ERJ2GEJ3R0	RESISTOR	
R1247	ERJ3GEYJ331	M 330 OHM, J, 1/16W	
R1249	ERJ2GE0R00	M 0 OHM, 0.063W	
R1250	ERJ2GEJ101	M 100 OHM, 0.063W	
R1252	ERJ2GEJ562	M 5.6KOHM, 0.063W	
R1253	EXB28V470J	RESISTOR ARRAY	
R1254	EXB28V470J	RESISTOR ARRAY	
R1255	EXB28V470J	RESISTOR ARRAY	
R1256	EXB28V104J	RESISTOR ARRAY	
R1257	EXB28V104J	RESISTOR ARRAY	
R1259	ERJ3EKF1002	M 10KOHM, 1/16W	
R1260	ERJ3EKF6801	M 6.8KOHM, 1/16W	
R1261	ERJ3EKF1002	M 10KOHM, 1/16W	
R1262	ERJ3EKF3901	M 3.9KOHM, 0.063W	
R1264	ERJ2GEJ331	M 330 OHM, 0.063W	
R1265	ERJ3EKF1002	M 10KOHM, 1/16W	
R1266	ERJ2GEJ220	M 22 OHM, 0.063W	
R1267	ERJ3EKF1602	RESISTOR	
R1268	ERJ2GEJ103	M 10K OHM, 0.063W	
R1269	ERJ3EKF2201	RESISTOR	
R1270	ERJ2GEJ102	M 1K OHM, 0.063W	
R1271	ERJ3EKF1072	RESISTOR	
R1272	ERJ2GEJ220	M 22 OHM, 0.063W	
R1273	EXB28V472J	RESISTOR ARRAY	
R1274	ERJ2GEJ102	M 1K OHM, 0.063W	
R1275	ERJ3GEYJ102	M 1K OHM, J, 1/16W	
R1276	ERJ2GEJ560	M 56 OHM, 0.063W	
R1278	ERJ3GEYJ473	M 47K OHM, J, 1/16W	
R1279	EXB28V102J	RESISTOR ARRAY	
R1281	ERJ3GEYJ104	M 100KOHM, J, 1/16W	
R1282	ERJ3GEYJ104	M 100KOHM, J, 1/16W	
R1283	ERJ2GEJ220	M 22 OHM, 0.063W	
R1284	ERJ2GE0R00	M 0 OHM, 0.063W	
R1285	EXB28V220J	RESISTOR ARRAY	
R1286	EXB28V220J	RESISTOR ARRAY	
R1287	ERJ2GEJ3R0	RESISTOR	
R1288	ERJ2GEJ3R0	RESISTOR	
R1289	ERJ2GEJ103	M 10K OHM, 0.063W	
R1290	ERJ2GE0R00	M 0 OHM, 0.063W	
R1291	ERJ2GEJ3R0	RESISTOR	
R1292	ERJ2GEJ3R0	RESISTOR	
R1293	ERJ2GEJ3R0	RESISTOR	
R1294	ERJ2GEJ3R0	RESISTOR	
R1295	ERJ3GEYJ104	M 100KOHM, J, 1/16W	
R1296	ERJ3GEYJ101	M 100 OHM, J, 1/16W	
R1297	ERJ3GEYJ103	M 10K OHM, J, 1/16W	
R1298	ERJ3GEYJ105	M 1M OHM, J, 1/16W	
R1299	ERJ2GEJ560	M 56 OHM, 0.063W	
R1301	EXB28V220J	RESISTOR ARRAY	
R1303	ERJ3GEYJ102	M 1K OHM, J, 1/16W	
R1304	ERJ3GEYJ101	M 100 OHM, J, 1/16W	
R1307	ERJ2GEJ3R0	RESISTOR	
R1308	ERJ2GEJ3R0	RESISTOR	
R1309	ERJ2GEJ3R0	RESISTOR	
R1310	ERJ2GEJ3R0	RESISTOR	
R1311	ERJ3GEYJ220	M 22 OHM, J, 1/16W	

Ref. No.	Part No.	Part Name & Description	Remarks
R1312	ERJ3GEYJ101	M 100 OHM, J, 1/16W	
R1313	ERJ3GEYJ101	M 100 OHM, J, 1/16W	
R1314	EXB28V560J	RESISTOR ARRAY	
R1315	ERJ3EKF1002	M 10KOHM, 1/16W	
R1316	ERJ3EKF1002	M 10KOHM, 1/16W	
R1317	ERJ3EKF1001	M 1K OHM, 0.063W	
R1319	ERJ3EKF1001	M 1K OHM, 0.063W	
R1320	ERJ3GEY0R00	M 0 OHM, 1/16W	
R1321	ERJ3GEY0R00	M 0 OHM, 1/16W	
R1322	ERJ3EKF1002	M 10KOHM, 1/16W	
R1323	ERJ3GEY0R00	M 0 OHM, 1/16W	
R1324	ERJ3GEY0R00	M 0 OHM, 1/16W	
R1325	ERJ3GEY0R00	M 0 OHM, 1/16W	
R1326	ERJ3GEY0R00	M 0 OHM, 1/16W	
R1327	ERJ3GEY0R00	M 0 OHM, 1/16W	
R1328	ERJ2GEJ103	M 10K OHM, 0.063W	
R1329	EXB28V220J	RESISTOR ARRAY	
R1332	ERJ3EKF1002	M 10KOHM, 1/16W	
R1333	ERJ3EKF1691	M1.69KOHM, 1/16W	
R1334	ERJ3GEYJ102	M 1K OHM, J, 1/16W	
R1335	ERJ3GEYJ123	M 12K OHM, J, 1/16W	
R1336	ERJ3EKF5903	M 590KOHM, 1/16W	
R1337	ERJ3GEYJ222	M 2.2KOHM, J, 1/16W	
R1338	ERJ3GEYJ102	M 1K OHM, J, 1/16W	
R1339	ERJ3GEYJ473	M 47K OHM, J, 1/16W	
R1340	ERJ3GEYJ103	M 10K OHM, J, 1/16W	
R1341	ERJ3GEYJ473	M 47K OHM, J, 1/16W	
R1342	ERJ2GEJ220	M 22 OHM, 0.063W	
R1343	ERJ2GEJ220	M 22 OHM, 0.063W	
R1345	ERJ3GEYJ221	M 220 OHM, J, 1/16W	
R1346	ERJ3GEYJ103	M 10K OHM, J, 1/16W	
R1347	EXB28V102J	RESISTOR ARRAY	
R1348	ERJ3GEYJ473	M 47K OHM, J, 1/16W	
R1349	ERJ3GEYJ473	M 47K OHM, J, 1/16W	
R1350	ERJ3GEYJ682	M 6.8KOHM, J, 1/16W	
R1351	ERJ2GEJ103	M 10K OHM, 0.063W	
R1352	ERJ2GEJ101	M 100 OHM, 0.063W	
R1353	ERJ3GEYJ471	M 470 OHM, J, 1/16W	
R1354	EXB28V560J	RESISTOR ARRAY	
R1355	EXB28V560J	RESISTOR ARRAY	
R1356	EXB28V560J	RESISTOR ARRAY	
R1357	ERJ2GEJ103	M 10K OHM, 0.063W	
R1358	EXB28V560J	RESISTOR ARRAY	
R1359	EXB28V560J	RESISTOR ARRAY	
R1360	ERJ2GEJ562	M 5.6KOHM, 0.063W	
R1362	ERJ6GEYJ100	M 10 OHM, J, 1/10W	
R1368	EXB28V560J	RESISTOR ARRAY	
R1369	EXB28V560J	RESISTOR ARRAY	
R1370	ERJ6GEYJ560	M 56 OHM, J, 1/10W	
R1371	EXB28V560J	RESISTOR ARRAY	
R1374	ERJ3EKF1002	M 10KOHM, 1/16W	
R1375	ERJ2GEJ100	M 10 OHM, 0.063W	
R1376	ERJ2GEJ100	M 10 OHM, 0.063W	
R1377	ERJ2GEJ100	M 10 OHM, 0.063W	
R1378	EXB28V560J	RESISTOR ARRAY	
R1380	ERJ2GEJ101	M 100 OHM, 0.063W	
R1381	ERJ2GEJ101	M 100 OHM, 0.063W	
R1382	ERJ2GEJ101	M 100 OHM, 0.063W	
R1383	ERJ2GEJ472	M 4.7KOHM, 0.063W	
R1384	ERJ2GEJ331	M 330 OHM, 0.063W	
R1385	ERJ3EKF5101	RESISTOR	
R1386	ERJ3GEYJ102	M 1K OHM, J, 1/16W	
R1387	ERJ2GEJ333	M 33K OHM, 0.063W	
R1388	ERJ2GEJ101	M 100 OHM, 0.063W	
R1389	ERJ3GEYJ102	M 1K OHM, J, 1/16W	
R1390	ERJ3EKF5101	RESISTOR	
R1391	ERJ3EKF5621	M5.62KOHM, 1/16W	
R1392	ERJ3EKF5621	M5.62KOHM, 1/16W	
R1393	ERJ3EKF1101	M 1.1KOHM, 1/16W	
R1394	ERJ3EKF1101	M 1.1KOHM, 1/16W	
R1395	ERJ3EKF1101	M 1.1KOHM, 1/16W	
R1396	ERJ3GEYJ124	M 120KOHM, J, 1/16W	
R1397	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	

Ref. No.	Part No.	Part Name & Description	Remarks
R1398	ERJ3EKF3923	M 392KOHM, 1/16W	
R1399	ERJ3EKF3923	M 392KOHM, 1/16W	
R1400	ERJ3EKF1803	M 180KOHM, 0.063W	
R1401	ERJ3GEYJ471	M 470 OHM, J, 1/16W	
R1402	ERJ3GEYJ222	M 2.2KOHM, J, 1/16W	
R1403	ERJ3GEYJ105	M 1M OHM, J, 1/16W	
R1404	ERJ3GEYJ510	M 51 OHM, J, 1/16W	
R1405	ERJ3GEYJ510	M 51 OHM, J, 1/16W	
R1406	ERJ3GEYJ391	M 390 OHM, J, 1/16W	
R1407	ERJ3GEYJ561	M 560 OHM, J, 1/16W	
R1408	ERJ2GEJ103	M 10K OHM, 0.063W	
R1409	ERJ3GEYJ104	M 100KOHM, J, 1/16W	
R1410	ERJ3GEYJ273	M 27KOHM, J, 1/16W	
R1419	ERJ3GEYJ151	M 150 OHM, J, 1/16W	
R1420	ERJ2GEJ562	M 5.6KOHM, 0.063W	
R1421	EXB28V220J	RESISTOR ARRAY	
R1422	EXB28V220J	RESISTOR ARRAY	
R1423	EXB28V220J	RESISTOR ARRAY	
R1424	EXB28V220J	RESISTOR ARRAY	
R1425	EXB28V220J	RESISTOR ARRAY	
R1426	EXB28V220J	RESISTOR ARRAY	
R1427	EXB28V220J	RESISTOR ARRAY	
R1428	EXB28V220J	RESISTOR ARRAY	
R1429	EXB28V220J	RESISTOR ARRAY	
R1430	EXB28V220J	RESISTOR ARRAY	
R1431	EXB28V220J	RESISTOR ARRAY	
R1432	EXB28V220J	RESISTOR ARRAY	
R1433	EXB28V220J	RESISTOR ARRAY	
R1434	ERJ3GEYJ220	M 22 OHM, J, 1/16W	
R1435	ERJ3GEYJ220	M 22 OHM, J, 1/16W	
R1436	ERJ3GEYJ220	M 22 OHM, J, 1/16W	
R1437	ERJ3GEYJ220	M 22 OHM, J, 1/16W	
R1438	ERJ3GEYJ220	M 22 OHM, J, 1/16W	
R1439	ERJ3GEYJ220	M 22 OHM, J, 1/16W	
R1440	ERJ3GEYJ102	M 1K OHM, J, 1/16W	
R1441	ERJ3GEYJ220	M 22 OHM, J, 1/16W	
R1442	EXB28V220J	RESISTOR ARRAY	
R1443	ERJ3GEYJ220	M 22 OHM, J, 1/16W	
R1444	EXB28V220J	RESISTOR ARRAY	
R1445	ERJ3GEYJ220	M 22 OHM, J, 1/16W	
R1446	EXB28V220J	RESISTOR ARRAY	
R1447	ERJ3GEYJ220	M 22 OHM, J, 1/16W	
R1448	EXB28V220J	RESISTOR ARRAY	
R1451	ERJ3GEYJ220	M 22 OHM, J, 1/16W	
R1452	EXB28V220J	RESISTOR ARRAY	
R1453	ERJ3GEYJ220	M 22 OHM, J, 1/16W	
R1454	EXB28V220J	RESISTOR ARRAY	
R1455	ERJ3GEYJ220	M 22 OHM, J, 1/16W	
R1456	EXB28V220J	RESISTOR ARRAY	
R1457	EXB28V220J	RESISTOR ARRAY	
R1458	ERJ3GEYJ220	M 22 OHM, J, 1/16W	
R1459	ERJ3GEYJ220	M 22 OHM, J, 1/16W	
R1460	ERJ3GEYJ220	M 22 OHM, J, 1/16W	
R1461	EXB28VR000	RESISTOR ARRAY	
R1462	EXB28VR000	RESISTOR ARRAY	
R1463	EXB28VR000	RESISTOR ARRAY	
R1464	EXB28VR000	RESISTOR ARRAY	
R1465	EXB28VR000	RESISTOR ARRAY	
R1466	EXB28VR000	RESISTOR ARRAY	
R1467	EXB28VR000	RESISTOR ARRAY	
R1468	EXB28VR000	RESISTOR ARRAY	
R1469	ERJ3GEYJ220	M 22 OHM, J, 1/16W	
R1470	ERJ3GEYJ220	M 22 OHM, J, 1/16W	
R1471	EXB28V220J	RESISTOR ARRAY	
R1472	EXB28V220J	RESISTOR ARRAY	
R1473	EXB28V220J	RESISTOR ARRAY	
R1474	EXB28V220J	RESISTOR ARRAY	
R1475	EXB28V220J	RESISTOR ARRAY	
R1476	EXB28V220J	RESISTOR ARRAY	
R1477	EXB28V220J	RESISTOR ARRAY	
R1478	EXB28V220J	RESISTOR ARRAY	
R1479	EXB28V220J	RESISTOR ARRAY	
R1480	EXB28V220J	RESISTOR ARRAY	

Ref. No.	Part No.	Part Name & Description	Remarks
R1481	EXB38V470JV	RESISTOR ARRAY	
R1482	ERJ3GEYJ220	M 22 OHM, J, 1/16W	
R1483	ERJ3GEYJ470	M 47 OHM, J, 1/16W	
R1484	ERJ3GEYJ220	M 22 OHM, J, 1/16W	
R1485	ERJ3GEYJ470	M 47 OHM, J, 1/16W	
R1486	EXB28VR000	RESISTOR ARRAY	
R1487	ERJ3GEYJ470	M 47 OHM, J, 1/16W	
R1488	ERJ3GEYJ470	M 47 OHM, J, 1/16W	
R1489	EXB38V470JV	RESISTOR ARRAY	
R1490	EXB38V470JV	RESISTOR ARRAY	
R1491	EXB38V470JV	RESISTOR ARRAY	
R1492	EXB38V470JV	RESISTOR ARRAY	
R1493	EXB38V470JV	RESISTOR ARRAY	
R1494	EXB38V470JV	RESISTOR ARRAY	
R1495	EXB38V470JV	RESISTOR ARRAY	
R1496	EXB38V470JV	RESISTOR ARRAY	
R1497	EXB38V470JV	RESISTOR ARRAY	
R1498	EXB38V470JV	RESISTOR ARRAY	
R1499	EXB38V470JV	RESISTOR ARRAY	
R1500	EXB38V470JV	RESISTOR ARRAY	
R1501	EXB38V470JV	RESISTOR ARRAY	
R1502	EXB38V470JV	RESISTOR ARRAY	
R1503	EXB38V470JV	RESISTOR ARRAY	
R1504	EXB38V470JV	RESISTOR ARRAY	
R1505	EXB38V470JV	RESISTOR ARRAY	
R1506	ERJ3GEYJ220	M 22 OHM, J, 1/16W	
R1507	EXB38V470JV	RESISTOR ARRAY	
R1508	EXB38V470JV	RESISTOR ARRAY	
R1509	ERJ3GEYJ470	M 47 OHM, J, 1/16W	
R1510	ERJ3GEYJ470	M 47 OHM, J, 1/16W	
R1511	ERJ3GEYJ470	M 47 OHM, J, 1/16W	
R1512	ERJ3GEYJ470	M 47 OHM, J, 1/16W	
R1513	ERJ3GEYJ470	M 47 OHM, J, 1/16W	
R1514	ERJ3GEYJ470	M 47 OHM, J, 1/16W	
R1515	ERJ3GEYJ470	M 47 OHM, J, 1/16W	
R1517	ERJ3GEYJ470	M 47 OHM, J, 1/16W	
R1518	ERJ3EKF2200	M 220 OHM, 1/16W	
R1519	ERJ3GEYJ470	M 47 OHM, J, 1/16W	
R1520	ERJ3GEYJ470	M 47 OHM, J, 1/16W	
R1521	ERJ3GEYJ470	M 47 OHM, J, 1/16W	
R1522	ERJ3GEYJ470	M 47 OHM, J, 1/16W	
R1523	ERJ3GEYJ470	M 47 OHM, J, 1/16W	
R1524	ERJ3GEYJ470	M 47 OHM, J, 1/16W	
R1525	ERJ3GEYJ470	M 47 OHM, J, 1/16W	
R1526	ERJ3GEYJ470	M 47 OHM, J, 1/16W	
R1527	ERJ3GEYJ470	M 47 OHM, J, 1/16W	
R1528	ERJ3GEYJ470	M 47 OHM, J, 1/16W	
R1529	ERJ3GEYJ470	M 47 OHM, J, 1/16W	
R1530	EXB28VR000	RESISTOR ARRAY	
R1531	EXB28VR000	RESISTOR ARRAY	
R1532	EXB28VR000	RESISTOR ARRAY	
R1533	EXB28VR000	RESISTOR ARRAY	
R1534	EXB28VR000	RESISTOR ARRAY	
R1535	ERJ2GEJ103	M 10K OHM, 0.063W	
R1537	EXB28VR000	RESISTOR ARRAY	
R1538	EXB28VR000	RESISTOR ARRAY	
R1539	EXB28VR000	RESISTOR ARRAY	
R1540	EXB28VR000	RESISTOR ARRAY	
R1542	ERJ3GEYJ470	M 47 OHM, J, 1/16W	
R1543	ERJ3GEYJ470	M 47 OHM, J, 1/16W	
R1544	ERJ2GEJ223	RESISTOR	
R1545	ERJ2GEJ472	M 4.7KOHM, 0.063W	
R1550	ERJ3GEYJ473	M 47K OHM, J, 1/16W	
R1553	ERJ3EKF4992	RESISTOR	
R1554	ERJ3GEYJ272	M 2.7KOHMJ, J1/16W	
R1555	ERJ3EKF1002	M 10KOHM, 1/16W	
R1556	ERJ3GEYJ220	M 22 OHM, J, 1/16W	
R1559	ERJ3GEYJ473	M 47K OHM, J, 1/16W	
R1560	ERJ3GEYJ473	M 47K OHM, J, 1/16W	
R1561	ERJ3GEYJ102	M 1K OHM, J, 1/16W	
R1563	ERJ3GEYJ102	M 1K OHM, J, 1/16W	
R1564	ERJ3GEYJ102	M 1K OHM, J, 1/16W	
R1589	EXB28V560J	RESISTOR ARRAY	

Ref. No.	Part No.	Part Name & Description	Remarks
R1611	ERJ3GEYJ220	M 22 OHM, J, 1/16W	
R1618	ERJ3GEYJ220	M 22 OHM, J, 1/16W	
R1619	ERJ3GEYJ220	M 22 OHM, J, 1/16W	
R1620	ERJ3EKF5600	RESISTOR	
R1621	ERJ3GEYJ220	M 22 OHM, J, 1/16W	
R2001	ERJ3EKF5601V	RESISTOR	
R2002	ERJ3EKF1871V	RESISTOR	
R2003	ERJ3EKF3741	RESISTOR	
R2004	ERJ3EKF1132	RESISTOR	
R2005	ERJ3GEYJ102	M 1K OHM, J, 1/16W	
R2006	ERJ3EKF5601V	RESISTOR	
R2007	ERJ3EKF1871V	RESISTOR	
R2008	ERJ3EKF3741	RESISTOR	
R2009	ERJ3EKF1132	RESISTOR	
R2010	ERJ3EKF5601V	RESISTOR	
R2011	ERJ3EKF1871V	RESISTOR	
R2012	ERJ3EKF3741	RESISTOR	
R2013	ERJ3EKF1132	RESISTOR	
R2029	ERJ3GEYJ102	M 1K OHM, J, 1/16W	
R2030	ERJ3GEYJ470	M 47 OHM, J, 1/16W	
R2031	ERJ3GEYJ101	M 100 OHM, J, 1/16W	
R2032	ERJ3GEYJ101	M 100 OHM, J, 1/16W	
R2033	ERJ3GEYJ101	M 100 OHM, J, 1/16W	
R2034	ERJ3GEYJ101	M 100 OHM, J, 1/16W	
R2035	ERJ3GEYJ331	M 330 OHM, J, 1/16W	
R2036	ERJ3GEYJ331	M 330 OHM, J, 1/16W	
R2037	ERJ3GEYJ151	M 150 OHM, J, 1/16W	
R2038	ERJ3GEYJ182V	M 1.8KOHM, J, 1/16W	
R2201	EXB38V220J	RESISTOR ARRAY	
R9101	D0AE625JA179	RESISTOR	△
R9601	ERX2SJR47E	M 0.47OHM, J, 2W	
R9630	ERJ14YJ3R3U	M 3.3 OHM, J, 1/4W	
R9631	ERJ8GEYJ220	M 68 OHM, J, 1/4W	
R9632	ERJ14YJ5R6U	M 5.6 OHM, J, 1/4W	
R9633	ERJ8GEYJ100	M 10 OHM, J, 1/4W	
R9634	ERJ8GEYJ120	RESISTOR (B-PCB)	
R9636	ERJ14YJ3R3U	M 3.3 OHM, J, 1/4W	
R9637	ERJ8GEYJ220	M 68 OHM, J, 1/4W	
R9638	ERJ14YJ5R6U	M 5.6 OHM, J, 1/4W	
R9639	ERJ8GEYJ100	M 10 OHM, J, 1/4W	
R9640	ERJ8GEYJ120	RESISTOR (B-PCB)	
R9653	D0XGR22J0004	RESISTOR (B-PCB)	
[CAPACITORS]			
C1001	F2G1A101A029	CAPACITOR	
C1002	F1G1C104A077	CAPACITOR	
C1003	F1G1C104A077	CAPACITOR	
C1004	F1G1C104A077	CAPACITOR	
C1005	F1G1C104A077	CAPACITOR	
C1006	ECJ1VF1A225Z	CAPACITOR	
C1007	F1G1H1020008	CAPACITOR	
C1008	F1G1C104A077	CAPACITOR	
C1010	F1G1C1030008	CAPACITOR	
C1011	ECJ1VF1A225Z	CAPACITOR	
C1012	ECJ1VF1A225Z	CAPACITOR	
C1013	F1G1C104A077	CAPACITOR	
C1014	F1G1C104A077	CAPACITOR	
C1015	F1G1C104A077	CAPACITOR	
C1017	F1G1C104A077	CAPACITOR	
C1018	F1G1C104A077	CAPACITOR	
C1019	F1G1C104A077	CAPACITOR	
C1020	F1G1C104A077	CAPACITOR	
C1021	F1G1C104A077	CAPACITOR	
C1022	ECJ2FF1A106Z	C 10UF, 10V	
C1023	F1G1C1030008	CAPACITOR	
C1024	F1G1C1030008	CAPACITOR	
C1025	F1G1C1030008	CAPACITOR	
C1026	F1G1C1030008	CAPACITOR	
C1027	F1G1C104A077	CAPACITOR	
C1028	ECJ2FF1A106Z	C 10UF, 10V	
C1029	F1G1C104A077	CAPACITOR	
C1030	F1G1C104A077	CAPACITOR	

Ref. No.	Part No.	Part Name & Description	Remarks
C1031	FlG1C104A077	CAPACITOR	
C1032	FlG1C1030008	CAPACITOR	
C1034	FlG1C1030008	CAPACITOR	
C1035	FlG1C104A077	CAPACITOR	
C1036	FlG1C104A077	CAPACITOR	
C1037	ECJ2FF1A106Z	C 10UF, 10V	
C1038	ECJ2FF1A106Z	C 10UF, 10V	
C1039	FlG1C1030008	CAPACITOR	
C1045	FlG1C104A077	CAPACITOR	
C1046	FlG1C104A077	CAPACITOR	
C1047	FlG1C104A077	CAPACITOR	
C1048	FlG1C104A077	CAPACITOR	
C1049	FlG1C104A077	CAPACITOR	
C1050	FlG1C104A077	CAPACITOR	
C1051	ECJ2FF1A106Z	C 10UF, 10V	
C1053	FlG1C104A077	CAPACITOR	
C1055	FlG1C104A077	CAPACITOR	
C1057	FlG1C104A077	CAPACITOR	
C1060	FlG1C104A077	CAPACITOR	
C1063	FlG1C104A077	CAPACITOR	
C1066	FlG1C104A077	CAPACITOR	
C1067	FlG1C104A077	CAPACITOR	
C1068	FlG1C104A077	CAPACITOR	
C1069	FlG1C104A077	CAPACITOR	
C1072	FlG1A823A032	CAPACITOR	
C1073	FlG1C104A077	CAPACITOR	
C1075	FlG1C104A077	CAPACITOR	
C1076	FlG1C104A077	CAPACITOR	
C1077	FlG1C104A077	CAPACITOR	
C1078	FlG1C104A077	CAPACITOR	
C1079	FlG1C104A077	CAPACITOR	
C1080	FlG1C104A077	CAPACITOR	
C1081	FlG1C104A077	CAPACITOR	
C1082	FlG1C104A077	CAPACITOR	
C1083	FlG1C104A077	CAPACITOR	
C1084	FlG1C104A077	CAPACITOR	
C1086	FlG1C104A077	CAPACITOR	
C1087	F2G0J4700010	CAPACITOR	
C1088	FlG1C104A077	CAPACITOR	
C1089	ECJ2FF1A106Z	C 10UF, 10V	
C1090	FlG1H1020008	CAPACITOR	
C1092	ECJ2FF1A106Z	C 10UF, 10V	
C1093	ECJ1VC1H080C	CAPACITOR	
C1094	ECJ1VC1H080C	CAPACITOR	
C1095	ECJ2FF1A106Z	C 10UF, 10V	
C1096	ECJ2FF1A106Z	C 10UF, 10V	
C1099	ECJ2FF1A106Z	C 10UF, 10V	
C1100	ECJ2FF1A106Z	C 10UF, 10V	
C1101	ECJ2FF1A106Z	C 10UF, 10V	
C1102	FlG1C104A077	CAPACITOR	
C1103	FlG1C104A077	CAPACITOR	
C1104	FlG1C104A077	CAPACITOR	
C1105	FlG1C104A077	CAPACITOR	
C1106	FlG1C104A077	CAPACITOR	
C1107	FlG1C104A077	CAPACITOR	
C1108	FlG1C104A077	CAPACITOR	
C1109	F2G0J4700010	CAPACITOR	
C1110	ECJ2FF1A106Z	C 10UF, 10V	
C1111	FlG1C104A077	CAPACITOR	
C1112	FlG1H1020008	CAPACITOR	
C1113	FlG1H1020008	CAPACITOR	
C1114	ECJ1VF1A225Z	CAPACITOR	
C1116	ECJ2FF1A106Z	C 10UF, 10V	
C1118	FlG1C104A077	CAPACITOR	
C1119	FlG1C104A077	CAPACITOR	
C1120	ECJ1VF1A225Z	CAPACITOR	
C1121	FlG1C104A077	CAPACITOR	
C1123	ECJ1VF1A225Z	CAPACITOR	
C1124	FlG1C104A077	CAPACITOR	
C1125	F2G1C2200010	CAPACITOR	
C1126	FlG1C1030008	CAPACITOR	
C1127	ECJ1VF1A225Z	CAPACITOR	
C1128	FlG1C104A077	CAPACITOR	

Ref. No.	Part No.	Part Name & Description	Remarks
C1129	FlG1C104A077	CAPACITOR	
C1130	FlG1C104A077	CAPACITOR	
C1131	FlG1C104A077	CAPACITOR	
C1132	FlG1C104A077	CAPACITOR	
C1133	FlG1C104A077	CAPACITOR	
C1134	FlG1C104A077	CAPACITOR	
C1135	FlG1C104A077	CAPACITOR	
C1136	FlG1C104A077	CAPACITOR	
C1137	FlG1C104A077	CAPACITOR	
C1138	FlG1C104A077	CAPACITOR	
C1139	ECJ1VF1A225Z	CAPACITOR	
C1140	F1H1A1050029	CAPACITOR	
C1141	F1H1A1050029	CAPACITOR	
C1142	F1H1A1050029	CAPACITOR	
C1143	F1H1A1050029	CAPACITOR	
C1144	FlG1C104A077	CAPACITOR	
C1145	FlG1C104A077	CAPACITOR	
C1146	ECJ2FF1A106Z	C 10UF, 10V	
C1147	ECJ2FF1A106Z	C 10UF, 10V	
C1148	FlG1C104A077	CAPACITOR	
C1149	F1H1E105A126	CAPACITOR	
C1150	FlG1C104A077	CAPACITOR	
C1152	F2G1C2200010	CAPACITOR	
C1153	F1H1E105A126	CAPACITOR	
C1154	ECJ2FF1A106Z	C 10UF, 10V	
C1155	EEH8B0G101R	E 100UF, 4V	
C1156	F1H1E105A126	CAPACITOR	
C1157	FlG1C104A077	CAPACITOR	
C1158	FlG1C104A077	CAPACITOR	
C1159	FlG1C104A077	CAPACITOR	
C1160	FlG1C104A077	CAPACITOR	
C1161	FlG1C104A077	CAPACITOR	
C1162	FlG1C104A077	CAPACITOR	
C1163	FlG1C104A077	CAPACITOR	
C1164	FlG1C104A077	CAPACITOR	
C1165	ECJ1VC1H331J	CAPACITOR	
C1166	F1H1E105A126	CAPACITOR	
C1167	FlG1H1020008	CAPACITOR	
C1168	F1H1A1050029	CAPACITOR	
C1169	F1H1A1050029	CAPACITOR	
C1170	F1H1A1050029	CAPACITOR	
C1171	F1H1A1050029	CAPACITOR	
C1172	ECJ2FF1A106Z	C 10UF, 10V	
C1173	F2G1E3300010	CAPACITOR	
C1174	FlG1C104A077	CAPACITOR	
C1175	FlG1C104A077	CAPACITOR	
C1176	FlG1C104A077	CAPACITOR	
C1177	FlG1C104A077	CAPACITOR	
C1178	FlG1C104A077	CAPACITOR	
C1179	FlG1C104A077	CAPACITOR	
C1180	FlG1C104A077	CAPACITOR	
C1181	FlG1C104A077	CAPACITOR	
C1182	FlG1C104A077	CAPACITOR	
C1183	F1H1A1050029	CAPACITOR	
C1184	F1H1A1050029	CAPACITOR	
C1185	F1H1A1050029	CAPACITOR	
C1186	F1H1A1050029	CAPACITOR	
C1187	ECJ2FF1A106Z	C 10UF, 10V	
C1188	FlG1C104A077	CAPACITOR	
C1189	F2G1C2200010	CAPACITOR	
C1190	ECJ1VF1E104Z	C 0.1UF, Z, 25V	
C1191	F2G1C2200010	CAPACITOR	
C1192	ECJ1VF1E104Z	C 0.1UF, Z, 25V	
C1193	FlG1C104A077	CAPACITOR	
C1194	FlG1C104A077	CAPACITOR	
C1195	F2G1E3300010	CAPACITOR	
C1196	FlG1C104A077	CAPACITOR	
C1197	ECJ1VF1E104Z	C 0.1UF, Z, 25V	
C1198	ECJ1VF1E104Z	C 0.1UF, Z, 25V	
C1199	ECJ2FF1A106Z	C 10UF, 10V	
C1200	F1H1A1050029	CAPACITOR	
C1201	F1H1C105A008	CAPACITOR	
C1202	FlG1C104A077	CAPACITOR	

Ref. No.	Part No.	Part Name & Description	Remarks
C1203	F1H1C105A008	CAPACITOR	
C1204	ECJ1VC1H100C	C 10PF, 50V	
C1205	ECJ1VC1H100C	C 10PF, 50V	
C1206	EEEBB0G101R	E 100UF, 4V	
C1207	EEEBB0G101R	E 100UF, 4V	
C1208	F1H1E105A126	CAPACITOR	
C1209	F1G1C104A077	CAPACITOR	
C1210	F1H1E105A126	CAPACITOR	
C1211	F1G1C104A077	CAPACITOR	
C1212	F1G1C104A077	CAPACITOR	
C1214	F1G1H1020008	CAPACITOR	
C1215	EEEBB0G101R	E 100UF, 4V	
C1216	F1G1C104A077	CAPACITOR	
C1217	F1G1H1020008	CAPACITOR	
C1218	F1G1H1020008	CAPACITOR	
C1219	ECJ1VF1A225Z	CAPACITOR	
C1220	F1H1E105A126	CAPACITOR	
C1221	ECJ1VF1E104Z	C 0.1UF, Z, 25V	
C1222	F2G1E3300010	CAPACITOR	
C1223	ECJ1VF1E104Z	C 0.1UF, Z, 25V	
C1224	F2G1E3300010	CAPACITOR	
C1225	ECJ1VF1E104Z	C 0.1UF, Z, 25V	
C1226	F2G1E3300010	CAPACITOR	
C1227	F1G1C104A077	CAPACITOR	
C1228	F1G1C104A077	CAPACITOR	
C1229	F1H1C105A008	CAPACITOR	
C1230	F1H1C105A008	CAPACITOR	
C1231	F1H1C105A008	CAPACITOR	
C1232	F1H1C105A008	CAPACITOR	
C1233	F1H1C105A008	CAPACITOR	
C1234	ECJ1VF1E104Z	C 0.1UF, Z, 25V	
C1235	F1H1C105A008	CAPACITOR	
C1236	F1H1C105A008	CAPACITOR	
C1237	F1H1C105A008	CAPACITOR	
C1238	F1H1C105A008	CAPACITOR	
C1239	F1H1C105A008	CAPACITOR	
C1240	F1H1C105A008	CAPACITOR	
C1241	F1H1E105A126	CAPACITOR	
C1242	F1H1E105A126	CAPACITOR	
C1243	ECJ1VF1A225Z	CAPACITOR	
C1244	F1G1C104A077	CAPACITOR	
C1245	F1G1H1020008	CAPACITOR	
C1246	F1H1C105A008	CAPACITOR	
C1247	F1H1C105A008	CAPACITOR	
C1248	F1G1C104A077	CAPACITOR	
C1249	F1H1C105A008	CAPACITOR	
C1250	F1H1C105A008	CAPACITOR	
C1251	F1H1C105A008	CAPACITOR	
C1252	ECJ1VF1A225Z	CAPACITOR	
C1253	F1H1C105A008	CAPACITOR	
C1254	F1H1C105A008	CAPACITOR	
C1255	F1H1C105A008	CAPACITOR	
C1256	F1G1C104A077	CAPACITOR	
C1257	F1H1C105A008	CAPACITOR	
C1258	F2G1E4R70007	CAPACITOR	
C1259	EEEBB0G101R	E 100UF, 4V	
C1260	EEEBB0G101R	E 100UF, 4V	
C1261	F1G1C104A077	CAPACITOR	
C1262	F1G1C104A077	CAPACITOR	
C1263	F1G1H1020008	CAPACITOR	
C1264	F1G1H1020008	CAPACITOR	
C1265	F1H1C105A008	CAPACITOR	
C1266	F1H1E105A126	CAPACITOR	
C1267	F1H1E105A126	CAPACITOR	
C1268	F1H1E105A126	CAPACITOR	
C1269	F1G1C104A077	CAPACITOR	
C1270	ECJ2FF1A106Z	C 10UF, 10V	
C1271	F1G1C104A077	CAPACITOR	
C1272	F1G1C104A077	CAPACITOR	
C1273	F1G1C104A077	CAPACITOR	
C1274	F1G1C104A077	CAPACITOR	
C1275	F1G1C104A077	CAPACITOR	
C1276	F1G1C104A077	CAPACITOR	

Ref. No.	Part No.	Part Name & Description	Remarks
C1277	F1G1C104A077	CAPACITOR	
C1278	F1G1C104A077	CAPACITOR	
C1279	F1G1C104A077	CAPACITOR	
C1280	F1G1C104A077	CAPACITOR	
C1281	ECJ2FF1A106Z	C 10UF, 10V	
C1282	ECJ2FF1A106Z	C 10UF, 10V	
C1283	F1G1C104A077	CAPACITOR	
C1284	F1G1C104A077	CAPACITOR	
C1285	F1G1C104A077	CAPACITOR	
C1286	F1G1C104A077	CAPACITOR	
C1287	F1G1C104A077	CAPACITOR	
C1288	F1G1C104A077	CAPACITOR	
C1289	F1G1C104A077	CAPACITOR	
C1290	ECJ1VF1E104Z	C 0.1UF, Z, 25V	
C1291	F1G1C104A077	CAPACITOR	
C1292	F1G1C104A077	CAPACITOR	
C1293	F1G1C104A077	CAPACITOR	
C1294	F1G1C104A077	CAPACITOR	
C1295	F1G1C104A077	CAPACITOR	
C1296	F1G1C104A077	CAPACITOR	
C1297	F1G1C104A077	CAPACITOR	
C1298	F1G1C104A077	CAPACITOR	
C1299	F1G1C104A077	CAPACITOR	
C1300	F1G1C104A077	CAPACITOR	
C1301	F1G1C104A077	CAPACITOR	
C1302	F1G1C104A077	CAPACITOR	
C1303	F1G1C104A077	CAPACITOR	
C1304	F1G1C104A077	CAPACITOR	
C1305	F1G1C104A077	CAPACITOR	
C1306	F1G1C104A077	CAPACITOR	
C1307	F1G1C104A077	CAPACITOR	
C1308	F1G1C104A077	CAPACITOR	
C1309	F1G1C104A077	CAPACITOR	
C1310	F1G1C104A077	CAPACITOR	
C1311	F1G1C104A077	CAPACITOR	
C1312	F1G1C104A077	CAPACITOR	
C1313	F1G1C104A077	CAPACITOR	
C1314	F1G1C104A077	CAPACITOR	
C1315	F1G1C104A077	CAPACITOR	
C1316	F1G1C104A077	CAPACITOR	
C1317	F1G1C104A077	CAPACITOR	
C1318	F1G1C104A077	CAPACITOR	
C1319	F1G1C104A077	CAPACITOR	
C1320	F1G1C104A077	CAPACITOR	
C1321	F1G1C104A077	CAPACITOR	
C1322	F1G1C104A077	CAPACITOR	
C1323	F1G1C104A077	CAPACITOR	
C1324	F1G1C104A077	CAPACITOR	
C1325	F1G1C104A077	CAPACITOR	
C1326	F1G1C104A077	CAPACITOR	
C1327	F1G1C104A077	CAPACITOR	
C1328	F2G1E3300010	CAPACITOR	
C1329	F1H1C105A008	CAPACITOR	
C1330	ECJ1VB1H152K	CAPACITOR	
C1331	F1H1A1050029	CAPACITOR	
C1332	F1G1C104A077	CAPACITOR	
C1333	ECJ1VC1H221J	CAPACITOR	
C1334	F2G0J4700010	CAPACITOR	
C1335	ECJ1VF1C474Z	CAPACITOR	
C1336	ECJ1VF1C474Z	CAPACITOR	
C1337	F1H1C105A008	CAPACITOR	
C1338	F1H1C105A008	CAPACITOR	
C1339	F1H1C105A008	CAPACITOR	
C1340	F1H1C105A008	CAPACITOR	
C1341	F1H1C105A008	CAPACITOR	
C1342	F1H1C105A008	CAPACITOR	
C1343	ECJ1VB1H472K	C 4700PF, K, 50V	
C1344	ECJ2VB1C224K	CAPACITOR	
C1345	ECJ2VB1C224K	CAPACITOR	
C1346	F1H1H8210002	CAPACITOR	
C1347	ECJ1VB1H332K	CAPACITOR	
C1352	ECJ2FF1A106Z	C 10UF, 10V	
C1353	ECJ1VF1E104Z	C 0.1UF, Z, 25V	

Ref. No.	Part No.	Part Name & Description	Remarks
C1354	F1G1C104A077	CAPACITOR	
C1356	F1G1C104A077	CAPACITOR	
C1357	F1G1C104A077	CAPACITOR	
C1358	F2G1E4R70007	CAPACITOR	
C1360	F2G1A3300007	CAPACITOR	
C1361	EEHB0G101R	E 100UF, 4V	
C1362	EEHB0G101R	E 100UF, 4V	
C1364	F1G1C104A077	CAPACITOR	
C1366	F1G1C104A077	CAPACITOR	
C1367	ECJ2FF1C475Z	CAPACITOR	
C1368	F1G1C104A077	CAPACITOR	
C1369	F1G1C104A077	CAPACITOR	
C1370	F1G1C104A077	CAPACITOR	
C1371	F1G1C104A077	CAPACITOR	
C1372	F1G1C104A077	CAPACITOR	
C1373	EEFCD0D101R	CAPACITOR	
C1374	F1G1C104A077	CAPACITOR	
C1375	F1G1C104A077	CAPACITOR	
C1376	F1G1C104A077	CAPACITOR	
C1377	F1G1C104A077	CAPACITOR	
C1378	F1H1H333A220	CAPACITOR	
C1379	F1G1C104A077	CAPACITOR	
C1380	F1G1C104A077	CAPACITOR	
C1381	F1G1C104A077	CAPACITOR	
C1382	F1G1C104A077	CAPACITOR	
C1383	F1G1C104A077	CAPACITOR	
C1384	F1G1C104A077	CAPACITOR	
C1385	F1G1H1020008	CAPACITOR	
C1386	F1G1C104A077	CAPACITOR	
C1387	F1G1C104A077	CAPACITOR	
C1388	F1G1C104A077	CAPACITOR	
C1389	F1G1C104A077	CAPACITOR	
C1390	F1G1C104A077	CAPACITOR	
C1391	F1G1C104A077	CAPACITOR	
C1392	F1G1C104A077	CAPACITOR	
C1393	F1G1C104A077	CAPACITOR	
C1394	F1G1C104A077	CAPACITOR	
C1395	F1G1C104A077	CAPACITOR	
C1396	F1G1C104A077	CAPACITOR	
C1398	F1H1A1050029	CAPACITOR	
C1399	F1G1C104A077	CAPACITOR	
C1400	F1G1C104A077	CAPACITOR	
C1401	F1G1C104A077	CAPACITOR	
C1402	F1G1C104A077	CAPACITOR	
C1403	F1G1C104A077	CAPACITOR	
C1404	F1G1C104A077	CAPACITOR	
C1405	F1G1C104A077	CAPACITOR	
C1406	F1G1C104A077	CAPACITOR	
C1407	F1G1C104A077	CAPACITOR	
C1408	F1G1C104A077	CAPACITOR	
C1409	F1G1C104A077	CAPACITOR	
C1410	F1G1C104A077	CAPACITOR	
C1411	F1G1C104A077	CAPACITOR	
C1414	EEHB0G101R	E 100UF, 4V	
C1415	F1G1C104A077	CAPACITOR	
C1417	ECJ1VF1A225Z	CAPACITOR	
C1419	F1G1H1020008	CAPACITOR	
C1420	F1G1H1020008	CAPACITOR	
C1421	F1G1C104A077	CAPACITOR	
C1426	F1G1C104A077	CAPACITOR	
C1427	ECJ1VF1E104Z	C 0.1UF, Z, 25V	
C1428	ECJ1VF1E104Z	C 0.1UF, Z, 25V	
C1429	ECJ1VF1A225Z	CAPACITOR	
C1431	ECJ1VF1E104Z	C 0.1UF, Z, 25V	
C1432	F1G1C104A077	CAPACITOR	
C1433	F1G1C104A077	CAPACITOR	
C1434	F1G1C104A077	CAPACITOR	
C1435	ECJ0EB1H471K	CAPACITOR	
C1436	ECJ1VF1A225Z	CAPACITOR	
C1437	ECJ1VF1A225Z	CAPACITOR	
C1438	F1G1H1020008	CAPACITOR	
C1439	F1G1H1020008	CAPACITOR	
C1440	ECJ2FF1A475Z	CAPACITOR	

Ref. No.	Part No.	Part Name & Description	Remarks
C1441	F1H1A1050029	CAPACITOR	
C1442	F1H1A1050029	CAPACITOR	
C1443	ECJ1VF1A225Z	CAPACITOR	
C1444	F1G1C104A077	CAPACITOR	
C1445	F1G1H1020008	CAPACITOR	
C1446	ECJ1VF1A225Z	CAPACITOR	
C1447	F1G1C104A077	CAPACITOR	
C1448	F1G1C104A077	CAPACITOR	
C1449	F1G1C104A077	CAPACITOR	
C1450	F1G1C104A077	CAPACITOR	
C1451	F1G1C104A077	CAPACITOR	
C1452	F1G1C104A077	CAPACITOR	
C1453	F1G1C104A077	CAPACITOR	
C1454	F1G1C104A077	CAPACITOR	
C1455	F1G1C104A077	CAPACITOR	
C1456	F1G1C104A077	CAPACITOR	
C1457	F1G1C104A077	CAPACITOR	
C1458	F1G1C104A077	CAPACITOR	
C1459	F1G1C104A077	CAPACITOR	
C1460	F1G1C104A077	CAPACITOR	
C1461	F1G1C104A077	CAPACITOR	
C1462	F1G1C104A077	CAPACITOR	
C1463	F1G1C104A077	CAPACITOR	
C1464	F1G1C104A077	CAPACITOR	
C1465	F2G0J4700010	CAPACITOR	
C1466	F1G1C104A077	CAPACITOR	
C1467	F2G0J4700010	CAPACITOR	
C1468	F1G1C104A077	CAPACITOR	
C1469	F1G1C104A077	CAPACITOR	
C1470	F1G1C104A077	CAPACITOR	
C1471	F1G1C104A077	CAPACITOR	
C1472	F1G1C104A077	CAPACITOR	
C1473	F1G1C104A077	CAPACITOR	
C1474	F1G1C104A077	CAPACITOR	
C1475	F1G1C104A077	CAPACITOR	
C1476	F1G1C104A077	CAPACITOR	
C1477	F1G1C104A077	CAPACITOR	
C1478	F1G1C104A077	CAPACITOR	
C1479	F1G1C104A077	CAPACITOR	
C1480	F1G1C104A077	CAPACITOR	
C1481	F1G1C104A077	CAPACITOR	
C1482	F1G1C104A077	CAPACITOR	
C1483	F1G1C104A077	CAPACITOR	
C1484	F1G1C104A077	CAPACITOR	
C1485	F1G1C104A077	CAPACITOR	
C1486	F1G1C104A077	CAPACITOR	
C1487	ECJ2FF1A475Z	CAPACITOR	
C1488	F1H1C105A008	CAPACITOR	
C1489	F1H1C105A008	CAPACITOR	
C1490	F1H1C105A008	CAPACITOR	
C1491	F1H1A1050029	CAPACITOR	
C1492	F1H1A1050029	CAPACITOR	
C1493	F1G1C104A077	CAPACITOR	
C1494	F1G1C104A077	CAPACITOR	
C1495	F1G1C104A077	CAPACITOR	
C1496	F1G1C104A077	CAPACITOR	
C1497	F1G1C104A077	CAPACITOR	
C1498	F1G1C104A077	CAPACITOR	
C1500	F1G1C104A077	CAPACITOR	
C1502	ECJ0EB1H102K	C 1000PF, 50V	
C1503	F1H1C105A008	CAPACITOR	
C1504	F1G1C104A077	CAPACITOR	
C1505	F1G1C104A077	CAPACITOR	
C1506	F1G1C104A077	CAPACITOR	
C1507	F1G1C104A077	CAPACITOR	
C1508	F1G1C104A077	CAPACITOR	
C1509	F1G1C104A077	CAPACITOR	
C1510	F1G1C104A077	CAPACITOR	
C1511	F1G1C104A077	CAPACITOR	
C1512	F1G1C104A077	CAPACITOR	
C1513	F1G1C104A077	CAPACITOR	
C1514	F1G1C104A077	CAPACITOR	
C1515	F1H1C105A008	CAPACITOR	

Ref. No.	Part No.	Part Name & Description	Remarks
C1516	F1H1C105A008	CAPACITOR	
C1517	F1H1C105A008	CAPACITOR	
C1518	F1H1C105A008	CAPACITOR	
C1519	F1H1C105A008	CAPACITOR	
C1520	F1H1C105A008	CAPACITOR	
C1521	F1H1C105A008	CAPACITOR	
C1522	F1H1C105A008	CAPACITOR	
C1523	F1H1C105A008	CAPACITOR	
C1524	F1H1C105A008	CAPACITOR	
C1525	F1H1C105A008	CAPACITOR	
C1526	F1H1C105A008	CAPACITOR	
C1527	F1H1C105A008	CAPACITOR	
C1528	F1H1C105A008	CAPACITOR	
C1529	F1H1C105A008	CAPACITOR	
C1530	F1H1C105A008	CAPACITOR	
C1531	F1H1C105A008	CAPACITOR	
C1532	F1H1C105A008	CAPACITOR	
C1533	F1H1C105A008	CAPACITOR	
C1534	ECJ0EB1H471K	CAPACITOR	
C1535	F1H1C105A008	CAPACITOR	
C1536	F1H1C105A008	CAPACITOR	
C1537	F1H1C105A008	CAPACITOR	
C1538	F1H1C105A008	CAPACITOR	
C1539	F1H1C105A008	CAPACITOR	
C1540	F1H1C105A008	CAPACITOR	
C1541	F1G1C104A077	CAPACITOR	
C1542	F1G1C104A077	CAPACITOR	
C1543	F1G1C104A077	CAPACITOR	
C1544	F1G1C104A077	CAPACITOR	
C1545	F1G1C104A077	CAPACITOR	
C1546	F1G1C104A077	CAPACITOR	
C1547	F1G1C104A077	CAPACITOR	
C1548	F1G1C104A077	CAPACITOR	
C1549	F1G1C104A077	CAPACITOR	
C1550	F1G1C104A077	CAPACITOR	
C1551	F1G1C104A077	CAPACITOR	
C1552	F1G1C104A077	CAPACITOR	
C1553	F1G1C104A077	CAPACITOR	
C1554	F1G1C104A077	CAPACITOR	
C1555	F1G1C104A077	CAPACITOR	
C1556	F1G1C104A077	CAPACITOR	
C1557	F2G0J3300014	CAPACITOR	
C1558	F1G1C104A077	CAPACITOR	
C1559	F1G1H1020008	CAPACITOR	
C1560	ECJ2FF1A106Z	C 10UF, 10V	
C1561	F1G1H1020008	CAPACITOR	
C1562	ECJ2FF1A106Z	C 10UF, 10V	
C1563	F1G1C104A077	CAPACITOR	
C1564	F1G1C104A077	CAPACITOR	
C1565	F1G1C1030008	CAPACITOR	
C1566	F1H1C105A008	CAPACITOR	
C1567	F1H1C105A008	CAPACITOR	
C1568	F1H1C105A008	CAPACITOR	
C1569	F1H1C105A008	CAPACITOR	
C1570	F1H1C105A008	CAPACITOR	
C1571	F1H1C105A008	CAPACITOR	
C1572	F1H1C105A008	CAPACITOR	
C1573	F1H1C105A008	CAPACITOR	
C1574	F1H1C105A008	CAPACITOR	
C1575	F1H1C105A008	CAPACITOR	
C1576	F1H1C105A008	CAPACITOR	
C1577	F1H1C105A008	CAPACITOR	
C1578	F1H1C105A008	CAPACITOR	
C1579	F1H1C105A008	CAPACITOR	
C2022	F1G1C104A077	CAPACITOR	
C2024	F1G1C104A077	CAPACITOR	
C2025	ECJ2FF1A106Z	C 10UF, 10V	
C2026	ECJ2FF1A106Z	C 10UF, 10V	
C9101	ECQU2A104MLA	CAPACITOR	△
C9102	F1BAH1020016	CAPACITOR	△
C9103	F1BAH1020016	CAPACITOR	△
C9201	ECQU2A473MLA	CAPACITOR	△
C9603	F0CZZ4740003	CAPACITOR (B-PCB)	
C9610	F0C2E1050008	CAPACITOR (B-PCB)	

Ref. No.	Part No.	Part Name & Description	Remarks
C9617	F0C3C4720003	CAPACITOR	
C9618	F0C2J1540007	CAPACITOR (B-PCB)	
C9619	F0C2J1540007	CAPACITOR (B-PCB)	
		[OTHERS]	
A1	K1MY84BA0200	36P CONNECTOR	
A2	K1MY84BA0200	36P CONNECTOR	
A3	K1MY84BA0200	36P CONNECTOR	
A4	K1KA05BA0086	5P CONNECTOR	
A6	K1KA15BA0051	15P CONNECTOR	
A7	K1KA02BA0047	2P CONNECTOR	
A8	K1KA06BA0086	2P CONNECTOR	
A9	K1KA09BA0086	3P CONNECTOR	
A10	K1KA03BA0086	3P CONNECTOR	
A11	K1KA02BA0047	2P CONNECTOR	
A12	K1KA07BA0086	3P CONNECTOR	
A15	K1KA03BA0086	3P CONNECTOR	
A16	K1KA03BA0047	3P CONNECTOR	
A17	K1KA03BA0047	3P CONNECTOR	
A18	K1KA03BA0047	3P CONNECTOR	
A23	K1KA09BA0086	3P CONNECTOR	
A25	K1KA03BA0047	3P CONNECTOR	
H1	K1KA09AA0200	CONNECTOR	
H2	K1MY06BA0007	CONNECTOR	
K1	K1KA02A00626	CONNECTOR	△
K2	K1KA04A00633	CONNECTOR	△
M1	K1KA02BA0014	CONNECTOR	
M2	K1KA02BA0014	CONNECTOR	
R1	K1KA03BA0014	3P CONNECTOR	
V1	K1KA06BA0086	CONNECTOR	
CF2002	D4CC1103A037	THERMISTOR	
CF2003	D4CC1103A037	THERMISTOR	
F9101-1	K3GE1ZA00010	FUSE HOLDER	
F9101-2	K3GE1ZA00010	FUSE HOLDER	
F9101	K5D502BNA005	FUSE	△
HE2201	B4ABA0000009	HALL DEVICE	
LF9101	G0B692J00001	LINE CHOKE	△
LF9102	G0B692J00001	LINE CHOKE	△
RM2001	B3RAD0000083	REMOTE RECEIVER PLATE	
S9602	A9BZ00000013	SPARKGAP (B-PCB)	
JK1001	K1CB205B0007	S-VIDEO/VIDEO IN TERMINAL	
JK1002	K2HA304B0010	YPBPR1-IN TERMINAL	
JK1003	K2HA304B0010	YPBPR2-IN TERMINAL	
JK1005	K1FB115B0102	RGB IN 1 TERMINAL (15PIN)	
JK1006	K1FA119E0004	HDMI IN TERMINAL	
JK1007	K1FA119E0004	HDMI IN TERMINAL	
JK1008	K1FA119E0004	HDMI IN TERMINAL	
JK1009	K1FB109B0070	RS232C I/F TERMINAL (9PIN)	
JK9101	TXAWC01QEXZ	AC INLET ASSY	△
JS1004	ERJ6GEY0R00	M 0 OHM, J, 1/10W	
JS1005	ERJ6GEY0R00	M 0 OHM, J, 1/10W	
JS1006	ERJ6GEY0R00	M 0 OHM, J, 1/10W	
JS1007	ERJ6GEY0R00	M 0 OHM, J, 1/10W	
JS1012	ERJ6GEY0R00	M 0 OHM, J, 1/10W	
JS1013	ERJ6GEY0R00	M 0 OHM, J, 1/10W	
JS1020	ERJ6GEY0R00	M 0 OHM, J, 1/10W	
JS1021	ERJ6GEY0R00	M 0 OHM, J, 1/10W	
JS1022	ERJ6GEY0R00	M 0 OHM, J, 1/10W	
JS1023	ERJ6GEY0R00	M 0 OHM, J, 1/10W	
JS1024	ERJ6GEY0R00	M 0 OHM, J, 1/10W	
SW2001	EVQPLHA15	SWITCH	
SW2002	EVQPLHA15	SWITCH	
SW2003	EVQPLHA15	SWITCH	
SW2004	EVQPLHA15	SWITCH	
SW2005	EVQPLHA15	SWITCH	
SW2006	EVQPLHA15	SWITCH	
SW2007	EVQPLHA15	SWITCH	
SW2008	EVQPLHA15	SWITCH	
SW2009	EVQPLHA15	SWITCH	
SW2010	EVQPLHA15	SWITCH	
SW2011	EVQPLHA15	SWITCH	
SW2012	EVQPLHA15	SWITCH	

Ref. No.	Part No.	Part Name & Description	Remarks
SW2013	EVQPLHA15	SWITCH	
SW9101	K0AAKA000016	SWITCH	△
T9604	G4FYA0000005	TRANS (B-PCB)	△
X1002	H0J350500001	CRYSTAL	
X1005	H0J829400001	CRYSTAL	
ZA2031	K4CD01000011	TERMINAL	
ZA9103	K4CZ01000063	LUG TERMINAL	
RTL	TXANP01VKF5	CIRCUIT BOARD (A)	△
RTL	TNPA4093	CIRCUIT BOARD (S)	△
RTL	TNPA4094	CIRCUIT BOARD (H)	△
RTL	TNPA4095	CIRCUIT BOARD (R)	△
RTL	TNPA4098	CIRCUIT BOARD (V)	△
RTL	TNPA4107	CIRCUIT BOARD (M1)	△
RTL	TNPA4198	CIRCUIT BOARD (M2)	△
RTL	TXANP07QMCZ	CIRCUIT BOARD (K)	△
	ETX1MM686MB	CIRCUIT BOARD (P)	△
	TXANP03VKF5	BALLAST UNIT ASSY	△